

Grease Jockey® Pump Refill Instructions

SCOPE


All Grease Jockey grease pumps used in automatic lubrication systems.


TOOLS

Hand pump for 5 gal pail, part number 563569 (550-000-020), includes female coupler. Female Coupler, part number 557877 (550-050-230) available separately for shop pumps.

BACKGROUND

All Grease Jockey pumps (air or electric) have a male coupler located on the front of the pump. The pumps are shipped with a yellow dust cap attached as shown.

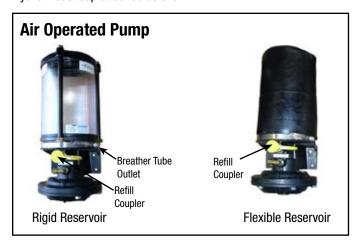

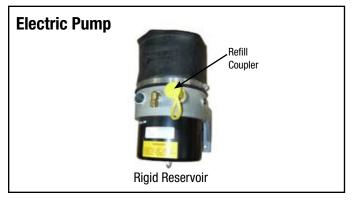

METHOD

Connect the female coupler attached to a suitable grease supply pump to the male coupler of the Grease jockey pump. If a shop air pump is used, ensure it is not set at high pressure output. Output pressure should not exceed 100 psi. Fill reservoir with grease slowly.

In rigid reservoir pumps, monitor the level during the fill process. Stop approximately one (1) inch from the top of the reservoir tube. Over filling will result in grease flowing from the overflow hole on the underside of the reservoir creating a mess.

In flexible reservoirs, the rubber bag will expand as grease enters. Bag should not 'balloon' out. Overfilling this style reservoir can cause the bag to disengage from the clamp or tear and cause a greater mess.

Should the pump be accidentally overfilled, follow the next procedure to reduce the grease in the reservoir:

- Disconnect the main line from the pump or at the first module.
- Cycle pump with the timer on 'test' for a few minutes until the level of grease is acceptable. Be sure to capture grease.
- In rigid reservoir, clean breather tube of residual grease.
- Return timer to original setting and reconnect main line.

NOTE: All pumps should be refilled with only "00" grease. See documents L30050 or L00002 for more information on grease selection.

All written and visual data contained in this document are based on the latest product information available at the time of publication. Graco reserves the right to make changes at any time without notice.

Contact us today!

To receive product information or talk with a Graco representative, call **800-533-9655** or visit us online at **www.graco.com**.

