

Sensor Kit

3A6915A

EN

Sensor kit for sensing radial piston air motor speed. For professional use only.




Important Safety Instructions

Read all warnings and instructions in this manual and in your agitator manual before using this equipment. Save all instructions.

Related Manuals

3A4792	Air-Driven Agitators
3A4797	Stainless Steel, Air-Driven Agitators with Pressure Tank
3A4800	Twistork® Helix Agitator

Kit 25C373, Sensor Kit

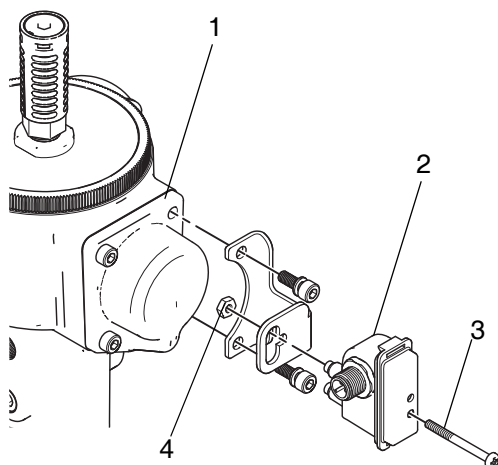

ti36646a

Ref.	Part No.	Description	Qty
1	17S511	BRACKET, motor sensor	1
2	24A032	SWITCH, reed	1
3	117683	SCREW, mach	1
4	100072	NUT, hex	1

Installation

Installing the Bracket on the Motor

1. Follow the **Pressure Relief Procedure** in your Agitator Manual.
2. Shut off the motor before installing the bracket.
3. Remove the two screws from the motor as shown.
4. Securely mount the bracket/reed switch assembly with the two screws. Do not over tighten the screws to prevent stripping the threads in the motor housing.

NOTE: The bracket can be mounted on either side.

GRACO INC. AND SUBSIDIARIES • P.O. BOX 1441 • MINNEAPOLIS MN 55440-1441 • USA

Copyright 2019, Graco Inc. All Graco manufacturing locations are registered to ISO 9001.

3A6915, Revision A, June 2019