

NXT[®] Air Motor Seal Kits

406753D

EN

Kit 24A539 - For MM02LN0

Kit 24A543 - For M04LN0 and M04LT0

Kit 24E986 - For M07LN0 and M07LT0

Kit 24A547 - For M12LN0 and M12LT0

Kit 24A551 - For M18LN0 and M18LT0

Kit 2006910 - For 2006735




Important Safety Instructions

Read all warnings and instructions in this manual before using the equipment. Be familiar with the proper control and usage of the equipment. Save these instructions.

Parts

Ref.	Description	Qty
1	U-CUP	1
2	RING, retaining*	1
3	O-RING, piston	1
4	O-RING, covers	2
5	GASKET, manifold	
6	GASKET, air valve	1
7	U-CUP with flange	1

* Not shown. Retaining ring in lower cover does not

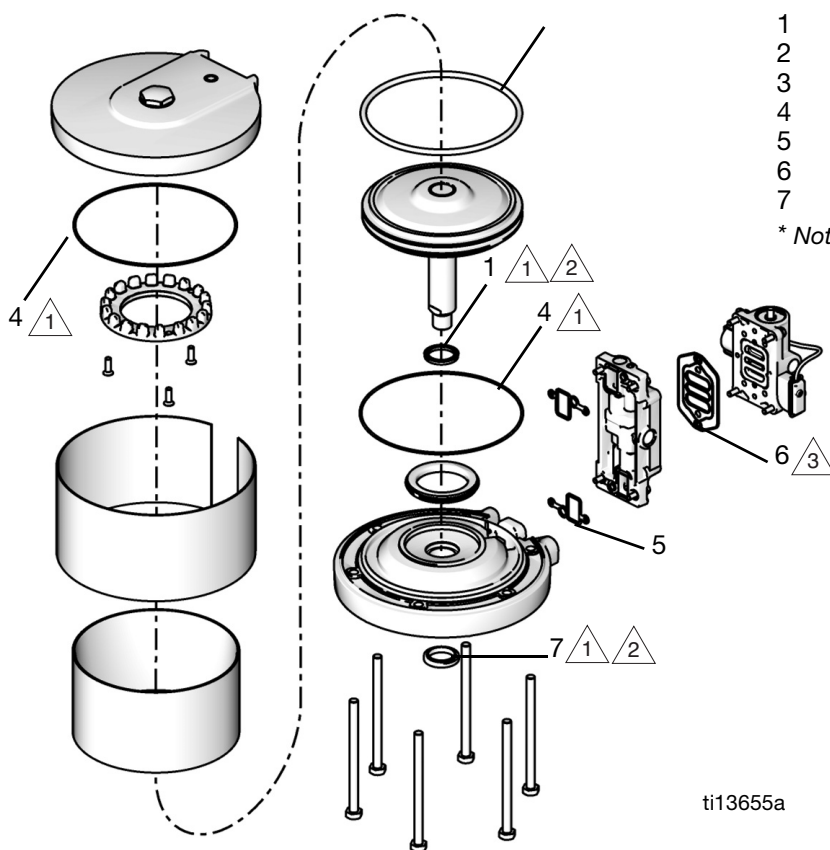

1 Apply lubricant.

2 U-cup faces up. Flange (bottom seal only) faces down.

3 Always install a new gasket (6) when installing a new air valve.

ti13655a

Recycling and Disposal

End of Product Life

At the end of a product's useful life, recycle it in a responsible manner.

California Proposition 65

CALIFORNIA RESIDENTS

 **WARNING:** Cancer and reproductive harm – www.P65warnings.ca.gov.

Graco Information

For the latest information about Graco products, visit www.graco.com.

For patent information, see www.graco.com/patents.

TO PLACE AN ORDER, contact your Graco distributor or call to identify the nearest distributor.

Phone: 612-623-6928 or **Toll Free:** 1-800-533-9655, **Fax:** 612-378-3590

*All written and visual data contained in this document reflects the latest product information available at the time of publication.
Graco reserves the right to make changes at any time without notice.*

Original instructions. This manual contains English. MM 406753

Graco Headquarters: Minneapolis

International Offices: Belgium, China, Japan, Korea

GRACO INC. AND SUBSIDIARIES • P.O. BOX 1441 • MINNEAPOLIS MN 55440-1441 • USA
Copyright 2009, Graco Inc. All Graco manufacturing locations are registered to ISO 9001.

www.graco.com
Revision D, June 2024