

Assembly

NOTE: Apply lithium-based grease whenever instructed to grease.

1. Use all parts in the repair kits, as applicable to your pump. Clean other parts and inspect for damage. Replace as needed.
2. Grease the detent cam (204) and install into housing.
3. Grease the u-cups (208) and install on the piston with lips facing toward the center of the piston.
4. Grease both ends of the piston (202) and install it in the housing, with the flat side toward the cup (213). Be careful not to tear u-cups (208) when sliding piston into housing.
5. Grease new o-rings (206) and install on the end caps. Install the end caps into the housing.
6. Install a retaining ring on each end to hold end caps in place.
7. Grease and install the detent assembly (203) into the piston. Install the o-ring (214) on the cup (213). Apply a light film of grease to the outside surface of the o-ring and the inside mating surface of the base (212). Install the cup (213) on the base (212). Install the spring (211) onto protrusion on the cup. Install the cup assembly. Align the small round magnet in the base with the air inlet.
8. Grease the cup side and install the valve plate (205). Align the small hole in the plate with the air inlet. Tighten the screws (209) to hold it in place.