

# Dura-Flo™ 2400 Displacement Pump Packing Kit 253745

406920B

EN

*For replacing packing components for the Dura-Flo 2400 displacement pump. For professional use only.*

## Kit 253745




### Important Safety Instructions

 






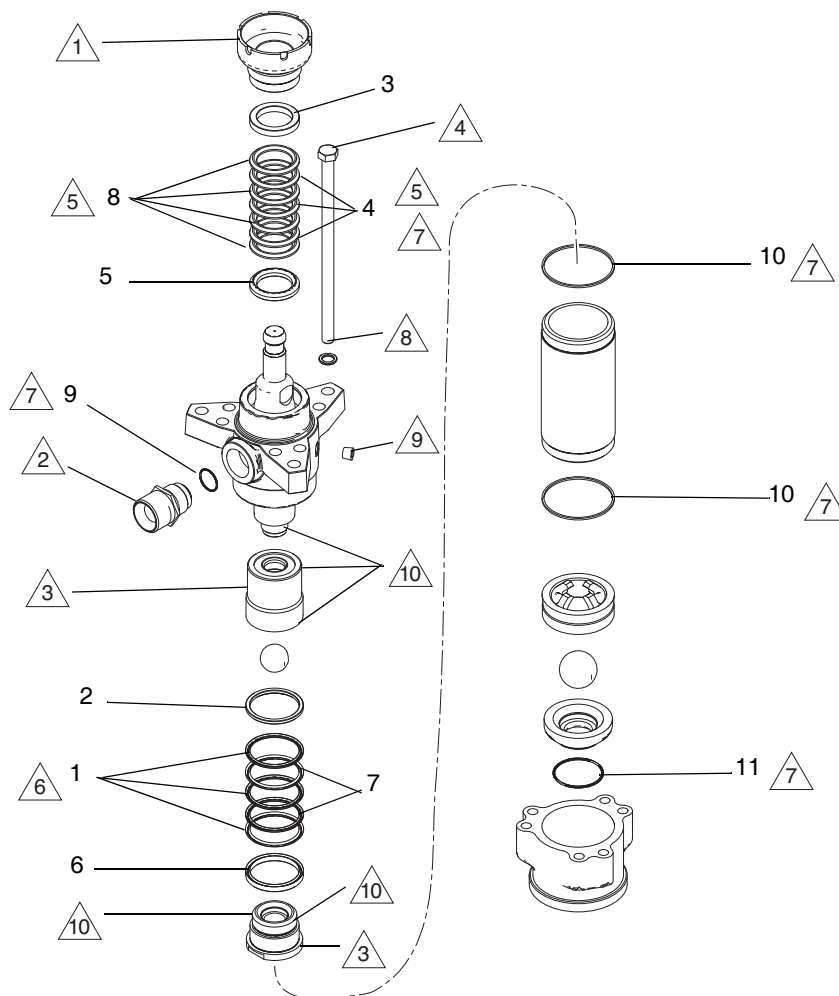


Read all warnings and instructions in this manual and in Dura-Flo Lower manual before using the equipment. Save all instructions.

## Related Manuals

Manual in English	Description
311825	Dura-Flo 1800 and 2400 Lowers

# Parts



	Torque to 50-55 ft-lb (70-75 N•m).		Lips of v-packings must face up.	<b>Ref.</b>	<b>Part</b>	<b>Description</b>	<b>Qty.</b>
	Torque to 115-126 ft-lb (156-171 N•m).		Lubricate.	1	109262	PACKING, vee, UHMWPE	3
	Torque to 338-354 ft-lb (459-481 N•m)		Apply thread lubricant.	2	184232	GLAND, packing, male	1
	Torque to 180-195 ft-lb (224-264 N•m).		Apply sealant.	3	184181	GLAND, packing, female	1
	Lips of v-packings must face down.		Apply anti-seize lubricant to threads and mating surfaces.	4	109261	PACKING, vee, UHMWPE	3
				5	184231	GLAND, packing male	1
				6	184182	GLAND, packing, female	1
				7	120533	PACKING, vee, UHMWPE	2
				8	184311	PACKING, vee, leather	4
				9	109213	PACKING, o-ring	1
				10	184072	SEAL, acetal	2
				11	102857	PACKING, o-ring	1

All written and visual data contained in this document reflects the latest product information available at the time of publication.  
Graco reserves the right to make changes at any time without notice.

Original instructions. This manual contains English. MM 406920

**Graco Headquarters:** Minneapolis

**International Offices:** Belgium, China, Japan, Korea

**GRACO INC. AND SUBSIDIARIES • P.O. BOX 1441 • MINNEAPOLIS MN 55440-1441 • USA**  
Copyright 2019, Graco Inc. All Graco manufacturing locations are registered to ISO 9001.

www.graco.com  
Revision A, October 2019