

# Dispensit 710

332094C

EN

***Depending on valve configuration, this valve can be used to dispense the following:  
Acrylics, Conformal Coatings, Epoxies, Lubricants, RTV Silicones, Silicone Oils, Solder  
Flux, Solder Mask, UV Curables***

## Dispense Valve


*100psi (0.69 MPa, 6.9 bar) Maximum Air Working Pressure*

*1200psi (82.7 bar) Maximum Material Inlet Pressure*



### Important Safety Instructions

Read all warnings and instructions in this manual.  
Save these instructions.

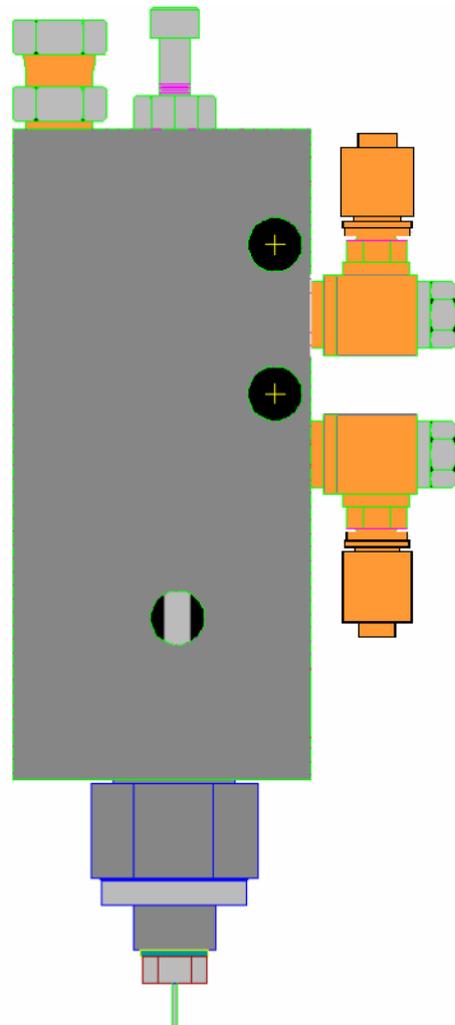

# Contents

|                                       |           |   |           |
|---------------------------------------|-----------|---|-----------|
| <b>710 Valve Models</b> .....         | <b>2</b>  | <b>Periodic Maintenance</b> .....                           | <b>13</b> |
| <b>Warnings</b> .....                 | <b>3</b>  | Pressure Relief Procedure .....                             | 13        |
| <b>General Information</b> .....      | <b>5</b>  | Dispense Needle Replacement .....                           | 13        |
| <b>Safety Information</b> .....       | <b>5</b>  | Disassembly .....   | 13        |
| <b>Illustration References</b> .....  | <b>5</b>  | Model 710 General Illustration .....                        | 14        |
| <b>General Accessories</b> .....      | <b>5</b>  | Assembly .....  | 15        |
| <b>Setup</b> .....                    | <b>6</b>  | <b>Troubleshooting</b> .....                                | <b>16</b> |
| <b>Description of Operation</b> ..... | <b>9</b>  | Nothing Happens .....                                       | 16        |
| <b>Setup Procedure</b> .....          | <b>10</b> | Valve Cycles, Nothing Dispensed .....                       | 16        |
| Mounting Dispense Valve .....         | 10        | Irregular Volume Dispensed .....                            | 16        |
| Air Controller .....                  | 10        | Reduced Volumes Dispensed .....                             | 16        |
| <b>Operating Procedures</b> .....     | <b>11</b> | No Material Dispensed .....                                 | 16        |
| Dry System Checkout .....             | 11        | Material Continues to Flow After Shut Off .....             | 16        |
| Material Loading .....                | 11        | <b>Parts</b> .....  | <b>17</b> |
| Wet System Checkout .....             | 11        | <b>Model 710 Recommended Spare Parts</b> .....              | <b>19</b> |
| Operation Adjustments .....           | 12        | <b>General Guidelines for O-Rings and U-Cup Seals</b> ..... | <b>20</b> |
|                                       |           | O-Ring Guidelines .....                                     | 20        |
|                                       |           | U-Cup Seal Guidelines .....                                 | 20        |
|                                       |           | <b>Technical Data</b> .....                                 | <b>21</b> |
|                                       |           | <b>Graco Standard Warranty</b> .....                        | <b>22</b> |
|                                       |           | <b>Graco Information</b> .....                              | <b>22</b> |

## 710 Valve Models

| 710 Valves |                                    |   |
|------------|------------------------------------|---|
| Part No.   | Configuration                      | Description   |
| A9A01019   | VALVE, 710, REMOTE, NO NDL, NO SOL | Stainless wetted components, No needle, No Solenoid |

# Warnings

The following warnings are for the setup, use, grounding, maintenance, and repair of this equipment. The exclamation point symbol alerts you to a general warning and the hazard symbols refer to procedure-specific risks. When these symbols appear in the body of this manual or on warning labels, refer back to these Warnings. Product-specific hazard symbols and warnings not covered in this section may appear throughout the body of this manual where applicable.

|  <span style="font-size: 2em; font-weight: bold; margin-left: 10px;">WARNING</span>  |   |
|---|---|
| <br><br><br><br> | <p><b>SKIN INJECTION HAZARD</b><br/>           High-pressure fluid from dispensing device, hose leaks, or ruptured components will pierce skin. This may look like just a cut, but it is a serious injury that can result in amputation. <b>Get immediate surgical treatment.</b></p> <ul style="list-style-type: none"> <li>• Do not point dispensing device at anyone or at any part of the body.</li> <li>• Do not put your hand over the fluid outlet.</li> <li>• Do not stop or deflect leaks with your hand, body, glove, or rag.</li> <li>• Follow the <b>Pressure Relief Procedure</b> when you stop dispensing and before cleaning, checking, or servicing equipment.</li> <li>• Tighten all fluid connections before operating the equipment.</li> <li>• Check hoses and couplings daily. Replace worn or damaged parts immediately.</li> </ul> |
|    | <p><b>TOXIC FLUID OR FUMES HAZARD</b><br/>           Toxic fluids or fumes can cause serious injury or death if splashed in the eyes or on skin, inhaled, or swallowed.</p> <ul style="list-style-type: none"> <li>• Read Safety Data Sheet (SDS) to know the specific hazards of the fluids you are using.</li> <li>• Store hazardous fluid in approved containers, and dispose of it according to applicable guidelines.</li> </ul>   |
|    | <p><b>BURN HAZARD</b><br/>           Equipment surfaces and fluid that is heated can become very hot during operation. To avoid severe burns:</p> <ul style="list-style-type: none"> <li>• Do not touch hot fluid or equipment.</li> </ul>  |



# WARNING



## PERSONAL PROTECTIVE EQUIPMENT

Wear appropriate protective equipment when in the work area to help prevent serious injury, including eye injury, hearing loss, inhalation of toxic fumes, and burns. Protective equipment includes but is not limited to:

- Protective eyewear, and hearing protection.
- Respirators, protective clothing, and gloves as recommended by the fluid and solvent manufacturer.



## EQUIPMENT MISUSE HAZARD

Misuse can cause death or serious injury.

- Do not operate the unit when fatigued or under the influence of drugs or alcohol.
- Do not exceed the maximum working pressure or temperature rating of the lowest rated system component. See **Technical Data** in all equipment manuals.
- Use fluids and solvents that are compatible with equipment wetted parts. See **Technical Data** in all equipment manuals. Read fluid and solvent manufacturer's warnings. For complete information about your material, request Safety Data Sheet (SDS) from distributor or retailer.
- Do not leave the work area while equipment is energized or under pressure.
- Turn off all equipment and follow the **Pressure Relief Procedure** when equipment is not in use.
- Check equipment daily. Repair or replace worn or damaged parts immediately with genuine manufacturer's replacement parts only.
- Do not alter or modify equipment. Alterations or modifications may void agency approvals and create safety hazards.
- Make sure all equipment is rated and approved for the environment in which you are using it.
- Use equipment only for its intended purpose. Call your distributor for information.
- Route hoses and cables away from traffic areas, sharp edges, moving parts, and hot surfaces.
- Do not kink or over bend hoses or use hoses to pull equipment.
- Keep children and animals away from work area.
- Comply with all applicable safety regulations.



## Changing Materials

### NOTICE

Changing the material types used in your equipment requires special attention to avoid equipment damage and downtime.

- When changing materials, flush the equipment multiple times to ensure it is thoroughly clean.
- Always clean the fluid inlet strainers after flushing.
- Check with your material manufacturer for chemical compatibility.
- When changing between epoxies and urethanes or polyureas, disassemble and clean all fluid components and change hoses. Epoxies often have amines on the B (hardener) side. Polyureas often have amines on the B (resin) side.

## General Information

The Model 710 Dispense Valve is an On/Off valve designed for a continuous flow of viscous material through a dispense needle in automatic, semi-automatic or manual applications. It is shipped complete with the following:

- Model 710 Dispense Valve
- Two 3 foot (.9 m) sections of pneumatic air line
- Seal Kit
- Operating and Maintenance Manual

## Safety Information

This product should be used only by employees who have been given appropriate training and safety warnings as set forth in this manual. Read completely before operating.

|   |  |  |  |  |
|---|--|--|--|--|
|   |  |  |  |  |
| <p>Do not exceed 100 psi (6.9 bar) pressure on the operating system. <b>Do not exceed 1200 psi (82.7 bar) material inlet pressure.</b> Higher pressures may cause serious injury or equipment damage.</p> |  |  |  |  |

**NOTE:** The minimum recommended pneumatic operating system pressure is 70 psi (4.8 bar) clean/dry air.

## Illustration References

Throughout this manual you will find references by illustration item number to the illustrations in the manual. The references are indicated by parentheses around a number such as: (7). Illustrations represent typical valve configurations. The drawings for your exact model are inserted at the back of the manual and include the part numbers for ordering replacement parts.

## General Accessories

Graco offers a full line of standard and custom accessories for your dispensing needs including:

- Valve Controllers
- Syringe Feed Systems
- Cartridge Retainers and Pressure Reservoirs
- Titan 200 High Pressure Cartridge Feed Systems
- Transfer Pump Feed Systems for 1, 5 and 55 gallon containers
- Mounting Bases and Brackets
- Custom Needles and Needle Blocks

Consult your Dispensit dealer or the factory for details.

# Setup



**NOTE:** See **Typical Installation** diagram.

1. Perform Setup procedure for feed system components. See feed system manual(s).
2. Place an in-line air pressure regulator, air-water separator/filter, and shut-off/bleed valve between the air supply and the control solenoids.
3. Connect each 1/4 in. outside diameter supplied air line to the corresponding control solenoid. See **Typical Feed System Components** starting on page 7.
4. Connect chemical lines from feed system to metering valve material inlets. See **Typical Feed System Components** starting on page 7.

## Typical Installation

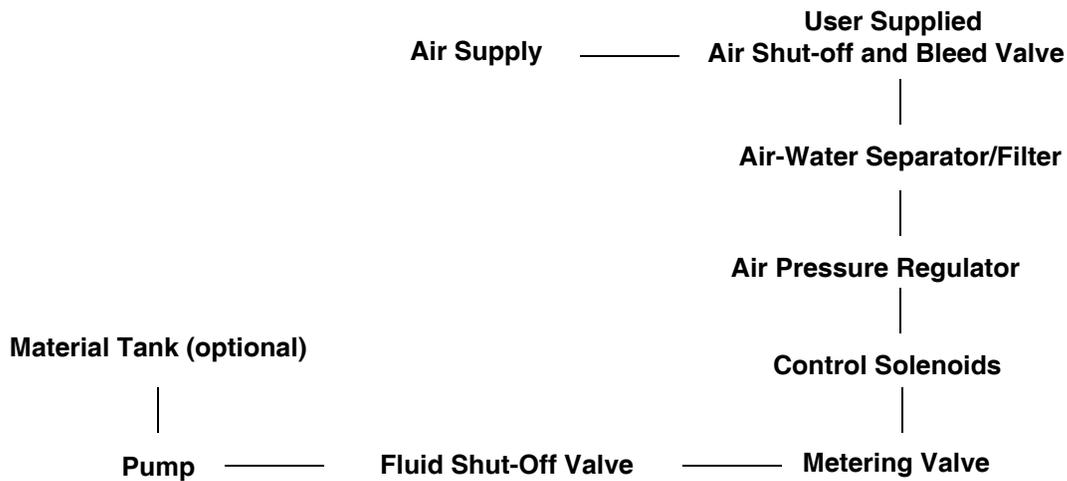


FIG. 1

# Typical Feed System Components



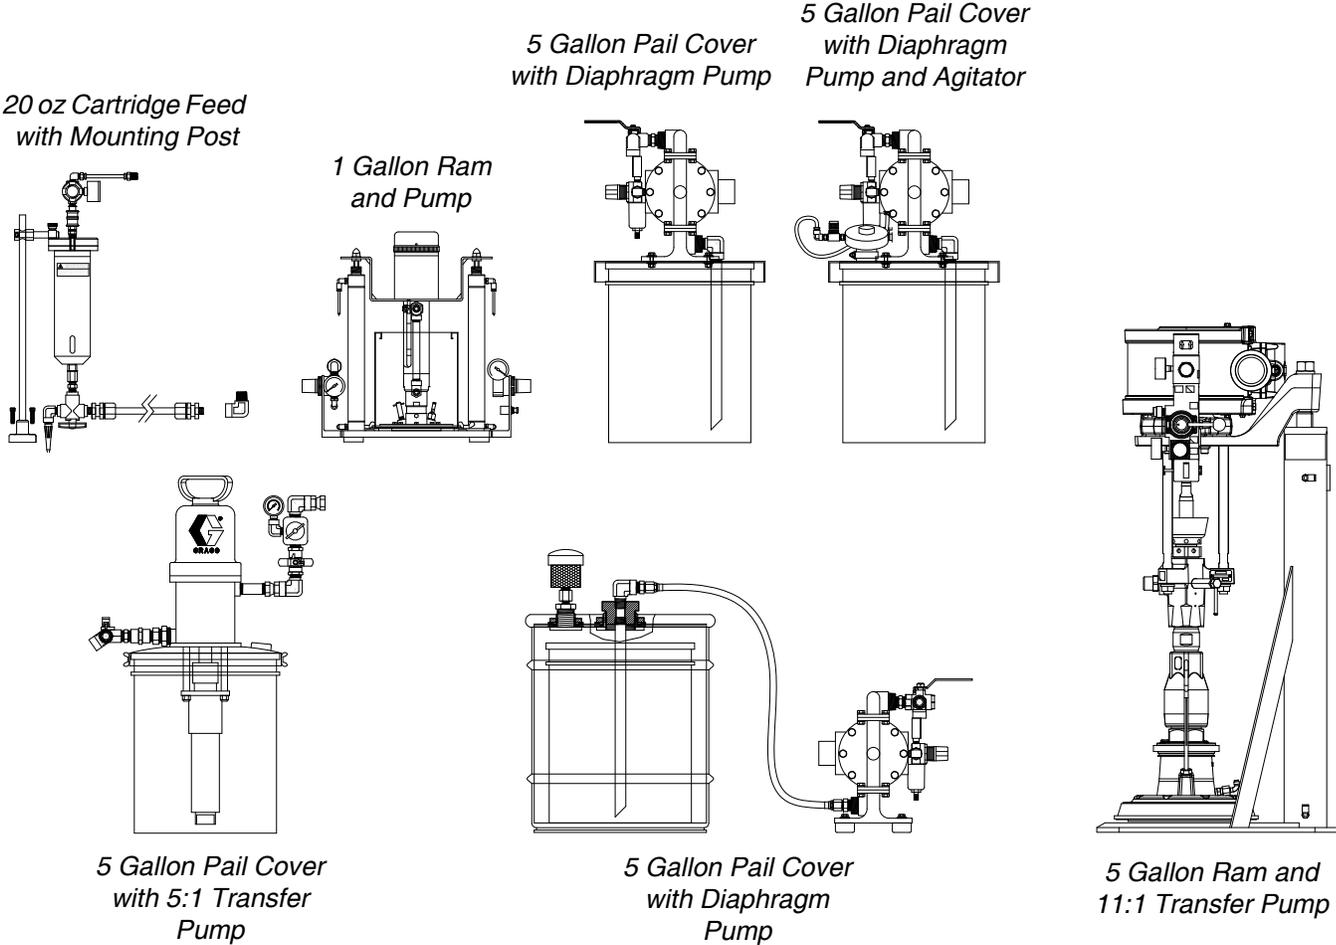


FIG. 2


## Typical Feed System Components (continued)

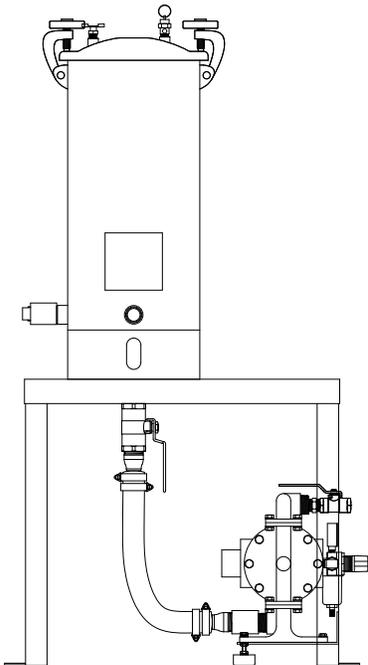


*5 Gallon Tank with Diaphragm Pump and Stand*

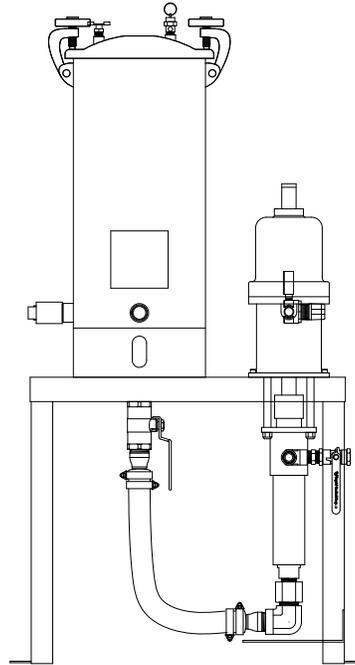

*5 Gallon Tank with 5:1 Pump and Stand*

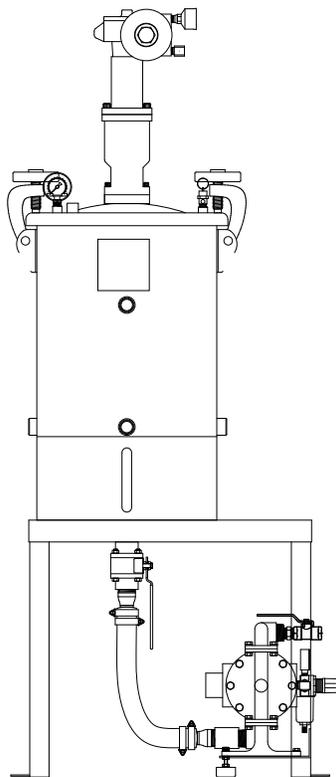

*10 Gallon Tank with Diaphragm Pump, Agitator,  
Vacuum, and Stand*

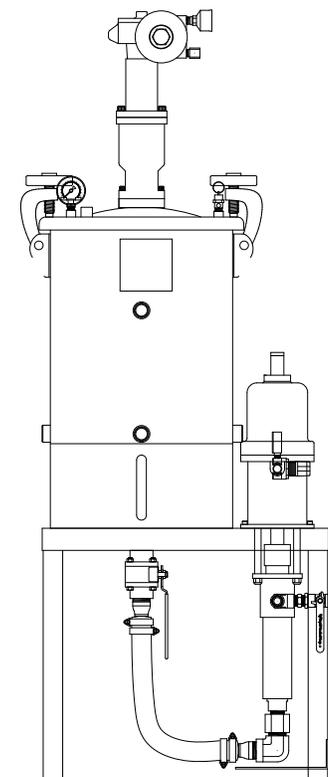


*10 Gallon Tank with 5:1 Pump, Agitator, Vacuum,  
and Stand*

**FIG. 3**

# Description of Operation

- The normal “ready” state of the system is as follows:
  - The material supply line is filled with dispensable material.
  - The system has been purged, filling the valve with material up to the Piston(4).
  - The Piston (4) is seated in the Needle Seat (1).
- The dispense cycle begins when the controller is activated. Air at 70 psi (4.8 bar) enters the Open port and raises the Piston (4) off the Needle Seat (1).
- Material flows through the Valve Body (5) and out through the Needle Block (23). Volume can be varied by changing the material pressure, needle size, dispense speed and dispense time.
- When the correct amount of material has been dispensed, the controller relieves air from the Open port and applies air to the Close port. The Piston (4) seats back into the Needle Seat (1), sealing the valve and ending the dispensing process. The system is again in the normal “ready” state.

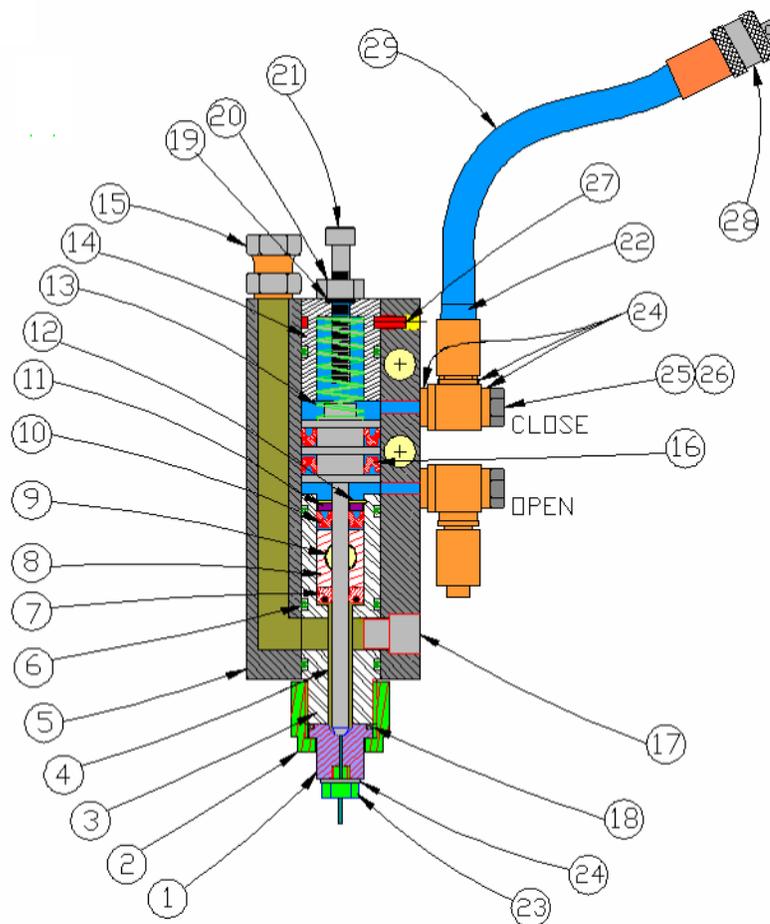

# Setup Procedure

## Mounting Dispense Valve

Mounting holes are drilled through the valve body. The valve may be tilted to a maximum of 60 degrees from the vertical depending on the application.

## Air Controller

Operation of the Model 710 Dispense Valve requires a controller that can provide the following:

- A minimum of 0.5 SCFM (2.3 cm<sup>3</sup>) of dry unlubricated air at a minimum pressure of 70 psi (4.8 bar) and a maximum of 100 psi (6.9 bar).
- Time delay capability to allow the valve to cycle.
- Independent air pressure regulators for material supply and valve operation.
- "Purge capability" which is the ability for the operator to pass or not pass air to the Open port on the dispense valve.
- For semiautomatic or automatic applications, a foot switch or other control to cycle the valve.
- Connection for .16"ID x .25" OD (6.35mm) pressure tubing for use between the dispense valve and controller.
- Connection for a .16"ID x .25" OD (6.35mm) pressure tubing for use between the controller and syringe.

# Operating Procedures

If there are any problems in getting started, refer to the Troubleshooting section on page 16.

## Dry System Checkout

This is an initial checkout to determine if the setup has been properly completed. The dry checkout is conducted without any material in the system. Refer to the illustrations above or below.

1. Turn on the controller and the air supply.
2. Set the air pressure to 70 psi (4.8 bar) on the system pressure gauge.
3. In the normal “ready” state the Piston (4) is seated in the Needle Seat (1), sealing the dispense valve. For this test, loosen the Nut (2) and remove the Needle Block (23) and Needle Seat (1) so that you can visually verify that the Piston (4) rises inside the Valve Sleeve (3).
4. Momentarily press the dispense valve cycling control switch.
5. The controller applies air to the Open port of the dispense valve, the Piston (4) lifts. After the time delay the controller applies air to the Close port causing the Piston (4) to move down. Visually verify the piston movement. When this happens, the system is correctly installed.
6. Reinstall the Needle Block (23) and Needle Seat (1) with the Nut (2). Anytime the Needle Seat (1) is replaced, you must loosen the Hex Nut (20) and tighten the Adjustment Screw (21) into the Valve Body (5) until it seats. Then back off the Adjustment Screw (21) approximately 2 turns and tighten the Hex Nut (20). This step is required for proper adjustment of the Piston (4).

## Material Loading

Material is supplied from a pressure vessel or pump with enough pressure to cause a proper rate of flow from the dispense needle.

**NOTE:** The material pressure will vary depending on the application.

|  |   |  |  |  |
|--|---|--|--|--|
|   |  |  |  |  |
| <ul style="list-style-type: none"> <li>• Do not exceed 100 psi (6.9 bar) pressure on the operating system. <b>Do not exceed 1200 psi (82.7 bar) material inlet pressure.</b> Higher pressures may cause serious injury or equipment damage.</li> <li>• To reduce the risk of injury or equipment damage, do not apply either operating or reservoir air pressure to the product unless all screws are in place and properly tightened and all material supply connections are properly in place and tightened. Fasten all air connections securely.</li> </ul> |   |  |  |  |

Attach the air line to the regulator and set the air pressure control to the setting required for the application.

**NOTE:** When using a remote reservoir, the delivery tubing and fittings must be compatible with the material being dispensed and capable of withstanding the dispensing pressure.

**NOTE:** The minimum recommended pneumatic operating system pressure is 70 psi (4.8 bar) clean/dry air.

## Wet System Checkout

Using the purge cycle on the air supply controller, run the material through the material supply line and valve until a smooth material flow is observed through the dispense needle.

After the purge cycle has been completed, set the air supply controller to the manual cycle mode and cycle the dispense valve several times.

## Operation Adjustments

### Air Supply Adjustment

The air pressure to the controller and material supply regulator is typically 70 psi (4.8 bar). Do not exceed 100 psi (6.9 bar) pressure to the dispense valve. However, the material supply pressure must be adjusted according to the type of material being dispensed. Too low a pressure will give you an inconsistent dispensed volume because the material does not have sufficient pressure to flow smoothly through the needle. Too high a pressure may cause material separation or packing. Use the minimum pressure needed to obtain smooth material flow during the purge cycle.

### Material Output and Snuff-Back Adjustment

The material output depends on the material pressure, size of needle, and the rate at which the dispense valve is moved by the system to which it is attached.

**NOTE:** The Adjustment Screw (27) is used to adjust the maximum height setting of the Piston Rod (4) to the Needle Seat (1) and is not intended to be used as a flow control adjustment. *See the Dry System Check (seen on the previous page) for more information.*

### Dispense Needle Height Adjustment

Ideally, the material should just contact the work piece enough to create an adhesive bond and cause a clean separation of the material from the needle tip upon completion of the dispense cycle.

# Periodic Maintenance

## Pressure Relief Procedure



Follow the Pressure Relief Procedure whenever you see this symbol.



This equipment stays pressurized until pressure is manually relieved. To help prevent serious injury from pressurized fluid, such as skin injection, relieve pressure when you stop dispensing and before cleaning, checking or servicing the equipment.

1. Shut off material flow to the valve.
2. Cycle the valve three times to ensure all pressurized material has been removed from the system.
3. Turn off the air pressure to the valve and disconnect all of the lines.
4. The valve is now depressurized and safe to perform maintenance on.

## Dispense Needle Replacement

If no material or reduced volumes of material come out of the dispense needle it may be partially or completely clogged. Clean with water or solvent depending on the material dispensed. A fine wire, used cautiously, will help open clogged needles. Replace the needle if damaged or severely clogged. Replacement needles can be ordered for the Model 710 Dispense Valve by specifying the proper part number. See the **Model 710 Recommended Spare Parts** section of this manual or consult the drawings for your exact model.

## Disassembly

Refer to the illustration on page 14 and the drawings in the back of this manual for your exact model.

Note the direction that u-cup and Posipak seals are facing as you remove them so that the replacements can be installed facing the same way.

Note that the Gaskets (24) rarely require replacement and are not provided in the seal kit. Retain them for reuse after cleaning. Replacements are available from the factory or your Dispensit dealer.


1. Turn off the air supply and remove the Connectors (28) from the controller.
2. Turn off the material supply and remove the material inlet line from the Adapter (15).
3. Remove the valve from its mounting.
4. Remove the Needle Seat (1) and Needle Block (23) by removing the Nut (2).

**NOTE:** Also remove the O-ring (18) and Gasket (24) associated with this needle seat. Save the gasket.

5. Remove the Retaining Plug (17) which allows the Spring (13) to push the Valve Sleeve (3) and the Piston Assembly (4) out of the Valve Body (5).
6. Remove the U-cup Seals (16).
7. Remove the Set Screw (27) and remove End Cap (14) from the Valve Body (5).
8. Loosen the Hex Nut (20) and remove the Adjustment Screw (21) and its O-ring (19) from the End Cap (14).
9. Remove the O-rings (6) from the End Cap (14) and from the Valve Sleeve (3).
10. Remove the Retaining Tube (9) from the Valve Sleeve (3).
11. Remove the Retaining Ring (12) from the Valve Sleeve (3).
12. Remove the Washer (11).
13. Remove the U-cup Seal (10).
14. Remove the Spacer (8).
15. Remove the Posipak Seal (7).
16. Remove the Tubing (29) from the open and close Elbows (25) and remove the elbows and their Gaskets (24).

**The 710 Dispense Valve is now ready for cleaning and assembly.**

## Model 710 General Illustration

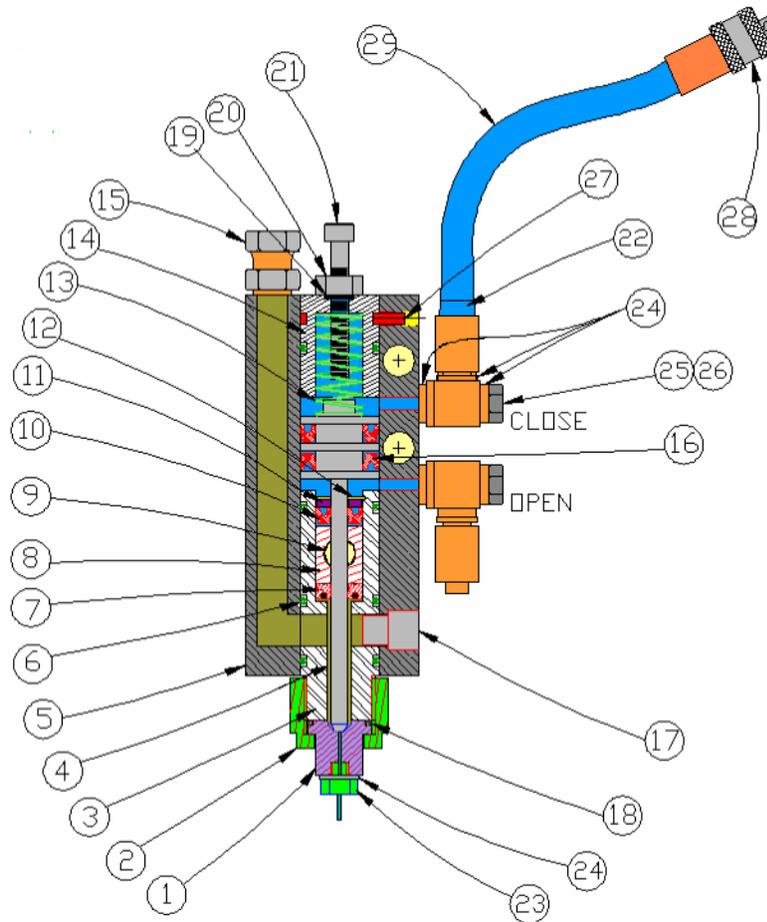

|    |                 |    |                                 |
|----|-----------------|----|---------------------------------|
| 1  | NEEDLE SEAT     | 15 | ADAPTER                         |
| 2  | NUT             | 16 | U-CUP SEAL                      |
| 3  | VALVE SLEEVE    | 17 | RETAINING PLUG                  |
| 4  | PISTON ASSEMBLY | 18 | O-RING                          |
| 5  | VALVE BODY      | 19 | O-RING                          |
| 6  | O-RING          | 20 | HEX NUT, #10-32                 |
| 7  | POSIPAK SEAL    | 21 | ADJUSTMENT SCRW, #10-32 x 1-1/2 |
| 8  | SPACER          | 22 | FITTING                         |
| 9  | RETAINING TUBE  | 23 | NEEDLE BLOCK                    |
| 10 | U-CUP SEAL      | 24 | GASKET                          |
| 11 | WASHER          | 25 | ELBOW                           |
| 12 | RETAINING RING  | 27 | SET SCREW                       |
| 13 | SPRING          | 28 | CONNECTOR                       |
| 14 | END CAP         | 29 | TUBING                          |

## Assembly

Refer to the illustration on page 14 and the drawings at the back of this manual for your exact model.

**NOTE:** Clean all valve parts with an appropriate solvent prior to assembly. Always install new, lightly lubricated o-rings and seals when assembling the valve. Use Krytox 203GPL (part number 84/0200-K3/11) for lubricating valve parts including seals and o-rings. Lubricate the bore of the Valve Body (3) and the Valve Sleeve (3) before assembly. Check the Piston (4), Valve Sleeve (3) and Needle Seat (1) for wear and if they are worn secure replacements before proceeding.

**NOTE:** Use caution as you install new U-cup and Posipak seals so that they are not pinched or torn. Do this by making sure they are lubricated, and by tucking the lips of the seal inward before uniformly pushing them into position. Always consult the illustrations and drawings to be sure that seals face the correct direction.

1. Install the Posipak Seals (7) in the Valve Sleeve (3).
2. Insert the Spacer (8).
3. Install the U-cup Seals (10) in the Valve Sleeve (3).
4. Align the Spacer (8) and insert the Retaining Tube (9) into the Valve Sleeve (3).
5. Install the Washer (11) and the Retaining Ring (12) in the Valve Sleeve (3).
6. Install the O-rings (6) on the Valve Sleeve (3) and on the End Cap (14).
7. Install the End Cap (14) in the Valve Body (5). Secure the End Cap (14) with the Set Screw (27). **Caution:** Do not install the Adjustment Screw (21) at this time.
8. Install the U-cup Seals (16) on the Piston Assembly (4) positioning them as noted in the illustration.
9. Lubricate the piston rod and insert the Piston Assembly (4) into the Valve Sleeve (3).
10. Place the Spring (13) on top of the Piston Assembly (4) and using the boss on the top of the piston to center the spring insert the Piston Assembly (4) and Valve Sleeve (3) into the Valve Body (5) until the spring compresses. Hold this in place firmly.
11. Align and insert the Retaining Plug (17). Tighten the Retaining Plug (17) until it is snug. Do not over-tighten.
12. Carefully install the Needle Block (23) through the Gasket (24) and into the Needle Seat (1).
13. Position the O-ring (18) on the Needle Seat (1) and place against the Valve Sleeve (3). Install the Nut (2) and tighten until snug. Do not overtighten.
14. Lubricate the threads of the Adjustment Screw (21) and thread the Hex Nut (20) onto it fully. Insert the O-ring (19) into the End Cap (14). Thread the Adjustment Screw (21) and Hex Nut (20) into the End Cap (14) through the O-ring (19) until the Adjustment Screw stops. Back the Adjustment Screw (21) off two turns, then tighten the Hex Nut (20) down against the O-ring (19) and End Cap (14).
15. Install the open port and close port Elbows (25) and their Gaskets (24). Install the Tubing (29).
16. Mount the valve to its point of use.
17. Connect the material inlet line to the Adapter (15).
18. Attach the air supply line connectors (28) to the controller.

**Perform the Dry System Checkout, Material Loading and Wet System Checkout procedures. The 710S Dispense Valve is now ready to be placed back in service.**

# Troubleshooting

If operating difficulties are encountered, review the symptoms below. With each problem there are one or more possible causes that should be investigated to resolve the situation.

## Nothing Happens

If absolutely nothing happens when trying to cycle the Dispense Head, check the pneumatic power. Check the footswitch or cycle start switch to be sure it is plugged in.

## Valve Cycles, Nothing Dispensed

First, try to purge the unit; this should fix most situations. If it doesn't, check to see that there is enough pressure to the reservoir or transfer pump. Perhaps the Reservoir/Needle path is clogged; examine and clear or replace as necessary. Consider whether the material could have set up in the system. (See the **Wet System Checkout** and **Operation Adjustments** sections.)

## Irregular Volume Dispensed

Frequently, this is caused by faulty material. The material must be a smooth (homogeneous) mixture, without any air entrapped in it. A second cause could possibly be that the material is not being supplied. Check the reservoir pressure as it may be too low for the type of material being dispensed and/or the rate at which the system moves the dispense valve may be too fast. To adjust, follow the directions found in the **Operation Adjustments** section of this manual.

## Reduced Volumes Dispensed

Check to see if needle is partially clogged (refer to **Periodic Maintenance** section).

## No Material Dispensed


This is due to a clogged needle (refer to **Periodic Maintenance** section).

## Material Continues to Flow After Shut Off

This can be due to material preventing the piston from seating properly into the needle seat or to a worn piston and/or needle seat. Remove needle block and needle seat, clear the blockage or replace the worn components.

# Parts

## 710 Valve

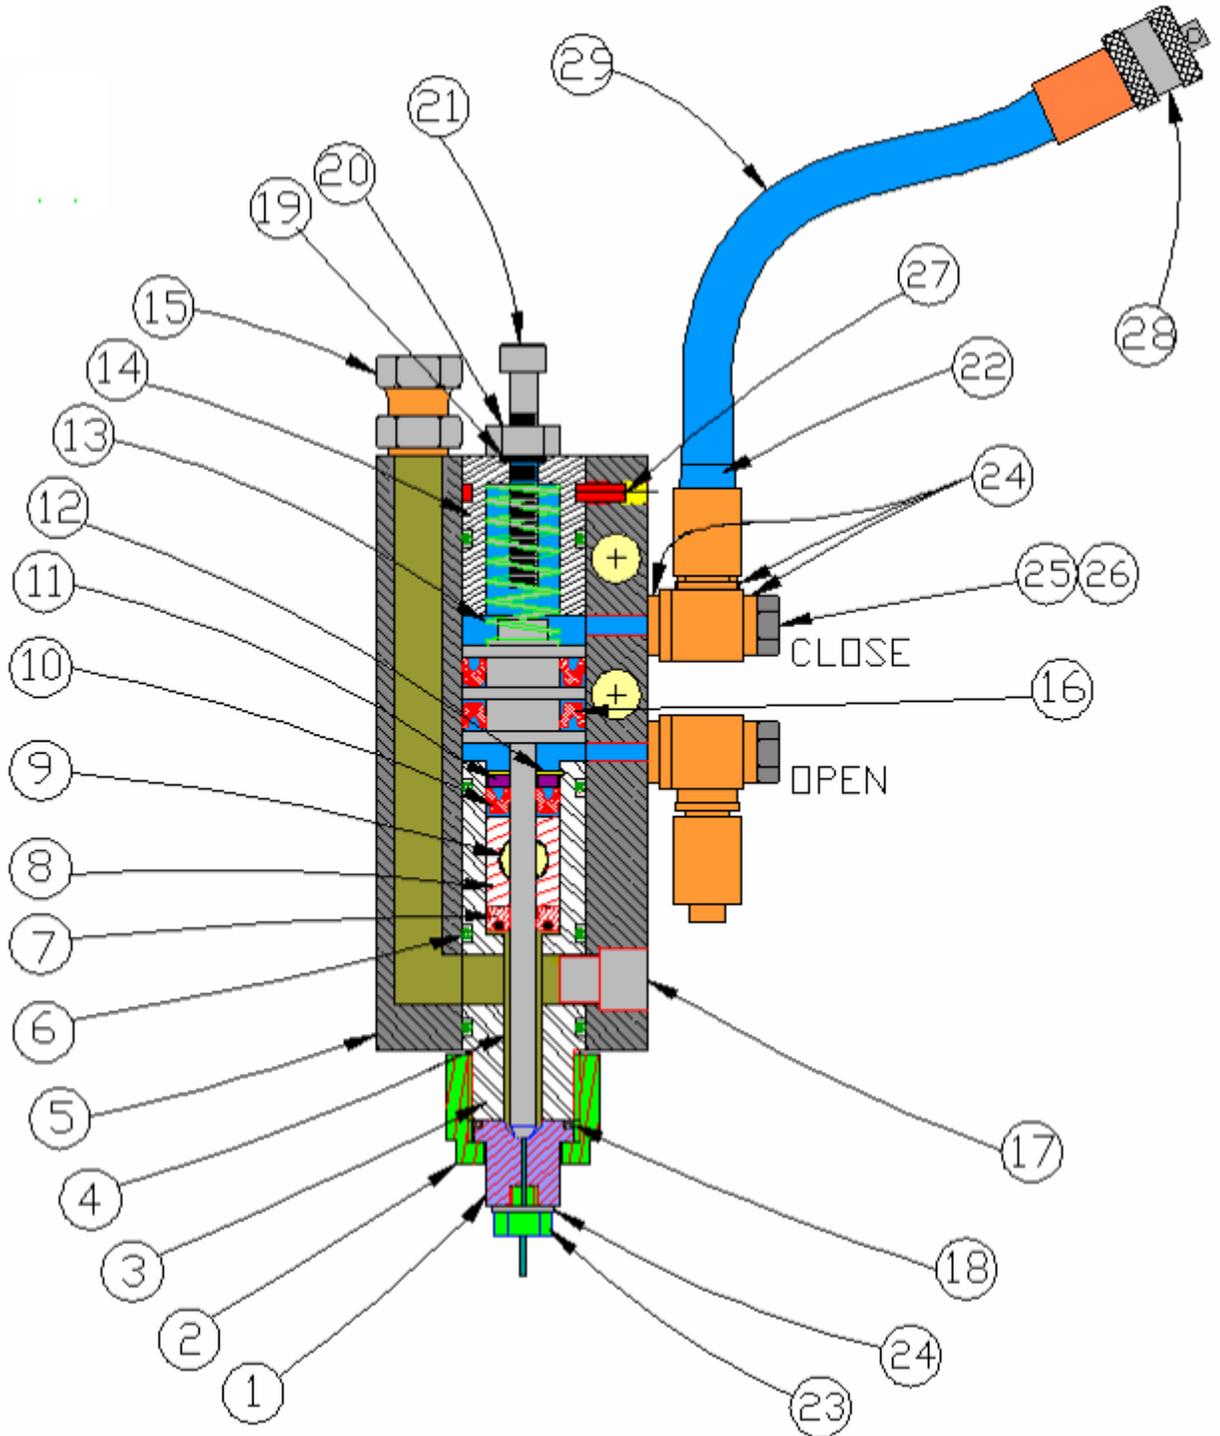

## 710 Valve Components

| Ref | Part          | Description                         | Qty |
|-----|---------------|-------------------------------------|-----|
| 29  | 61/2904-GN/11 | TUBE                                | 3   |
| 29  | 61/2904-YL/11 | TUBE                                | 3   |
| 28  | 94/0170/99    | FITITNG, CONN                       | 2   |
| 25  | 94/0740-A/99  | FITTING, ELBOW, SWVL                | 2   |
| 22  | 94/0740-B/99  | CONNECTOR                           | 2   |
| 19  | 95/0503/00    | O-RING, VIT                         | 1   |
| 6   | 95/0515/00    | O-RING, VIT                         | 4   |
| 16  | 95/0600/01    | SEAL, U-CUP                         | 2   |
| 7   | 95/0883/11    | SEAL, POSPK                         | 1   |
| 18  | 95/0905/00    | O-RING, VIT                         | 1   |
| 3   | A9000005      | SLEEVE, 710                         | 1   |
| 14  | A9000006      | CAP, 710, END CAP                   | 1   |
| 8   | A9000007      | SPACER, 710, SPACER NOTES           | 1   |
| 15  | A9000011      | ADAPTER, SWV                        | 1   |
| 9   | A9000012      | TUBE, 710, RETAINING TUBE           | 1   |
| 23  | A9000021      | NEEDLE, 710, NEEDLE RCPT, ROD SS    | 1   |
| 17  | A9000029      | PLUG, 710, RETAINING PLUG #CRM      | 1   |
| 5   | A9000039      | BLOCK, 710, VALVE BODY, NON-SOL, ET | 1   |
| 21  | A9000081      | SCREW, 710, ADJ                     | 1   |
| 11  | A9000087      | WASHER, 710, WASHER                 | 1   |
| 4   | A9010001      | PISTON, 710, PISTON ASSY            | 1   |
| 27  | B2000005      | SCREW, SHS                          | 1   |
| 20  | B4050002      | NUT, HEX                            | 1   |
| 10  | D2000016      | SEAL, U-CUP                         | 1   |
| -   | D5000043      | KIT, SEAL 710S, #                   | 1   |
| 13  | I1000013      | SPRING, COMP                        | 1   |
| 12  | J3500023      | RING, RET, INT                      | 1   |
| 15  | J6100004      | FITTING, BARB                       | 2   |
| 2   | J6700014      | NUT, HEX                            | 1   |

# Model 710 Recommended Spare Parts

**NOTE:** These parts are routine supply items or wear parts not covered by warranty for normal wear.

| Quantity | Description                      | Part Number                                 |
|----------|----------------------------------|---|
| 1        | SEAL KIT,710                     | <i>see assembly drawing for part number</i> |
| 1        | PISTON                           | <i>see assembly drawing for part number</i> |
| 1        | NEEDLE SEAT                      | <i>see assembly drawing for part number</i> |
| **       | KRYTOX 203GPL ASSEMBLY LUBRICANT | 84/0200-K3/11                               |

## #10-32 Hub Replacement Needles for Single Needle Block Models Custom lengths available.

| Quantity | Description                 | Needle Part Number | Needle Part Number |
|----------|-----------------------------|--------------------|--------------------|
| **       | NEEDLE, 12 GAUGE, Pack of 4 | A9010017-4         | 0.750"             |
| **       | NEEDLE, 14 GAUGE, Pack of 4 | A9010019-4         | 0.525"             |
| **       | NEEDLE, 16 GAUGE, Pack of 4 | A9010010-4         | 0.525"             |
| **       | NEEDLE, 17 GAUGE, Pack of 4 | A9010011-4         | 0.525"             |
| **       | NEEDLE, 18 GAUGE, Pack of 4 | A9010012-4         | 0.525"             |
| **       | NEEDLE, 19 GAUGE, Pack of 4 | A9010013-4         | 0.525"             |
| **       | NEEDLE, 20 GAUGE, Pack of 4 | A9010014-4         | 0.525"             |
| **       | NEEDLE, 22 GAUGE, Pack of 4 | A9010020-4         | 0.525"             |

## Luer Lock Hub Replacement Needles for Single Needle Block Models Needle length shown is length projecting from LL hub. Other lengths available.

| Quantity | Description  | Needle Part Number |
|----------|--|--------------------|
| **       | Needle Sampler Package, 10 each of 14, 16, 18, 20 and 22 | E4000025-50        |
| **       | Needle,LL,14 ga.x ½", Pack of 50 *                       | E4000001-50        |
| **       | Needle,LL,14 ga.x 1", Pack of 50                         | E4000014-50        |
| **       | Needle,LL,15 ga.x ½", Pack of 50                         | E4000004-50        |
| **       | Needle,LL,16 ga.x ½", Pack of 50 *                       | E4000088-50        |
| **       | Needle,LL,18 ga.x ½", Pack of 50 *                       | E4000006-50        |
| **       | Needle,LL,19 ga.x ½", Pack of 50                         | E4000008-50        |
| **       | Needle,LL,20 ga.x ½", Pack of 50 *                       | E4000009-50        |
| **       | Needle,LL,22 ga.x ½", Pack of 50 *                       | E4000011-50        |
| **       | Needle,LL,23 ga.x ½", Pack of 50                         | E4000024-50        |

\* Needles are included in Needle Sampler Package

\*\* The quantity or needle size may vary for your application.

# General Guidelines for O-Rings and U-Cup Seals

Sizes and materials of construction for O-rings and U-cup seals are selected by Graco Inc. based on compatibility with the chemicals to which they will be exposed. Solvents that may remove residual chemicals often have negative effects on the mechanical properties of O-rings and seals.

## O-Ring Guidelines

- Always replace an O-ring with the identical one in size, durometer hardness, type and material of construction. Always be alert to the location and size of each O-ring as many look alike and be careful not to mix them. Often similar sizes may be used in various locations on the equipment and if replaced incorrectly, the equipment may not function properly. Refer to the Machine Operation and Service Manual for the correct part number of all O-rings used throughout the equipment and replace them with factory approved parts only.
- Re-use of O-rings is not recommended. Only re-use O-rings as a last resort. If you must re-use them, be sure that they are clean, have no cuts or flat spots and contain NO foreign material. Also, be sure not to soak them in solvent for extended periods as this can cause deterioration of the O-ring. Always replace O-rings that are cut, nicked, or distorted in shape or cross-section.
- Always apply a very thin film of Krytox 203GPL lubricant, item 84/0200-K3/11, to the entire surface of the o-ring before installation. Avoid excessive lubrication. If installing O-rings over threads on a shaft or across sharp edges, roll or push the O-ring carefully into place being careful to avoid cutting or nicking it.
- Avoid stretching the O-ring too much as it may not return to the proper size.
- Do not use any sharp tools or objects to install O-rings.

## U-Cup Seal Guidelines

- Always replace a U-cup seal with the identical one in size, durometer hardness, type and material of construction. Always be alert to the location and size of each U-cup seal as many look alike and be careful not to mix them. Often similar sizes may be used in various locations on the equipment and if replaced incorrectly, the equipment may not function properly. Refer to the Machine Operation and Service Manual for the correct part number of all U-cups used throughout the equipment and replace them with factory approved parts only.
- Always apply a very thin film of Krytox 203GPL lubricant, item 84/0200-K3/11, to the inner and outer lips of the seal before installation.
- Re-use of U-cup seals is not recommended. Only re-use U-cups as a last resort. If you must re-use them, be sure that they are clean, have no cuts or flat spots and contain NO foreign material. Also, be sure not to soak them in solvent for extended periods as this can cause deterioration of the seal. Always replace U-cups that are cut, have flat spots, are distorted in shape or are damaged in any manner.
- Always be alert to the proper orientation of the sealing lips and re-install them in the same direction as shown on the specific equipment assembly drawing. The U-cup seals are intended to seal in only one direction and if installed incorrectly, chemical leakage through the U-cup can occur.
- Whenever possible, push the back side of the seal over the shaft to protect the inner and outer lips. If this is not possible, carefully tuck the lip in to avoid rolling it back or cutting it.
- If installing over sharp edges, slide the seal carefully into place to avoid cutting it.
- Do not use any sharp tools or objects to install U-cups.

# Technical Data

**NOTE:** See feed system manuals for dimensions, weights, and wetted parts lists for those components. Dimensions, weights, and wetted parts for components not covered in component feed system manuals and for combined assemblies are listed below.

|   |   |
|---|---|
| Maximum Ambient Temperature . . . . .                                   | 110°F (43°C)  |
| Maximum Operating Temp. . . . .   | 150°F (65°C)  |
| Maximum Outlet Material Working Pressure . . . . .                      | 1200 psi (8.27 MPa, 82.7 bar)   |
| Maximum Air Working Pressure . . . . .                                  | 100 psi (0.7 MPa, 7 bar)  |
| Minimum Air Working Pressure . . . . .                                  | 70 psi (480 kPa, 4.8 bar)   |
| Maximum Material Inlet Pressure . . . . .                               | 1200 psi (8 MPa, 83 bar)  |
| Supplied Air Requirements . . . . .                                     | 1 to 3 cfm at 80 psi to 100 psi   |
| Shot Size Range . . . . .   | 0.002 cc continuous   |
| Maximum Cycle Rate (application dependent) . . . . .                    | Up to 60 cycles per minute  |
| Dimensions (H x L x W), height to end of material inlet block . . . . . | 5.46 x 1.68 x 0.75 in. (139 x 43 x 19 mm)<br><i>Graco-supplied Feed System Assemblies</i><br><i>(depends on selected options):</i><br><i>Smallest: 22.5 x 10 x 4 in. (572 x 254 x 102 mm)</i><br><i>Largest: 60 x 28 x 19 in. (1524 x 711 x 483 mm)</i> |
| Weight . . . . .  | 2 - 4 lb (0.91 - 1.81 kg)   |
| Wetted Parts . . . . .  | <i>Metering Valve:</i> 303/304, 404, fluoroelastomer, EPDM<br><i>Graco-supplied Feed System Hoses and Fittings:</i> Mild steel, 303/304, PTFE, buna, polyethylene, polypropylene<br><i>Graco-supplied Tanks:</i> Polyethylene, 303/304, mild steel      |

# Graco Standard Warranty

Graco warrants all equipment referenced in this document which is manufactured by Graco and bearing its name to be free from defects in material and workmanship on the date of sale to the original purchaser for use. With the exception of any special, extended, or limited warranty published by Graco, Graco will, for a period of twelve months from the date of sale, repair or replace any part of the equipment determined by Graco to be defective. This warranty applies only when the equipment is installed, operated and maintained in accordance with Graco's written recommendations.

This warranty does not cover, and Graco shall not be liable for general wear and tear, or any malfunction, damage or wear caused by faulty installation, misapplication, abrasion, corrosion, inadequate or improper maintenance, negligence, accident, tampering, or substitution of non-Graco component parts. Nor shall Graco be liable for malfunction, damage or wear caused by the incompatibility of Graco equipment with structures, accessories, equipment or materials not supplied by Graco, or the improper design, manufacture, installation, operation or maintenance of structures, accessories, equipment or materials not supplied by Graco.

This warranty is conditioned upon the prepaid return of the equipment claimed to be defective to an authorized Graco distributor for verification of the claimed defect. If the claimed defect is verified, Graco will repair or replace free of charge any defective parts. The equipment will be returned to the original purchaser transportation prepaid. If inspection of the equipment does not disclose any defect in material or workmanship, repairs will be made at a reasonable charge, which charges may include the costs of parts, labor, and transportation.

**THIS WARRANTY IS EXCLUSIVE, AND IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.**

Graco's sole obligation and buyer's sole remedy for any breach of warranty shall be as set forth above. The buyer agrees that no other remedy (including, but not limited to, incidental or consequential damages for lost profits, lost sales, injury to person or property, or any other incidental or consequential loss) shall be available. Any action for breach of warranty must be brought within two (2) years of the date of sale.

**GRACO MAKES NO WARRANTY, AND DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IN CONNECTION WITH ACCESSORIES, EQUIPMENT, MATERIALS OR COMPONENTS SOLD BUT NOT MANUFACTURED BY GRACO.** These items sold, but not manufactured by Graco (such as electric motors, switches, hose, etc.), are subject to the warranty, if any, of their manufacturer. Graco will provide purchaser with reasonable assistance in making any claim for breach of these warranties.

In no event will Graco be liable for indirect, incidental, special or consequential damages resulting from Graco supplying equipment hereunder, or the furnishing, performance, or use of any products or other goods sold hereto, whether due to a breach of contract, breach of warranty, the negligence of Graco, or otherwise.

## **FOR GRACO CANADA CUSTOMERS**

The Parties acknowledge that they have required that the present document, as well as all documents, notices and legal proceedings entered into, given or instituted pursuant hereto or relating directly or indirectly hereto, be drawn up in English. Les parties reconnaissent avoir convenu que la rédaction du présente document sera en Anglais, ainsi que tous documents, avis et procédures judiciaires exécutés, donnés ou intentés, à la suite de ou en rapport, directement ou indirectement, avec les procédures concernées.

# Graco Information

## Sealant and Adhesive Dispensing Equipment

For the latest information about Graco products, visit [www.graco.com](http://www.graco.com).

For patent information, see [www.graco.com/patents](http://www.graco.com/patents).

**TO PLACE AN ORDER**, contact your Graco distributor, go to [www.graco.com](http://www.graco.com) and select "Where to Buy" in the top blue bar, or call to find the nearest distributor.

***If calling from the US: 800-746-1334***

***If calling from outside the US: 0-1-330-966-3000***

*All written and visual data contained in this document reflects the latest product information available at the time of publication. Graco reserves the right to make changes at any time without notice.*

Original instructions. This manual contains English. MM 332094

**Graco Headquarters:** Minneapolis

**International Offices:** Belgium, China, Japan, Korea

**GRACO INC. AND SUBSIDIARIES • P.O. BOX 1441 • MINNEAPOLIS MN 55440-1441 • USA**  
**Copyright 2010, Graco Inc. All Graco manufacturing locations are registered to ISO 9001.**

[www.graco.com](http://www.graco.com)

Revision C, April 2017