

ToughTek[®] MP-Series Mixing Pumps

3A4349M

EN

**Electric mixing pump for water-based cementitious materials. For professional use only.
Not approved for use in explosive atmospheres or hazardous locations.**


See page 3 for model information.

Maximum Working Pressure: 300 psi (2.07 MPa, 20.7 bar)



Important Safety Instructions

Read all warnings and instructions in this and all related manuals. Save these instructions.

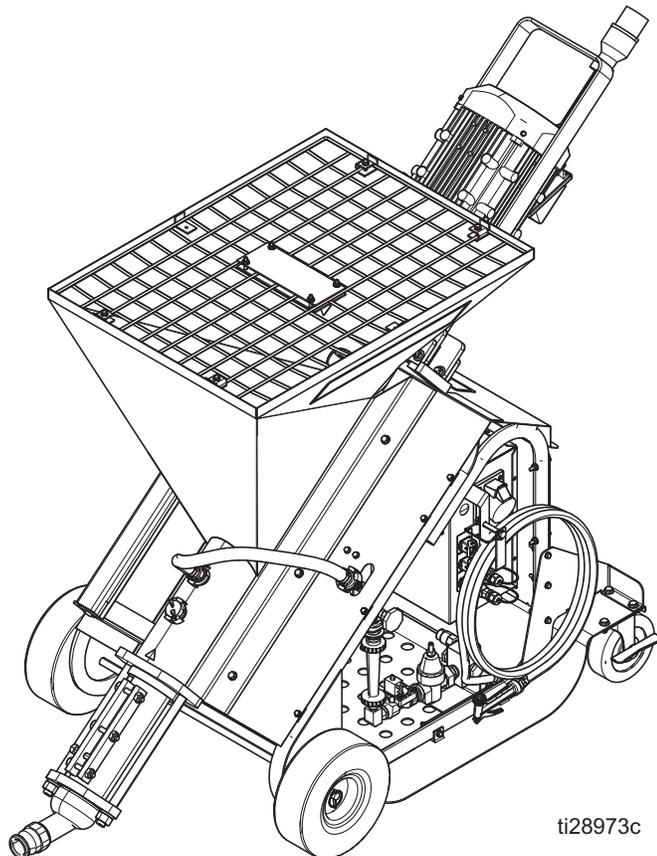

ti28973c

Contents

| | | | |
|--|-----------|--|-----------|
| Related Manuals | 3 | MP-20 and MP-40 Parts List (continued) | 33 |
| Models with Water Pump | 3 | Water Control Assembly (Ref. 3) | 34 |
| Models without Water Pump | 3 | Water Control Assembly Parts List | 35 |
| Warnings | 4 | Water Pump Assembly (Ref. 4) | 36 |
| Component Identification | 6 | Water Pump Assembly Parts List | 37 |
| MP-20 and MP-40 Series | 6 | Drive Shaft (Ref. 7) | 38 |
| Control Box | 7 | Motor Assemblies (Ref. 10) | 39 |
| Control Box Control Panel | 7 | Power Cable (Ref. 56) | 42 |
| Water Pressure Over-ride Plug (OP) | 8 | Electrical Enclosure (Ref. 2) Parts | 43 |
| Set Up | 10 | Electrical Enclosure Parts List | 44 |
| Electrical Connections | 11 | Wiring Schematics | 45 |
| Grounding | 11 | MP-20 (MTA708) | 45 |
| Operation | 12 | MP-20 16A (MTA709) | 46 |
| Priming Hoses with Water | 12 | MP-40 (MTA710) | 47 |
| Priming System with Water | 15 | MP-40 380 Vac and Neutral (MTA711) | 48 |
| Pump Pressure Setting | 16 | Din Rail Assembly Modules | 49 |
| Prime and Pump Material | 17 | Systems and Accessories | 50 |
| Pressure Relief Procedure | 18 | Systems | 50 |
| System Flush | 19 | Accessories | 50 |
| Hose Flush | 20 | Rotor/Stator Pump Kits | 50 |
| Shutdown | 21 | Nozzle Kits | 50 |
| Winterizing and Extended Storage | 22 | Motor Kits | 51 |
| Startup After Extended Storage | 22 | Drive Shaft Kits | 51 |
| Routine Maintenance | 23 | Water Pump System Kits | 51 |
| Troubleshooting | 24 | Enclosure Kits | 51 |
| Repair | 27 | Wheels and Casters Kits | 52 |
| Rotor/Stator Pump Repair | 27 | Dimensions | 53 |
| Motor Seal Replacement | 28 | Technical Specifications | 54 |
| Parts | 30 | California Proposition 65 | 57 |
| MP-20 and MP-40 Series Parts | 30 | Graco Standard Warranty | 58 |
| MP-20 and MP-40 Parts List | 31 | Graco Information | 58 |
| MP-20 and MP-40 Series Parts (continued) . . . | 32 | | |

Related Manuals

| Manual in English | Description |
|-------------------|-------------------------------|
| 3A4554 | ToughTek Mortar Coupling Hose |
| 3A5637 | ToughTek Camlock Mortar Hose |

Manuals are available at www.graco.com.

Models with Water Pump

| Model | Part | Series | Description | Power |
|-------|--------|--------|---------------------|-----------------------------|
| MP-20 | 25M060 | D | ToughTek MP-20 | 200-240 VAC, 1 Phase, 60 Hz |
| | 25M061 | D | ToughTek MP-20 16A | 200-240 VAC, 1 Phase, 50 Hz |
| MP-40 | 25M062 | D | ToughTek MP-40 | 200-240 VAC, 3 Phase, 60 Hz |
| | 25M063 | D | ToughTek MP-40 380V | 350-415 VAC, 3 Phase, 50 Hz |

Models without Water Pump

| Model | Part | Series | Description | Power |
|-------|--------|--------|---------------------|-----------------------------|
| MP-20 | 25M064 | D | ToughTek MP-20 | 200-240 VAC, 1 Phase, 60 Hz |
| | 25M065 | D | ToughTek MP-20 16A | 200-240 VAC, 1 Phase, 50 Hz |
| MP-40 | 25M066 | D | ToughTek MP-40 | 200-240 VAC, 3 Phase, 60 Hz |
| | 25M067 | D | ToughTek MP-40 380V | 350-415 VAC, 3 Phase, 50 Hz |

Warnings

The following warnings are for the setup, use, grounding, maintenance, and repair of this equipment. The exclamation point symbol alerts you to a general warning and the hazard symbols refer to procedure-specific risks. When these symbols appear in the body of this manual or on warning labels, refer back to these Warnings. Product-specific hazard symbols and warnings not covered in this section may appear throughout the body of this manual where applicable.

|  <h1 style="margin: 0;">WARNING</h1> | |
|--|--|
|     | <p>MOVING PARTS HAZARD</p> <p>Moving parts can pinch, cut or amputate fingers and other body parts.</p> <ul style="list-style-type: none"> • Keep clear of moving parts. • Do not operate equipment with protective guards or covers removed. • Pressurized equipment can start without warning. Before checking, moving, or servicing equipment, follow the Pressure Relief Procedure and disconnect all power sources. |
|   | <p>ELECTRIC SHOCK HAZARD</p> <p>This equipment must be grounded. Improper grounding, setup, or usage of the system can cause electric shock.</p> <ul style="list-style-type: none"> • Turn off and disconnect power before servicing equipment. • Connect only to grounded electrical outlets. • Ensure ground prongs are intact. • Do not expose to rain. Store indoors. • All electrical wiring must be done by a qualified electrician and comply with all local codes and regulations. |




WARNING

| | |
|---|--|
|   | <p>EQUIPMENT MISUSE HAZARD</p> <p>Misuse can cause death or serious injury.</p> <ul style="list-style-type: none"> Do not operate the unit when fatigued or under the influence of drugs or alcohol. Do not exceed the maximum working pressure or temperature rating of the lowest rated system component. See Technical Specifications in all equipment manuals. Use fluids and solvents that are compatible with equipment wetted parts. See Technical Specifications in all equipment manuals. Read fluid and solvent manufacturer's warnings. For complete information about your material, request Safety Data Sheets (SDSs) from distributor or retailer. Do not leave the work area while equipment is energized or under pressure. Turn off all equipment and follow the Pressure Relief Procedure when equipment is not in use. Check equipment daily. Repair or replace worn or damaged parts immediately with genuine manufacturer's replacement parts only. Do not alter or modify equipment. Alterations or modifications may void agency approvals and create safety hazards. Make sure all equipment is rated and approved for the environment in which you are using it. Use equipment only for its intended purpose. Call your distributor for information. Route hoses and cables away from traffic areas, sharp edges, moving parts, and hot surfaces. Do not kink or over bend hoses or use hoses to pull equipment. Keep children and animals away from work area. Comply with all applicable safety regulations. |
|    | <p>PRESSURIZED EQUIPMENT HAZARD</p> <p>Fluid from the equipment, leaks, or ruptured components can splash in the eyes or on skin and cause serious injury.</p> <ul style="list-style-type: none"> Relieve Pressure when you stop spraying/dispensing and before cleaning, checking, or servicing equipment. Tighten all fluid connections before operating the equipment. Check hoses, tubes, and couplings daily. Replace worn or damaged parts immediately. |
|  | <p>TOXIC FLUID OR FUMES HAZARD</p> <p>Toxic fluids or fumes can cause serious injury or death if splashed in the eyes or on skin, inhaled, or swallowed.</p> <ul style="list-style-type: none"> Read Safety Data Sheets (SDSs) to know the specific hazards of the fluids you are using. Store hazardous fluid in approved containers, and dispose of it according to applicable guidelines. |
|  | <p>PERSONAL PROTECTIVE EQUIPMENT</p> <p>Wear appropriate protective equipment when in the work area to help prevent serious injury, including eye injury, hearing loss, inhalation of toxic fumes, and burns. Protective equipment includes but is not limited to:</p> <ul style="list-style-type: none"> Protective eyewear, and hearing protection. Respirators, protective clothing, and gloves as recommended by the fluid and solvent manufacturer. |

Component Identification


MP-20 and MP-40 Series

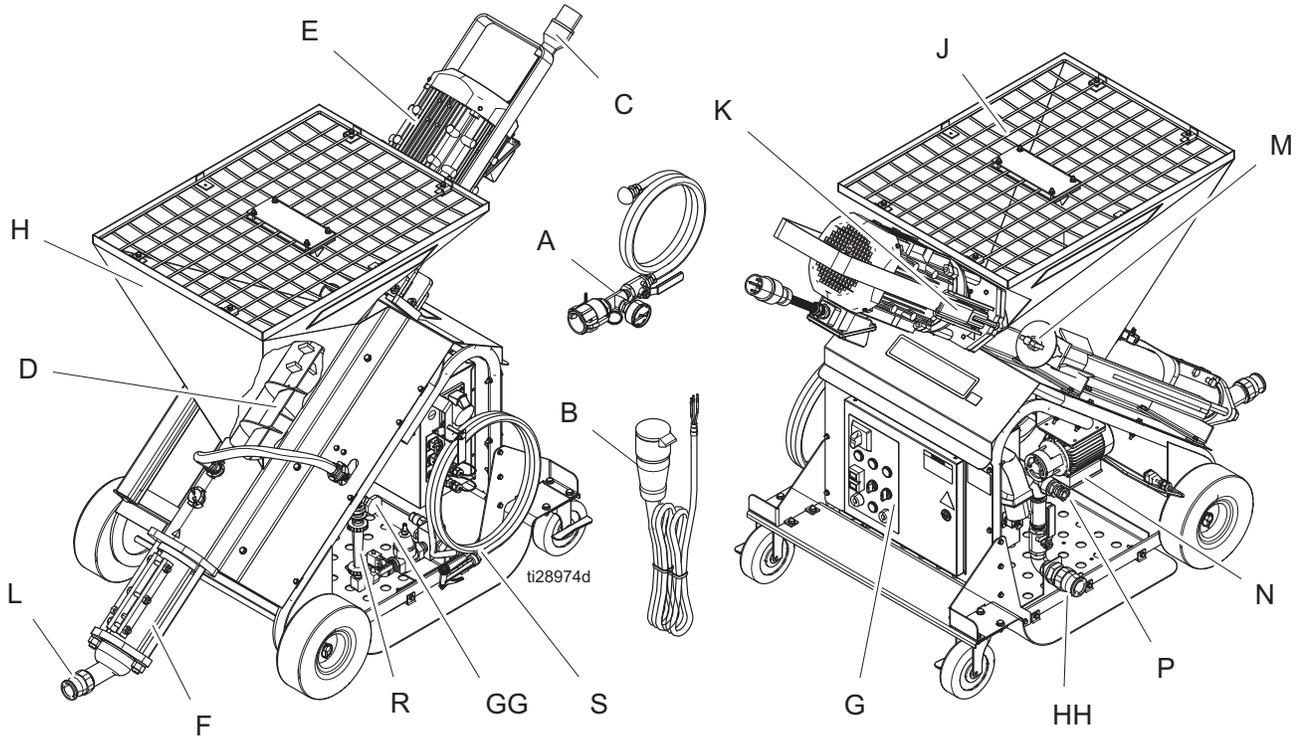

| Ref. | Description |
|------|--------------------|
| A | Pressure Test Hose |
| B | Power Cable |
| C | Motor Cable |
| D | Drive/Mix Shaft |
| E | Gear Box Motor |
| F | Rotor/Stator Pump |
| G | Control Box |
| H | Hopper |
| J | Hopper Grate |


| Ref. | Description |
|------|---------------------------------|
| K | Motor Latch |
| L | Pump Assembly Outlet |
| M | Clean-Out Shaft |
| N | Water Pump |
| P | Water Pump Inlet |
| R | Water Flow Meter |
| S | Wash-Down Hose |
| GG | Water Flow Adjustment Valve |
| HH | Water Pump System Bypass Outlet |

Control Box

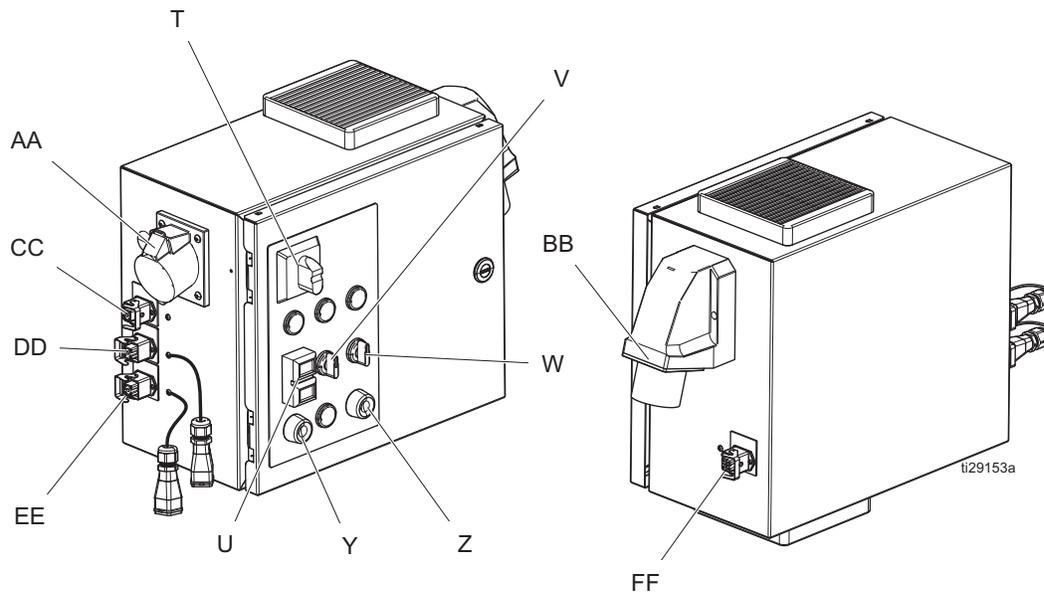


| Ref. | Description |
|------|--------------------------|
| AA | Power Out Connector |
| BB | Main Power In Connector |
| CC | Water Valve Connector |
| DD | Water Pressure Connector |
| EE | Remote Switch Connector |
| FF | Water Pump Connector |

Control Box Control Panel

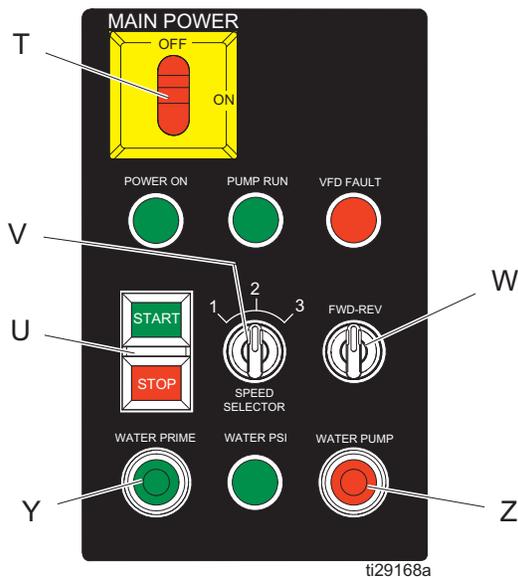

| Ref. | Description |
|------|---------------------------------------|
| T | Main Power Disconnect Switch |
| U | Start/Stop Push Button |
| V | Speed Selector Knob |
| W | Forward/Reverse Pump Direction Switch |
| Y | Water Prime Button |
| Z | Water Pump Button |

Water Pressure Over-ride Plug (OP)

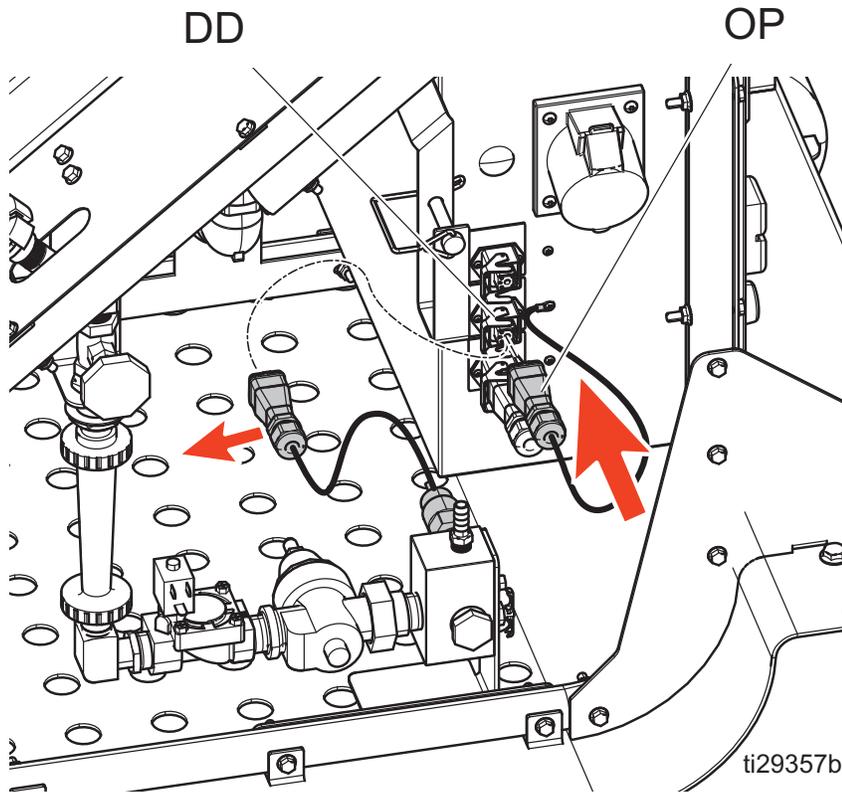


The water solenoid valve requires 40 psi of water pressure to be energized. If the water pressure is not 40 psi or greater, the solenoid valve will remain normally closed, blocking the flow of water. This operation can be overridden by unplugging the water pressure connector (DD) and connecting the water pressure override plug (OP). This mimics the signal that water pressure of 40 psi or greater is present, even when it is not.

Set Up




NOTE: For letter references, see **Component Identification**, page 6.


1. Assemble the drive/mix shaft (D) into the hopper and engage the flat end as shown below into the slot of the rotor (RS).

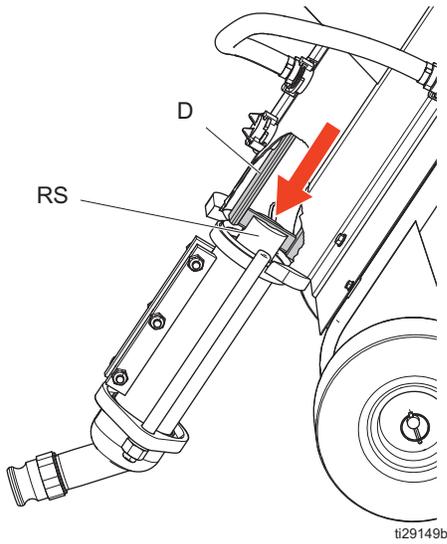


2. Slowly swing the motor assembly toward its closed position, stopping shortly before the motor shaft adapter (MS) and drive/mix shaft (D) touch.

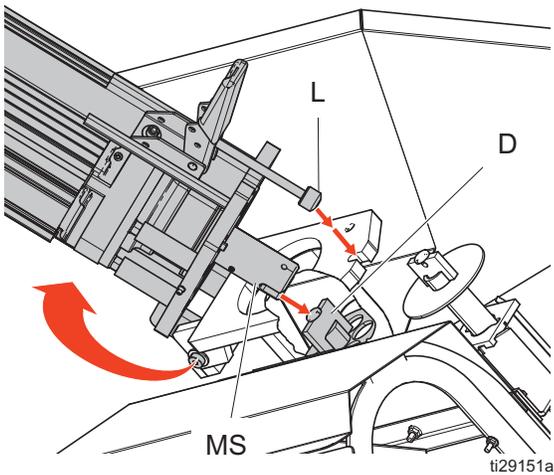

3. Make sure the motor shaft adapter (MS) and drive/mix shaft (D) are aligned so the drive shaft flat slides into the motor shaft adapter slot. If they do not align, rotate them into position.

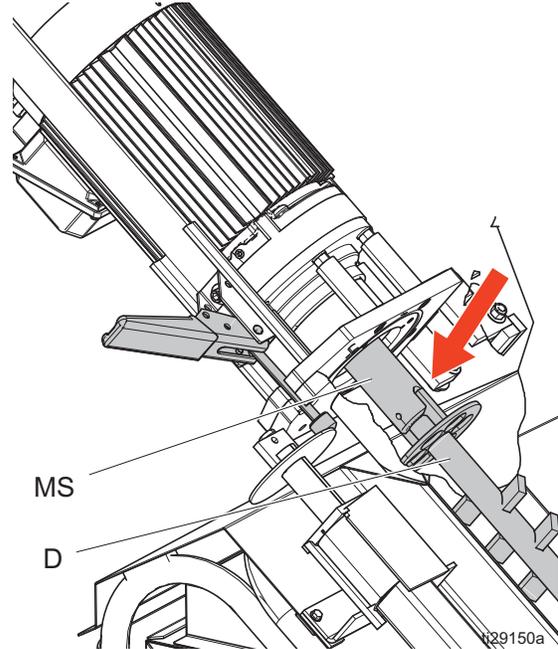


4. Swing the motor completely shut and lock it in place with the motor latch (K).

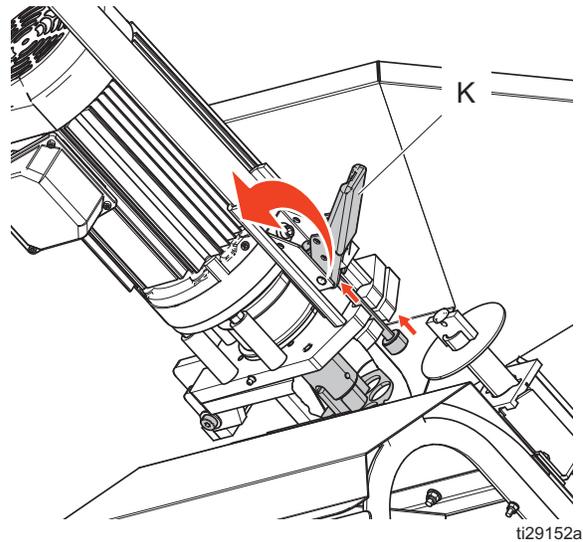

- Secure the hopper grate (J) onto the top of the hopper (H).

| | | | | |
|--|---|---|--|--|
|  |  |  | | |
| To help prevent injury from moving parts, do not operate with the grate (J) removed. | | | | |

- Connect the motor cable (C) to the power out connector (AA).

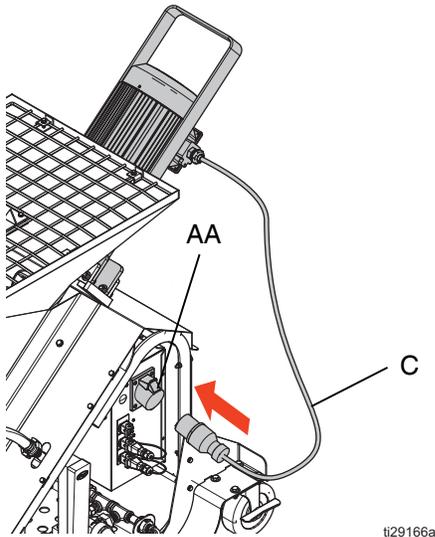

- Verify that the main power disconnect switch (T) is OFF.
- Connect the power cable (B) to an appropriate power source.
- Connect power cable (B) to the main power in connector (BB).

Electrical Connections

Power Cable Color Code

| | |
|---|--------|
| Power Cable MTA727 (for systems 25M060, 25M061, 25M064, 25M065): | |
| Line 1 | Black |
| Line 2 | White |
| Ground | Green |
| Power Cable MTA728 (for systems 25M062, 25M066): | |
| Line 1 | Black |
| Line 2 | White |
| Line 3 | Red |
| Ground | Green |
| Power Cable MTA851 (for systems 25M063, 25M067): | |
| Line 1 | Black |
| Line 2 | White |
| Line 3 | Red |
| Neutral | Orange |
| Ground | Green |

Grounding

| | | | | |
|---|--|---|---|--|
|  |  |  |  | |
| The equipment must be grounded to reduce the risk of static sparking and electric shock. Electric or static sparking can cause fumes to ignite or explode. Improper grounding can cause electric shock. Grounding provides an escape wire for the electric current. | | | | |

The system is grounded through the power cord.

Operation

NOTE: For letter references, see **Component Identification**, page 6.

Priming Hoses with Water




NOTICE

To prevent material curing in the hose, never load material into a dry hose. Loading material into a dry hose will cause the material to stick to components and cure, causing damage and requiring replacement of those parts.

Water Pump Models


1. Attach a water feed hose to the water pump inlet (P).

NOTE: The water pump inlet is 3/4 in. female garden hose fitting.

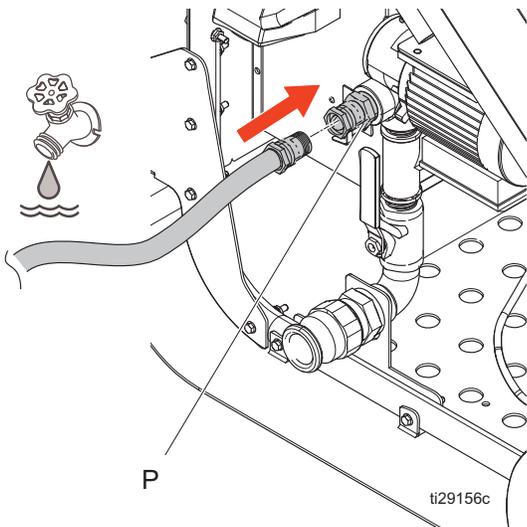


NOTE: The water feed must be able to supply water pressure of 30 psi or greater, or else the pump will not operate in the forward direction. A pressure switch that controls the pump forward direction operation activates at 30 psi to allow forward operation. If water pressure is below 30 psi and the pump must be operated in the forward direction, the pressure switch can be bypassed by connecting the water pressure bypass plug.

2. Attach the hose to the water pump system bypass outlet (HH).

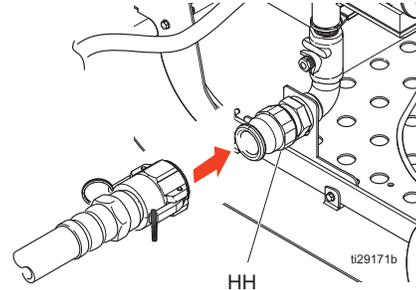

3. Place the end of the hose into a waste container.
4. Turn the main power disconnect switch (T) to ON.
5. Open the ball valve directly before the water pump system bypass outlet (HH).
6. Press the water pump button (Z) to turn on the water pump.

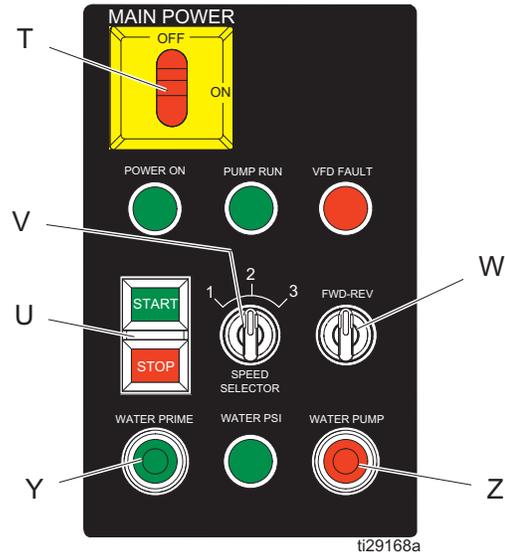


NOTICE

Do not allow the water pump to operate with no flow for more than five minutes. The water pump can become overheated and become damaged.

7. Run water until water flows from the end of the hose.
8. Press the water pump button (Z) to stop the water pump and close the ball valve directly before the water pump system bypass outlet (HH).

9. Run clean-out ball(s) to coat the inside of the hoses:
 - a. Remove the hose inlet from the water pump system bypass outlet (HH) and place a hose clean-out ball within the hose inlet. The ball must be wetted down before inserting. If using a 1 in. whip hose, begin with the smallest clean-out ball.

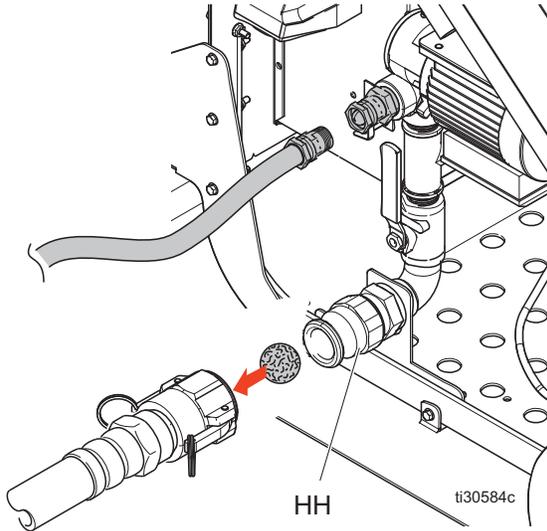


- b. Reattach the hose to the water pump system bypass outlet (HH), open the ball valve, and press the water pump button (Z) to resume flushing the hose.
- c. The clean-out ball will be pushed out of the hose after several minutes. Once the ball is pushed through the hose, press the water pump button (Z).
- d. If using a 1 in. whip hose, remove the hose and transition fitting and repeat the process using the large clean-out ball on the remaining hoses. Once the ball is pushed out, stop the water pump and reattach the transition fitting and whip hose.

10. After using the clean-out ball(s), close the ball valve, remove the hose inlet from the water pump system bypass outlet (HH), and attach the hose inlet to the pump outlet (L).

Non-Water Pump Models

1. Attach a water feed hose to the manifold inlet (P).

NOTE: The manifold inlet is 3/4 in. female garden hose fitting.

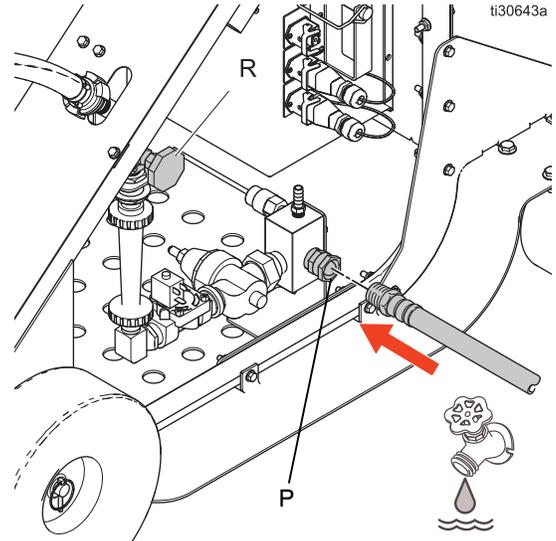

NOTE: The water feed must be able to supply water pressure of 30 psi or greater at the desired flow rate, or else the pump will not operate in the forward direction. A pressure switch that controls the pump forward direction operation activates at 30 psi to allow forward operation. If water pressure is below 30 psi and the pump must be operated in the forward direction, the pressure switch can be bypassed by connecting the water pressure bypass plug.


2. Attach the hose to the rotor/stator pump outlet.
3. Place the end of the hose into a waste container.
4. Turn the main power disconnect switch (T) to ON.
5. Fully open the water flow adjustment valve (GG) to allow maximum water flow through the system. Hold water prime button (Y) until hopper is partially filled with water.

Operation

6. Add slicking agent or dish soap to water in hopper and press the START button (U) to start the system.

NOTE: If the system does not operate, replace the pressure switch with the pressure bypass plug and refer to step 5 in **Priming System with Water**, page 15.


NOTE: Slicking agent is used to reduce friction and wear on the rotor/stator pump.

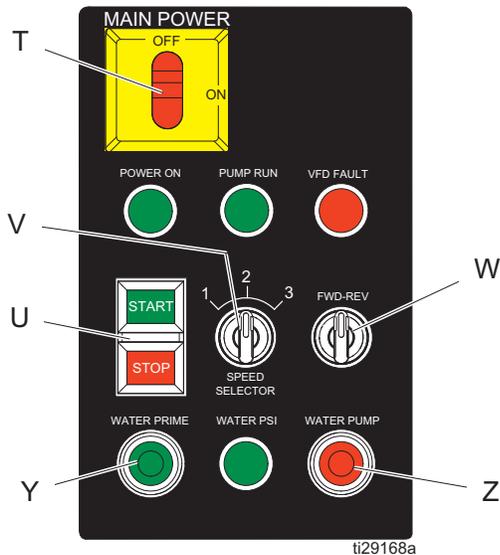

7. Run water until water flows from the end of the hose.
8. Press the STOP button (U) to stop the rotor/stator pump.
9. Run clean-out ball(s) to coat the inside of the hoses.
 - a. Remove the hose inlet from the rotor/stator outlet (L) and place a hose clean-out ball within the hose inlet. The ball must be wetted down before inserting. If using a 1 in. whip hose, begin with the smallest clean-out ball.
 - b. Reattach the hose to the rotor/stator outlet (L) and press the START button (U) to resume flushing the hose.
 - c. The clean-out ball will be pushed out of the hose after several minutes. Once the ball is pushed through the hose, press the STOP button (U).
 - d. If using a 1 in. whip hose, remove the hose and transition fitting and repeat the process using the large clean-out ball on the remaining hoses. Once the ball is pushed put, stop the rotor/stator pump and reattach the transition fitting and whip hose.

Priming System with Water

1. Remove the Geka fitting cap (GF) from the lower port.
2. Press the water pump button (Z), then hold the water prime button (Y) for several seconds. The water flow adjustment valve (GG) must be open. Once water flows from the lower port, release the water prime button (Y).

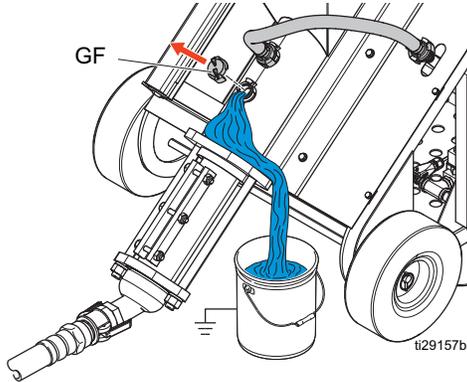

NOTE: If water does not fill the mixing chamber, see **Startup After Extended Storage**, page 22, or contact Graco Technical Support.

3. Add dish soap or a slicking agent to the water through the lower port and replace the Geka fitting cap (GF).

NOTE: When priming with water, add dish soap or a slicking agent to help lubricate the pump. Priming with water only may cause excessive pump friction, producing a high pitch noise and premature pump wear.

4. Turn the speed selector knob (V) to speed 1 and press the START button (U). Press the STOP button (U) once the pump starts rotating freely.

NOTE: Do not run the rotor/stator pump with water for more than five minutes at a time or premature pump wear may occur.

5. If the pump does not rotate within five seconds of pressing the START button (U), with the pump on, quickly turn the pump direction switch (W) between forward and reverse.

NOTE: The pump direction switch (W) is normally in the FWD position. The switch must be held in the REV position to reverse the pump direction. The switch will return to the FWD position when it is released.


NOTE: If the pump has not broken free after five seconds, press the STOP button (U) or the motor control could encounter an overload error. After multiple attempts to free the pump, allow the motor to cool for one minute and see **Troubleshooting**, page 24.

6. Remove the hose inlet from the pump outlet (L) and walk the water out of the hose.
 - a. Starting at the pump, elevate the hose and slowly move towards the hose outlet. As you move towards the hose outlet, the remaining water will drain from the hoses.
7. Perform **Pump Pressure Setting** procedure, page 16.
8. Reattach the hose to the pump outlet (L). The system is ready to prime with material.


Pump Pressure Setting



1. Attach the pressure test hose (A) to the pump outlet (L) with the pressure test hose ball valve turned to OPEN.

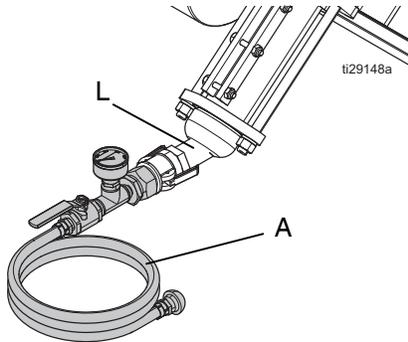


2. Place the end of the hose in a waste container.
3. Press the START button (U). Water should flow from the outlet of the pressure test hose.

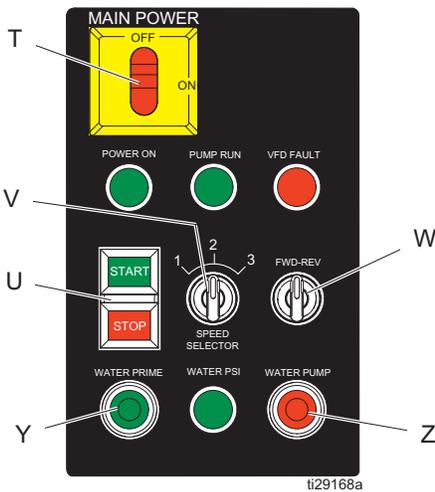

4. Set the water flow meter (R) to the approximate level needed for pumping material by adjusting the water flow adjustment valve (GG).
 - 2.5 gpm for MP-20
 - 5 gpm for MP-40
5. Use the speed selector knob (V) to change the pump speed to level 2.

6. Slowly close the pressure test hose ball valve.

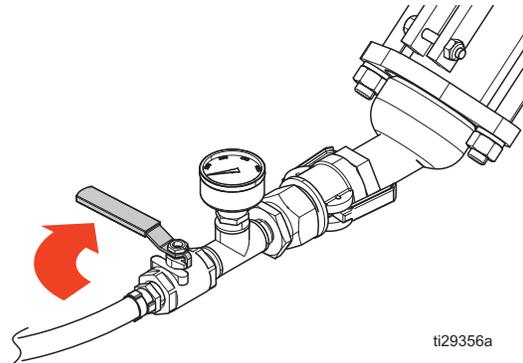


7. Observe the pressure setting on the pressure gauge.
8. Slowly open the pressure test hose ball valve to relieve any remaining pressure.
9. Press the STOP button (U).
10. To increase pressure, evenly tighten the stator bolts. Evenly loosen the stator bolts to decrease pressure.
11. Repeat steps 3-10 until desired pressure is achieved.

NOTE: Over-tightening the stator can wear out the stator prematurely. Under-tightening the stator will cause the pump to under perform and have reduced output. System is factory-set to a pressure of approximately 300 psi.

12. Remove the pressure test hose (A) from the pump outlet (L).

Prime and Pump Material

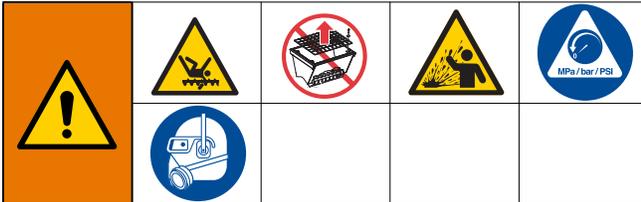

To help prevent injury from moving parts, do not operate with the grate (J) removed.

To prevent injury from splashing fluid, always follow the **Pressure Relief Procedure**, page 18, before disconnecting any hoses or hose fittings.

Hose pack-out can occur while using this equipment. During a pack-out, equipment and fluid will stay pressurized. If a pack-out occurs, follow the **Pressure Relief Procedure**, page 18, before disconnecting any hoses or hose fittings.

NOTE: To reduce risk of a hose pack-out, pump material using the shortest required length of hose.

Prime and Pump

1. Prime the hoses and system with water. See **Priming Hoses with Water** (page 12) and **Priming System with Water** (page 15).
2. Verify that material hose is attached to the pump outlet.

NOTE: To reduce waste, use a short length of hose while adjusting the material consistency. Additional hose lengths can be added once desired material consistency is achieved.

3. Add dry material:




Adding material to the hopper generates clouds of dust, and exposes the user to the sharp teeth on the hopper grate. Always wear protective equipment when adding material to the hopper.

Set a bag of material on the center of the hopper grate (G) so the teeth are in the middle of the bag. Twist the bag 15 degrees in both directions to rip open, and lift both ends of the bag so the dry material falls into the hopper. Dispose of the bag.

NOTE: Keep the hopper filled with dry material when priming with material and pumping.

4. Press the water pump button (Z) (on water pump models) and START button (U). Material should start to flow from the hose outlet (L).

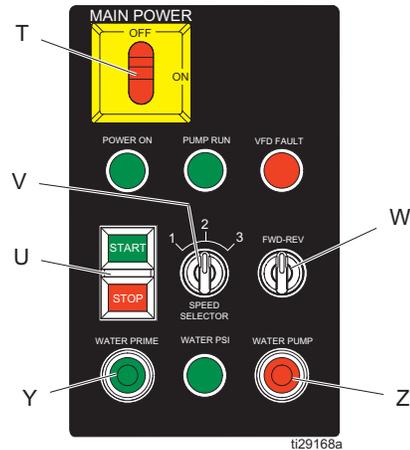

5. Adjust the water flow rate using the water flow adjustment valve (GG) until the desired material consistency is achieved.
6. Pump and apply material according to material manufacturer's specifications.

NOTE: To stop dispensing momentarily, press the water pump button (Z) (on water pump models) and STOP button (U). To resume dispensing, press the water pump button (Z) and START button (U).

If the material is approaching its cure time, or if the system will be idle for enough time for material to begin curing in the system, **Flush** the system (see page 19).

| NOTICE |
|---|
| Failure to flush prior to material curing in the system will result in damage to the system and may require replacement of all system parts in contact with material. |

7. When pumping is completed, press the water pump button (Z) and the STOP button (U).
8. Follow **Shutdown**, page 21.

Pressure Relief Procedure



Follow the Pressure Relief Procedure whenever you see this symbol.



This equipment stays pressurized until pressure is manually relieved. To help prevent serious injury from pressurized fluid, such as splashing fluid and moving parts, follow the Pressure Relief Procedure when you stop dispensing and before cleaning, checking, or servicing the equipment.

1. Push the STOP button (U).
2. Hold the hose outlet firmly against a designated waste container.
3. Turn the speed control knob (V) to speed 1.
4. Hold the pump direction switch (W) in the REV position and push the START button (U).
5. Allow the pump to run in reverse for several seconds while holding the pump direction switch (W) in the REV position.

NOTE: If the pump is stalled, do not run the pump for more than five seconds at a time or the motor control could encounter an overload error. After multiple attempts to free the pump, allow the motor to cool for one minute.

6. Push the STOP button (U) after five seconds and release the pump direction switch (W). The switch will return to its normal FWD position.
7. Turn the main power disconnect switch (T) to OFF.
8. If you suspect the hose is still clogged or that pressure has not been fully relieved after following the previous step:
 - a. Starting at the open hose outlet, **VERY SLOWLY** open the coupling while maintaining control of the hose.
 - b. Clear the hose. If there is still pressure trapped down the line, work your way back to the pump by individually opening each coupling between each hose connection. Maintain control of each hose and **VERY SLOWLY** open each coupling until pressure has been fully relieved.


System Flush



NOTICE


Failure to flush prior to material curing in the system will result in damage to the system and may require replacement of all system parts in contact with material.

1. With the pump stopped, turn the speed control knob (V) to speed level one.

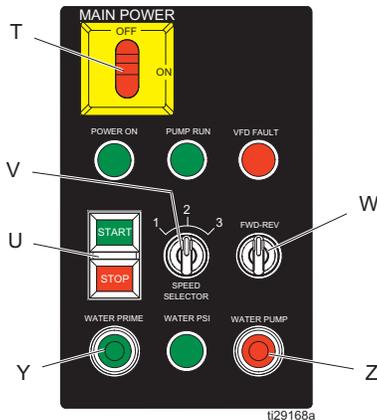

2. Place the hose outlet in a waste container.
3. Flush material from the hopper and the mixing chamber.
 - a. Press the water pump button (Z) (on water pump models) and START button (U) to begin flushing out any remaining material until the hopper is empty.
 - b. Once the hopper is empty of all material, press the STOP button (U) to stop the pump.
 - c. Rinse the hopper (H) with the attached water wash-down hose (S).
 - d. Press the START button (U) and run the pump until no water is left inside the hopper.
4. If there is still material left in the mixing chamber after flushing with water, use the clean-out shaft (M).
 - a. Turn the main power disconnect switch (T) to OFF.
 - b. Undo the motor latch (K) and swing the motor assembly (E) open.

- c. Remove the drive/mix shaft (D) and replace with the clean-out shaft (M).

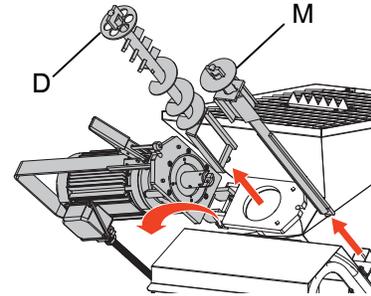

NOTE: Only use the clean-out shaft (M) if material cannot be cleaned using normal flushing means. Excessive use of the clean-out shaft can cause premature wear to the system.

- d. Slowly swing the motor assembly toward its closed position, stopping shortly before the motor shaft adapter (MS) and clean-out shaft (M) touch.
- e. Make sure the motor shaft adapter (MS) and clean-out shaft (M) are aligned so the clean-out shaft flat slides into the motor shaft adapter slot. If they do not align, rotate them into position.
- f. Swing the motor completely shut and lock it in place with motor latch (K).
- g. Turn the main power disconnect switch (T) to ON and press the water pump button (Z) (on water pump models).
- h. Spray the hopper (H) with water.

NOTICE


Only run the pump with the clean-out shaft (M) while the speed control knob (V) is set to level one. Using the clean-out shaft at higher speed levels may cause damage to shaft and hopper.

- i. Press the START button (U) and run the pump until no water is left in the hopper. Press the STOP button (U) and water pump button (Z) (on water pump models) to stop the pump.
 - j. Make sure the mixing chamber is clean. If not, repeat step 5h and 5i until clean.
 - k. Repeat steps 5a through 5f, but replace the clean-out shaft (M) with the drive/mix shaft (D).
5. Remove the hose inlet from the pump outlet (L) and attach the hose to the water pump system bypass outlet (HH).

Hose Flush

Water Pump Systems

1. Attach hose to the water pump system bypass outlet (HH).
2. Open the water pump outlet ball valve and press the water pump button (Z). Run until heavy sediment has been flushed and clean water begins to exit the hose outlet.
3. Press the water pump button (Z) to stop dispensing and close the ball valve.
4. Remove the remaining material in the hoses with a hose clean-out ball:
 - a. Place the hose outlet into a waste container.
 - b. Remove the hose inlet from the water pump outlet and place a hose clean-out ball within the hose inlet. The ball must be wetted down before inserting. If using a 1 in. (25 mm) whip hose, begin with the smallest clean-out ball.

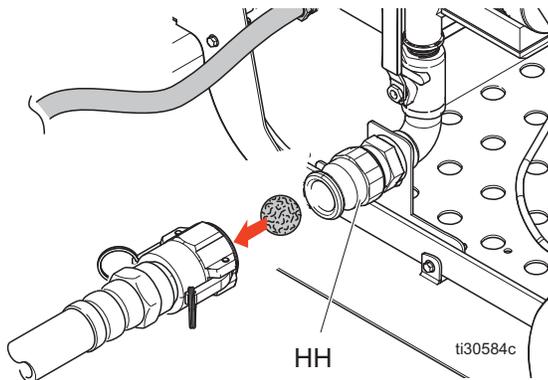

- c. Reattach the hose to the water pump system bypass outlet (HH), open the ball valve, and press the water pump button (Z) to resume flushing the hose.
- d. The hose clean-out ball will be pushed out of the hose after several minutes. Once the ball is pushed through the hose, press the water pump button (Z). Repeat until all sediment is removed from the hose.
- e. If using a 1 in. (25 mm) whip hose, remove the hose and transition fitting and repeat the process using the large clean-out ball on the remaining hoses. Once the ball is pushed out, stop the water pump. Insert the large clean-out ball and flush the hose repeatedly until

sediment is removed from the hose. Then reattach the transition fitting and whip hose.

5. Turn the main power disconnect switch (T) to OFF.
6. Dispose of all waste material in accordance with local rules and regulations. See manufacturer SDSs for additional information.

Non-Water Pump Systems

1. Attach hose to the rotor/stator pump outlet.
2. Open the water flow adjustment valve (GG) entirely to allow maximum water flow through the system and hold water prime button (Y) until hopper is partially filled with water.
3. Add slicking agent or dish soap to water in hopper. Run rotor/stator pump until heavy sediment has been flushed and clean water begins to exit the open hose outlet.

NOTE: If the system does not operate, replace the pressure switch with the pressure bypass plug.

NOTE: Slicking agent is used to reduce friction and wear on the rotor/stator pump.

4. Press the STOP button (U) to stop pumping water.
5. Remove the remaining material in the hoses with a hose clean-out ball.
 - a. Place the hose outlet into a waste container.
 - b. Remove the hose inlet from the rotor/stator pump outlet and place a hose clean-out ball within the hose inlet. The ball must be wetted down before inserting.

NOTE: If using a 1 in. (25 mm) whip hose, begin with the smallest clean-out ball.

- c. Reattach the hose to the rotor/stator pump outlet and press the START button (U).
- d. The hose clean-out ball will be pushed out of the hose after several minutes. repeat until all sediment is removed from the hose.
- e. If using a 1 in. (25 mm) whip hose, remove the hose and transition fitting and repeat the process using the large clean-out ball on the remaining hoses. Once the ball is pushed out, stop the system and reattach the transition fitting and whip hose.

6. Turn the main power disconnect switch (T) to OFF.
7. Dispose of all waste material in accordance with local rules and regulations. See manufacturer SDSs for additional information.

Shutdown


1. Follow **System Flush** (page 19) and **Hose Flush** (page 20).
2. Disconnect the power supply.
3. Drain water from the water pump system.

NOTICE

In cold environments, water left in the pump system could freeze and damage the equipment. When working in cold environments, drain all water from the pump system to avoid damage.

Winterizing and Extended Storage

1. Connect the power cable to the appropriate power source and turn the main power disconnect switch (T) to ON.
2. If connected to the water pump inlet, disconnect the water feed hose.
3. Disconnect the water assembly hose (WH) from the water assembly control inlet (WC). Loosen the drain cock (DC) behind the water flow meter, fully open the water flow adjustment valve (GG), fully open the water pump ball valve (BV), and then open the spray gun latch on the water wash-down hose (S).

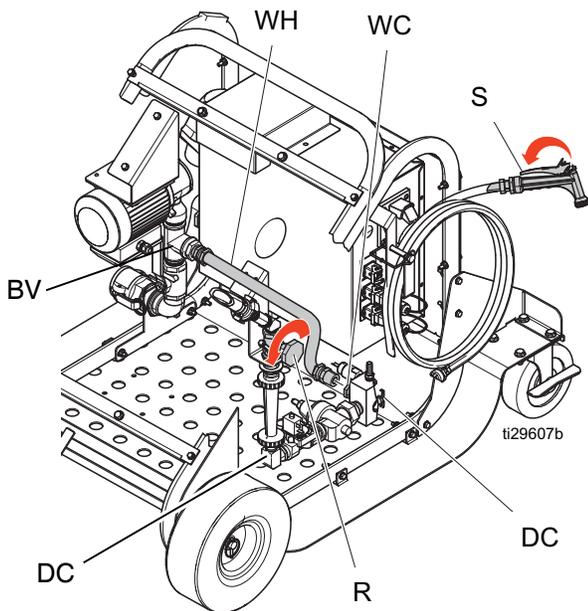


4. Press and hold the water prime button (Y) until water has stopped draining from all openings, then release the button.
5. Press the water pump button (Z) (on water pump models) to turn the water pump on and let it run for 15 seconds to expel any excess water. Press the button again to stop the water pump.
6. Turn the main power disconnect switch (T) to OFF and disconnect from the power supply.
7. Leave all components open and detached until the next use.
8. Make sure the motor has been fully greased and the mixing pump has been thoroughly cleaned and no material remains.

Startup After Extended Storage For Water Pump Models

Reassemble all disconnected hoses and close all water drain openings before startup.

If the pump will not startup after an extended period of storage, perform the following steps:

1. Loosen the three bolts on the end cap by approximately two turns.
2. Insert a flat screwdriver blade into the provided slots between the end cap and the pump head.
3. Gently pry on both sides until the cover lifts off the pump head.

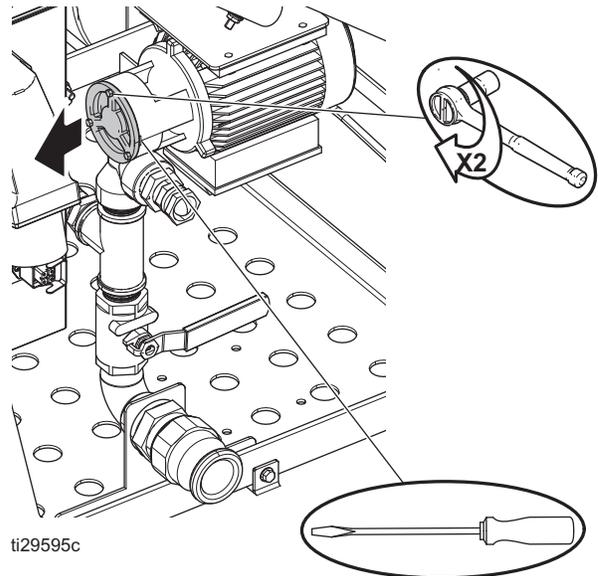

4. Restart the water pump and observe that it starts up and operates correctly. While the pump is running, tighten the three bolts.
5. Press the water pump button (Z) (on water pump models) to turn off the water pump and press and hold the water prime button (Y).
6. Slowly open the flow meter valve until water can be seen passing through the flow meter.
7. Release the water prime button (Y) and make sure the water has stopped. The mixing pump is now ready for use.

Routine Maintenance



The following maintenance should be performed daily:

1. Flush the system (see **Flush**, page 19).
2. Perform the **Pressure Relief Procedure**, page 18.
3. Clean the hopper with a scrub pad. It is recommended that you clean the outside of the sprayer with a cloth and water.

NOTICE


Failure to clean properly after use will damage seals and moving parts due to wear from material build-up. To avoid damage, properly clean the unit after each use.


4. Check the pump, seals, hoses, couplings, and cables for wear and damage. Replace if necessary.
5. Grease seals daily via the grease fitting (GF) located on the motor flange. Use water resistant, corrosion inhibited grease.

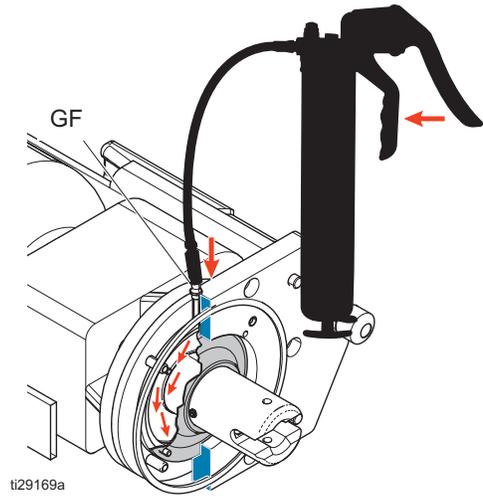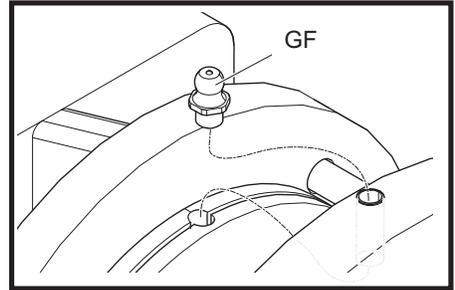

t129169a

Troubleshooting

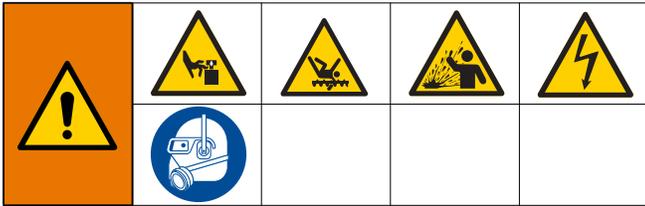
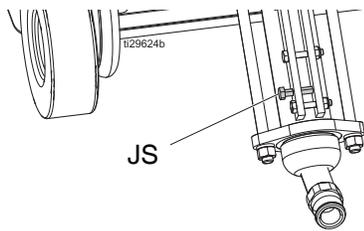
| Problem | Cause | Solution |
|---|--|---|
| The rotor/stator pump operates, but output is low | Pump pressure is too low, stator is too loose. | Tighten stator to achieve suitable pumping pressure. |
| | Pump pressure is too high, stator is too tight. | Loosen stator to achieve suitable pumping pressure. |
| | Stator is worn or damaged. | Tighten stator. If low output continues, replace stator. |
| | Rotor is worn or damaged. | Tighten stator. If low output continues, replace stator. |
| | Material hose is clogged. | Clean or replace the material hose. |
| | Large pressure drop in material hose. | Reduce hose length and/or increase diameter. |
| Pump does not operate | Stator sleeve is too tight. | Evenly loosen the stator bolts to reduce pressure. If the pump still does not operate when bolts are loose, engage the jacking screw (JS) to further open the stator sleeve. This should reduce pressure enough to allow the pump to run. Once running, re-tighten the stator bolts to achieve appropriate pump pressure.  |
| | VFD overload fault. | Turn power disconnect switch to OFF and wait one minute for VFD to reset. See "VFD overload fault," below, for possible causes. |
| | Material hose is obstructed. | Clean or replace the hose. |
| | Dried material in pump assembly. | Clean or replace the pump assembly. |
| Pump is noisy when pumping | Pumping water without dish soap or a slick agent. | Add dish soap or a slicking agent to the water |
| | Pump is running with no material or fluid in the hopper. | Add material to hopper or shut off pump. |
| Erratic accelerated speed | Material supply exhausted. | Refill the hopper and prime pump with material. |

| Problem | Cause | Solution |
|--|--|---|
| Motor is powered but nothing comes out of the hose | Pump pressure is too high, stator is too tight. | Loosen stator to achieve suitable pumping pressure. |
| | Pump is packed out with dry or cured material. | Disassemble and clean the pump. |
| | Hose is packed out with dry or cured material. | Clean or replace the material hose. |
| Material is too thick to push through the hose without packing out | Hose is too restrictive. | Thin and mix material thoroughly to a lower viscosity if material supplier allows. |
| | | Use a pump system priming fluid (dish soap or slicking agent) to wet out the system. |
| | | Reduce length and/or increase diameter of hose. |
| Electric motor will not start or stops during operation | Loose connections. | Check connections in electrical enclosure. Check for correct voltage supply at the disconnect and VFD terminals L1, L2, L3. |
| | Motor overload relay trips. | Turn power disconnect switch to OFF and wait one minute for VFD to reset. Allow the motor to cool if conditions occur frequently. See "VFD overload fault," below, for possible causes. |
| VFD overload fault | The VFD detects a motor overload due to motor slowing down under a high current condition. | Reduce motor load. |
| | | Lower pressure. |
| | | Reduce length and/or increase diameter of hose. |
| Water Pump will not run | Extended period of time without use. | See Startup After Extended Storage , page 22. |
| | Not properly winterized. | If any water pump system components are damaged, replace as necessary or see Startup After Extended Storage , page 22. |

Error Codes on the Display

| Error Code | Fault Description | Corrective Action |
|--|--|---|
| oc | Over current | Check the wiring connections to U/T1, V/T2, W/T3 for possible short circuits or shorts to ground. |
| | | Check for loose contacts between AC motor drive and motor. |
| | | Check for possible excessive loading conditions at the motor. |
| ov | Over voltage | Check if the input voltage falls within the rated AC motor drive input voltage range. |
| | | Check for possible voltage transients. |
| oH1 oH2 | Overheating | Make sure that the ambient temperature falls within the specified temperature range. |
| | | Make sure that ht ventilation holes are not obstructed. |
| | | Remove any foreign objects from the heat sinks and check for possible dirty heat sink fins. |
| | | Check the fan and clean it. |
| Lv | Low voltage | Check whether the input voltage falls within the AC motor drive rated input voltage range. |
| | | Check for abnormal load in motor. |
| | | Check for correct wiring of input power to R-S-T (for 3-phase models) without phase loss. |
| oL | Overload - The VDF detects excessive drive current | Check whether the motor is overloaded. |
| oL1 | Overload 1 - Internal electronic overload trip | Check for possible motor overload. |
| oL2 | Overload 2 - Motor overload | Reduce the motor load. |
| GFF | Ground fault | Check for possible poor insulation at the output line. |
| cFA | Auto acceleration or deceleration failure | Load may have changed suddenly. |
| AErr | Analog signal error | Check the wiring of the ACI. |
| PHL | Phase loss | Check the input phase wiring for loose contacts. |
| ocA | Over current during acceleration | Short-circuit at motor output: Check for possible poor insulation at the output line. |
| ocd | Over current during deceleration | Short-circuit at motor output: Check for possible poor insulation at the output line. |
| ocn | Over current during constant speed | Short-circuit at motor output: Check for possible poor insulation at the output line. |
| | | Sudden increase in motor loading: Check for possible motor stall. |
| NOTE: If the display shows any error codes not listed in this table, call Graco Technical Assistance. | | |

Repair


Rotor/Stator Pump Repair



1. Before performing repair, flush the system (see **Flush**, page 19).
2. Disconnect the mixing pump from the power source.
3. Remove the retaining nuts (31) and washers (32) to disconnect the nozzle (29) and rotor/stator pump (RS) from the hopper. Replace any parts if necessary.

If Replacing Both the Rotor and the Stator

1. If not assembled together, join the new rotor (27) with the new stator (28) by placing the stator (28) in a vise and screwing in the rotor (27) using a flat bar or wrench.

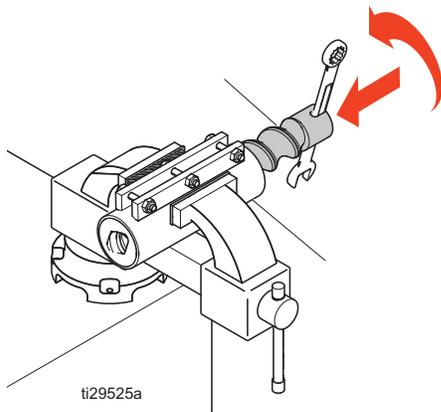


NOTE: Apply a lubricant to the rotor and stator beforehand to improve ease of assembly.

NOTE: Do not screw the non-slotted end of the rotor past the end of the stator. It should be flush or positioned slightly within the stator. If the rotor sticks out past the stator end, the nozzle will not fit onto the end of the ties rods correctly.


2. With the new rotor/stator assembly, join the stator (28), o-ring (25), pump adapter (26), and flange plate (FP) together.
3. Assemble the nozzle (29), nuts (31), and washers (32). Torque the nuts to 60 ft-lb (81 N•m).

If Replacing Only the Rotor or the Stator

1. Place the rotor/stator pump (RS) assembly in a vise.
2. Turn the rotor (27) counterclockwise with a flat bar or wrench to remove the rotor (27) from the stator (28).

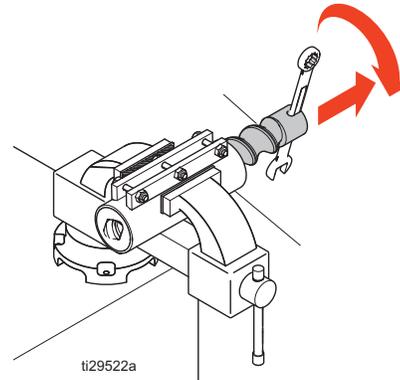

3. Replace the worn rotor (27) or stator (28) with a new part, then screw the rotor (27) clockwise back into the stator (28).

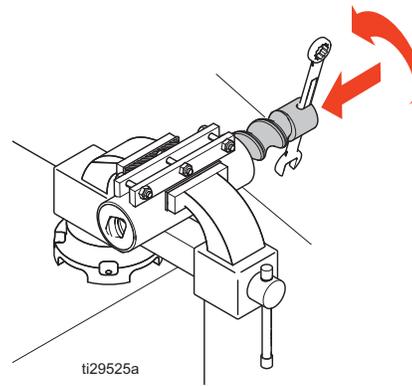

NOTE: Apply a lubricant to the rotor and stator beforehand to improve ease of assembly.

NOTE: Do not screw the non-slotted end of the rotor past the end of the stator. It should be flush or positioned slightly within the stator. If the rotor sticks out past the stator end, the nozzle will not fit onto the end of the ties rods correctly.




4. With the new rotor/stator assembly, join the stator (28), o-ring (25), pump adapter (26), and flange plate (FP) together.
5. Assemble the nozzle (29), nuts (31), and washers (32). Torque the nuts to 60 ft-lb (81 N•m).

Motor Seal Replacement

Take special note of the groove positions of the grease seal (GS), in relation to the grease hole in the flange plate (FP) and the grease fitting (GF). The groove gives a path for the grease to get into the cavity behind the grease seal.


Use a grease that has high water resistance and high compression protections. If necessary, add grease on a daily basis, or after each time the unit is cleaned down.

The illustration below shows the grease seal (GS) in a deformed state, as it should be when the motor assembly is complete and the seal is full of grease.

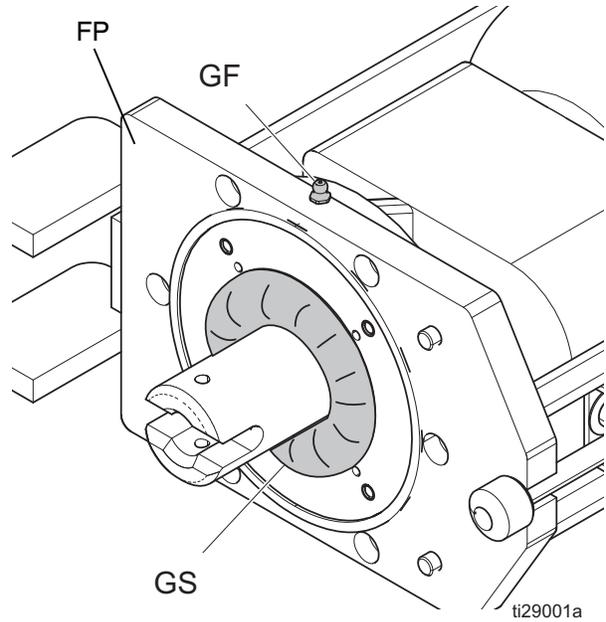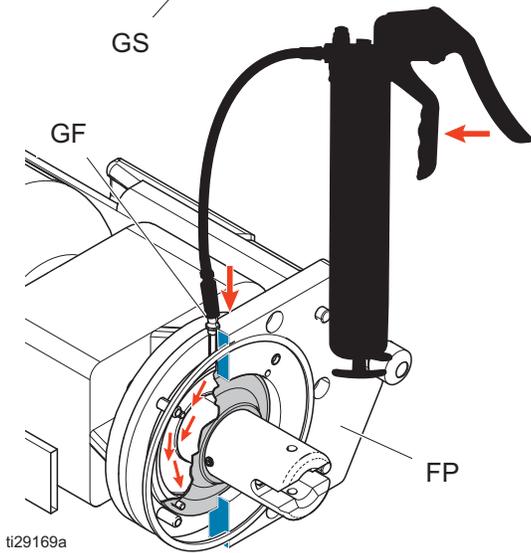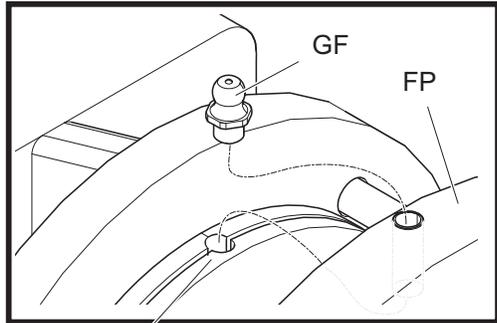

Parts

MP-20 and MP-40 Series Parts

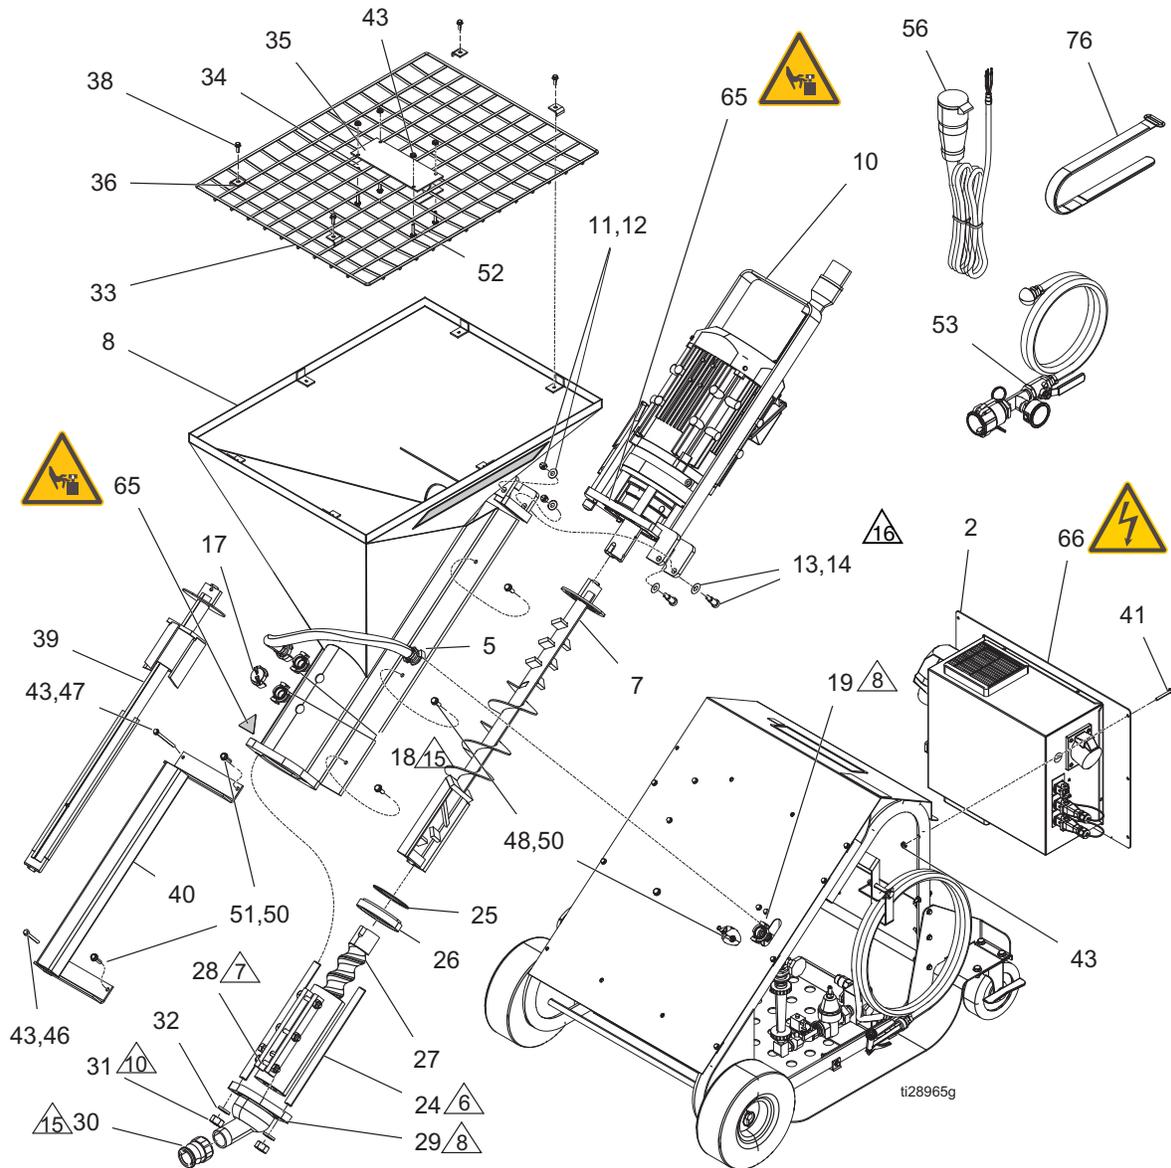


-  Apply pipe sealant to threads only on the flange side of the hopper (8).
-  Apply grease lubricant to both ends of the inside of the stator (28).
-  Apply pipe sealant to pipe threads.
-  Torque to 60 +/- 5 ft-lb (81 +/- 6.7 N•m).
-  Apply pipe sealant to threads.
-  Dust cap (85) included on non-water pump systems.

MP-20 and MP-40 Parts List

| Ref. | Part | Description | Qty. | Ref. | Part | Description | Qty. |
|------|---------|---|------|------|---------|--|------|
| 2 | MTA708 | ENCLOSURE, control assy (for MP-20) see page 43 | 1 | 30 | 128474 | FITTING, 1.5 in. camlock m x 1.5 in. npt f | 1 |
| | MTA709 | ENCLOSURE, control assy (for MP-20 16A) see page 43 | 1 | 31 | C19187 | NUT, nex | 2 |
| | MTA710 | ENCLOSURE, control assy (for MP-40) see page 43 | 1 | 32 | 101015 | WASHER, lock | 2 |
| | MTA711 | ENCLOSURE, control assy (for MP-40 380V) see page 43 | 1 | 33 | ☼ | GRATE, hopper | 1 |
| 5 | MTA804 | HOSE, assy, water | 1 | 34 | ✱ | PLATE, blade, weldment | 1 |
| 7 | MTA712 | SHAFT, drive (for MP-20, MP-20 16A) | 1 | 35 | ✱ | PLATE, breaker, bag, cont mixer | 1 |
| | MTA713 | SHAFT, drive (for MP-40, MP-40 380V) | 1 | 36 | ☼* | BRACKET, plate, hopper | 4 |
| 8 | ----- | HOPPER, assy | 1 | 38 | ☼* | SCREW, flanged, hex hd | 4 |
| 10 | MTA738 | MOTOR, assembly, w/ frame (for MP-20, MP-20 16A) see page 39 | 1 | 39 | MTA706 | SHAFT, clean out, assembly | 1 |
| | MTA729 | MOTOR, assembly, w/frame (for MP-40) see page 40 | 1 | 40 | ----- | FRAME, assy, rack clean-out | 1 |
| | MTA736 | MOTOR, assembly, w/frame (for MP-40 380V) see page 41 | 1 | 41 | ----- | SCREW, hex, serrated, 1/4-20 x 2.00 | 15 |
| 11 | ----- | NUT, lock | 2 | 42 | ----- | WASHER, flat, fender, 1/4 | 4 |
| 12 | ----- | WASHER, 3/8 plain flat | 2 | 43 | 115942✱ | NUT, hex, flange head | 32 |
| 13 | 126833 | SCREW, shoulder, socket head | 2 | 46 | ----- | SCREW, hex, serrated, 1/4-20 x 2.50 | 1 |
| 14 | 109570 | WASHER, plain | 2 | 47 | ----- | BOLT, hex, 1/4-20 x 3 3/4 | 1 |
| 17 | MTA012 | FITTING, Geka, cap, end | 1 | 48 | 112586 | SCREW, cap, hex hd | 4 |
| 18 | MTA236 | FITTING, Geka, 3/4 in. male pipe | 2 | 50 | 110996 | NUT, hex, flange head | 2 |
| 24 | ----- | STUD, 3/4-10 x 13.25 | 2 | 51 | ----- | SCREW, flange, hex, 5/16-18 x 1.25 | 2 |
| 25 | 117337 | O-RING | 1 | 52 | 120444✱ | SCREW, hex hd, flanged | 4 |
| 26 | MTA374 | ADAPTER, pump, 90mm (for MP-20, MP-20 16A) | 1 | 53 | 17N886 | HOSE, water, tester, 1.5 in. female camlock | 1 |
| | MTA062 | ADAPTER, pump, 113.5mm (for MP-40, MP-40 380V) | 1 | 56 | MTA727 | HARNESS, power, single phase (for MP-20, MP-20 16A) | 1 |
| 27 | MTA719† | ROTOR, D8-1.5, green (for MP-20, MP-20 16A) | 1 | 56a | MTA007 | PLUG ONLY, power, single phase (MP-20, MP-20 16A) | 1 |
| | MTA722❖ | ROTOR, R7-1.5, yellow (for MP-40 380V) | 1 | 56 | MTA728 | HARNESS, power, three phase (for MP-40) | 1 |
| 28 | MTA720† | STATOR, D8-1.5, green (for MP-20, MP-20 16A) | 1 | 56a | MTA935 | PLUG ONLY, power, three phase (MP-40) | 1 |
| | MTA723❖ | STATOR, R7-1.5, yellow (for MP-40, 380V) | 1 | 56 | MTA851 | HARNESS, power, three phase (for MP-40 380V) | 1 |
| 29 | MTA725 | NOZZLE, output, assembly (for MP-20, MP-20 16A) | 1 | 65▲ | 15H108 | LABEL, safety, warning, pinch | 2 |
| | MTA726 | NOZZLE, output, assembly (for MP-40, MP-40 380V) | 1 | 66▲ | 196548 | LABEL, warning, shock | 1 |
| | | | | 76 | 114271 | STRAP, retaining | 1 |
| | | | | 85 | MTA985 | COVER, dust, lapp | 1 |

| Symbol | Kit | Description | Included in Kit: Ref. (Qty.) |
|--------|--------|---|--------------------------------|
| † | MTA721 | D8-1.5 rotor/stator kit, green (for MP-20, MP-20 16A) | 27 (1), 28 (1) |
| ❖ | MTA724 | R7-1.5 rotor/stator kit, yellow (for MP-40, MP-40 380V) | 27 (1), 28 (1) |
| ☼ | MTA715 | Hopper Grate Assembly Kit | 33 (1), 36 (4), 38 (4) |
| ☼* | MTA756 | Bracket Replacement Kit | 36 (1), 38 (1) |
| ✱ | MTA718 | Hopper Bag Breaker Kit | 34 (1), 35 (1), 43 (4), 52 (4) |

MP-20 and MP-40 Series Parts (continued)

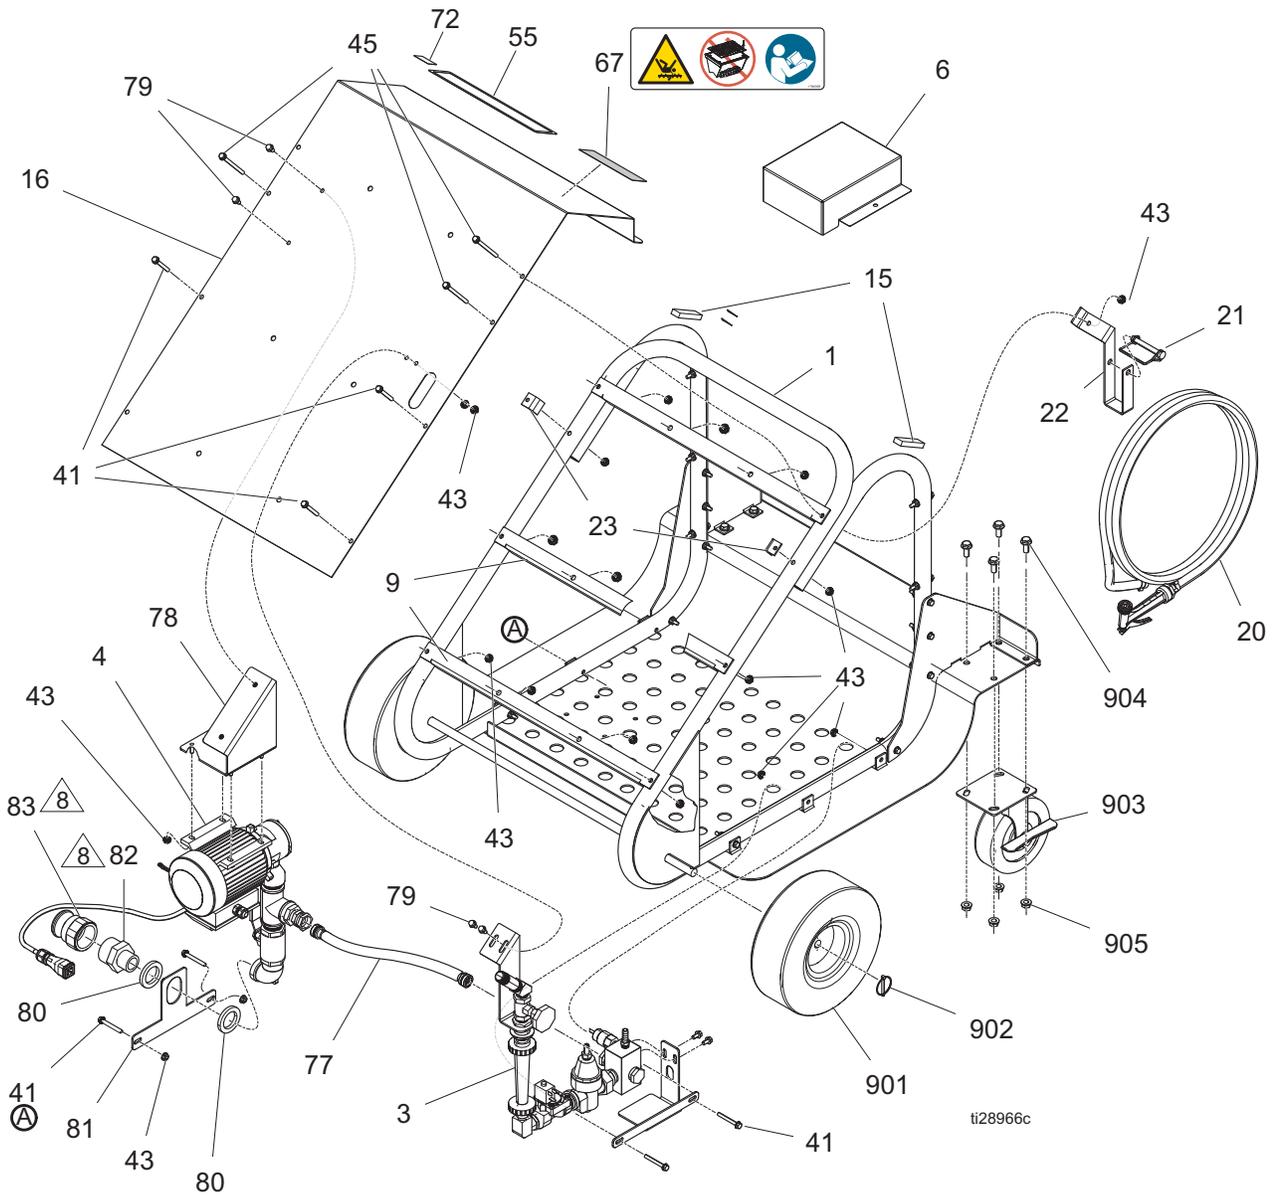

 Apply pipe sealant to pipe threads.

MP-20 and MP-40 Parts List (continued)


| Ref. | Part | Description | Qty. |
|------|---------|---|------|
| 1 | ----- | FRAME, assy, wheels, MP | 1 |
| 3 | ----- | CONTROL, water, assy | 1 |
| 4◆ | ----- | PUMP, assy, water, 60 hZ (for MP-20 16a, MP-40 380V) see page 36 | 1 |
| | ----- | PUMP, assy, water, 50 Hz (for MP-20 16A, MP-40 380V) see page 36 | 1 |
| 5 | MTA804 | HOSE, assy, water | 2 |
| 6 | MTA707 | DUCT, fan, cooling, assy | 1 |
| 16 | ----- | COVER, top | 1 |
| 19 | MTA083 | FITTING, Geka, 1/2 in., npt, female | 1 |
| 20 | MTA714 | HOSE, assy, washdown | 1 |
| 21 | 125981 | PIN, retaining, with tab | 1 |
| 22 | ----- | BRACKET, hose | 1 |
| 41◆ | ----- | SCREW, hex, serrated, 1/4-20 x 2.00 | 15 |
| 42 | ----- | WASHER, flat, fender, 1/4 | 4 |
| 43◆ | 115942 | NUT, hex, flange head | 32 |
| 44 | 15R472 | FASTENER, hex hd, flanged, 1/4 x 1 | 4 |
| 45 | ----- | BOLT, hex, 1/4-20 x 3 1/4 in. | 3 |
| 67▲ | 17M606 | LABEL, safety | 1 |
| 77◆ | MTA999 | HOSE, water, MP | 1 |
| 78◆ | ----- | BRACKET, water pump, top painted | 1 |
| 79◆ | ----- | SCREW, flanged, hex hd | 4 |
| 80◆ | MTA330 | CHOCK, wedge, rubber | 2 |
| 81◆ | ----- | BRACKET, water pump, bot painted | 1 |
| 82◆ | 17G711 | FITTING, straight, 1 1/2 x 1 npt | 1 |
| 83◆ | 128474 | FITTING, 1.5 in. camlock m x 1.5 in. npt f | 1 |
| 901 | † | WHEEL, tire, 10 in., runflat | 1 |
| 902 | MTA010† | PIN, linch, 3/16 dia shaft | 1 |
| 903 | ❖ | CASTER, swivel, 6 in., with brake | 1 |
| 904 | 111192❖ | SCREW, cap flange hd | 1 |
| 905 | 112958❖ | NUT, hex, flanged | 1 |

▲ Replacement Danger and Warning labels are available at no cost.

◆ Included in water pump systems 25M060, 25M061, 25M06, and 25M063. Kits MTA988 and MTA998 can be used to upgrade non-water pump systems.

| Symbol | Kit | Description | Included in Kit: Ref. (Qty.) |
|--------|--------|------------------------------|---|
| † | MTA678 | Wheel Kit | 72 (1), 73 (1) |
| ❖ | MTA733 | Caster Kit | 74 (4), 75 (1), 76 (4) |
| ◆ | MTA988 | 60 Hz water pump upgrade kit | 77(1), 78(1), 79(2), 80(2), 81(1), 82(1), 83(1), 4(1), 43 (4) |
| | MTA998 | 50 Hz water pump upgrade kit | 77(1), 78(1), 79(2), 80(2), 81(1), 82(1), 83(1), 4(1), 43 (4) |

Water Control Assembly (Ref. 3)

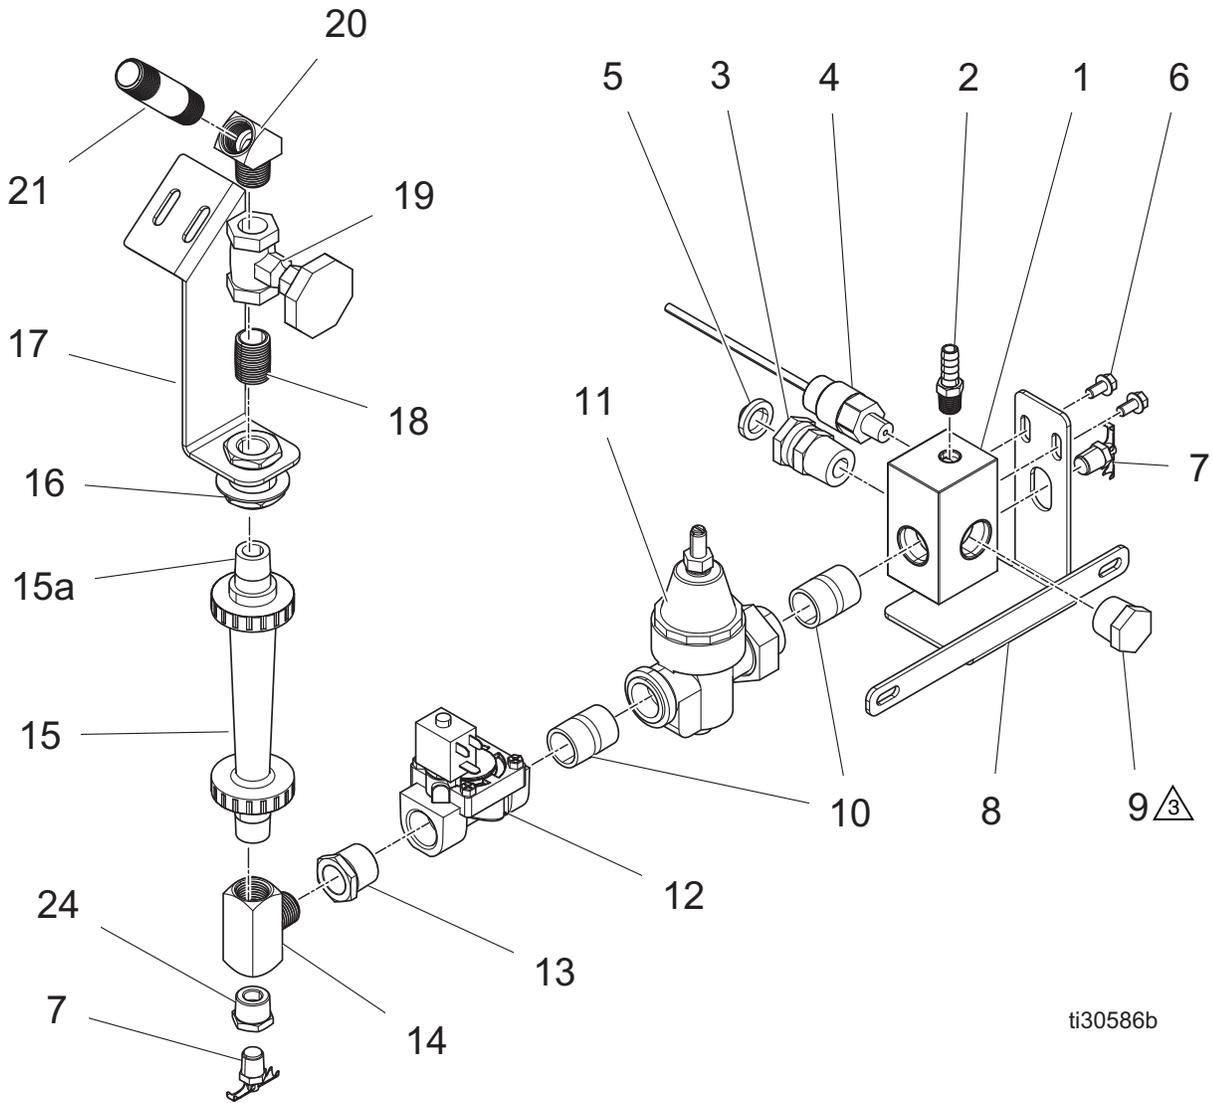

ti30586b

⚠️ Add pipe sealant to all pipe fittings.


⚠️ For non-water pump models, positions of plug (9) and GHT fitting (3) are switched.

Water Control Assembly Parts List

| Ref. Part | Description | Qty. | Ref. Part | Description | Qty. |
|-----------|--|------|--------------|---|------|
| 1 | MTA992 MANIFOLD, water | 1 | 12 † | VALVE, water, 3/4 in. 24 VDC, 6W | 1 |
| 2 | MTA091 FITTING, barb, hose, 1/4 npt, 3/8 in. hose | 1 | 13 117326 | FITTING, bushing | 1 |
| 3 | MTA334 ADAPTER, swivel hose to pipe | 1 | 14 17V960 | FITTING, tee, 1/2 in. npt | 1 |
| 4 | MTA994 SWITCH, 30 psi, water | 1 | 15 MTA993 | METER, flow (with brass flanges) | 1 |
| 5 | MTA266 STRAINER, washer, 3/4 npt, 60/50 mesh | 1 | 15a 17V996 | FLANGE, brass, 1/2 npt | 2 |
| 6 | 113161 SCREW, flange, hex hd | 2 | 16 512905 | FITTING, bulkhead | 1 |
| 7 | MTA086 FITTING, drain, cock 1/4, npt | 2 | 17 17R430 | BRACKET, water circuit, top, painted | 1 |
| 8 | 17R429 BRACKET, water circuit, bot, painted | 1 | 18 - - - - - | FITTING, nipple, 1/2 npt | 1 |
| 9 | 121621 PLUG, 3/4 in. npt | 1 | 19 MTA991 | VALVE, globe | 1 |
| 10 | MTA982 FITTING, nipple, 3/4 npt | 2 | 20 MTA979 | FITTING, 45 degree, 1/2 npt | 1 |
| 11 | 25E892 REGULATOR, 3/4 npt, 30 psi | 1 | 21 MTA984 | FITTING, nipple, 1/2 npt x 3 in. lg | 1 |
| | | | 24 17V996 | FITTING, bushing, 1/2 x 1/4 npt | 1 |

| Symbol | Kit | Description | Included in Kit: Ref. (Qty.) |
|--------|--------|-----------------------------|--|
| † | MTA696 | Water Valve and Harness Kit | 20 (1), Water Valve Solenoid Harness (1) |

Water Pump Assembly (Ref. 4)

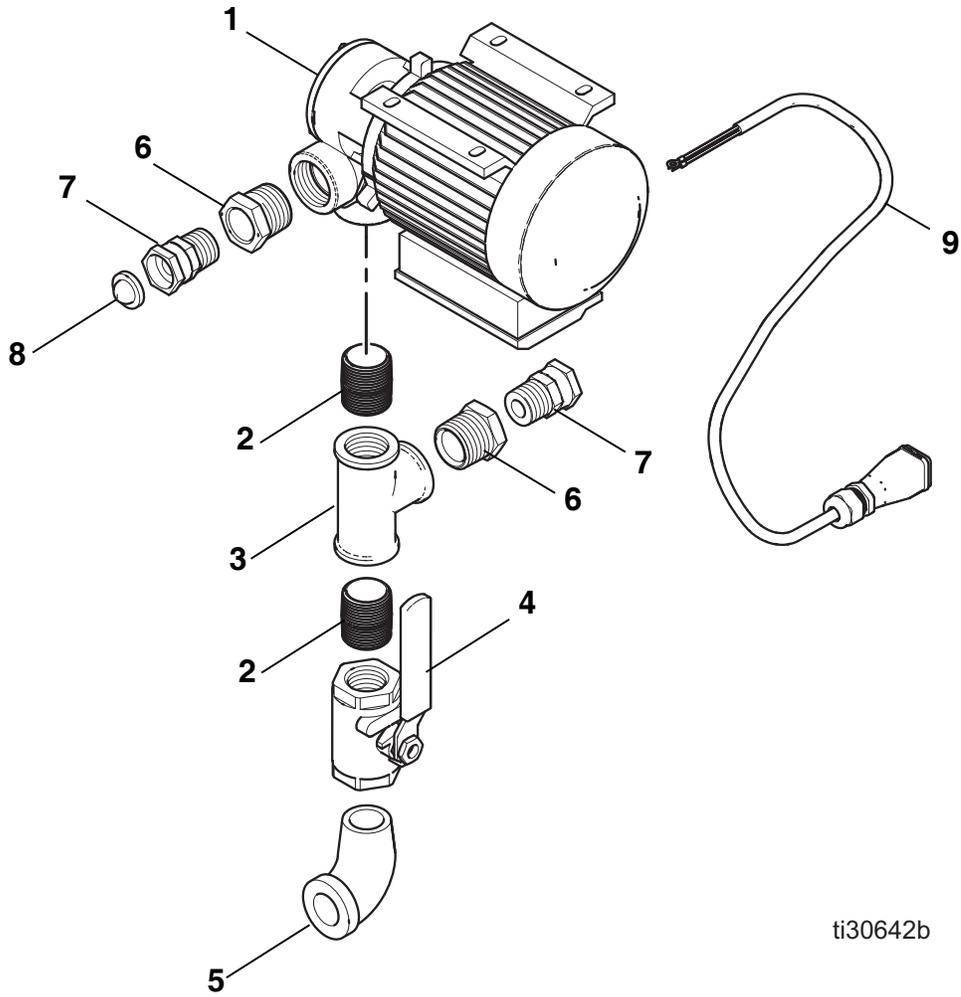

ti30642b

 Add pipe sealant to all pipe fittings.


Water Pump Assembly Parts List

| Ref. | Part | Description | Qty. |
|------|--------|--|------|
| 1 | † | PUMP, water, 220V, 1ph, .33kW, 60Hz | 1 |
| | † | PUMP, water, 220V, 1ph, .33kW, 50Hz | 1 |
| 2 | ----- | FITTING, nipple, 1 in. npt x 1 1/2 in. | 2 |
| 3 | 106464 | FITTING, tee, pipe, 1 in. npt | 4 |
| 4 | MTA335 | VALVE, ball, brass, 1 in. fnpt | 1 |
| 5 | ----- | ELBOW, street, pipe | 1 |
| 6 | 158586 | FITTING, bushing | 2 |
| 7 | MTA334 | ADAPTER, swivel hose to pipe | 2 |
| 8 | MTA266 | STRAINER, washer, 3/4 npt, 60/50 mesh | 1 |
| 9 | † | CORD, assembly, water pump, 1ph, mp | 1 |

| Symbol | Kit | Description | Included in Kit: Ref. (Qty.) |
|--------|--------|---|------------------------------|
| † | MTA694 | 60Hz Water Pump Kit (for MP-20, MP-40) | 1 (1), 9 (1) |
| † | MTA695 | 50Hz Water Pump Kit (for MP-20 16A, MP-40 380V) | 1 (1), 9 (1) |


Drive Shaft (Ref. 7)

MTA712 (for MP-20, MP-20 16A)

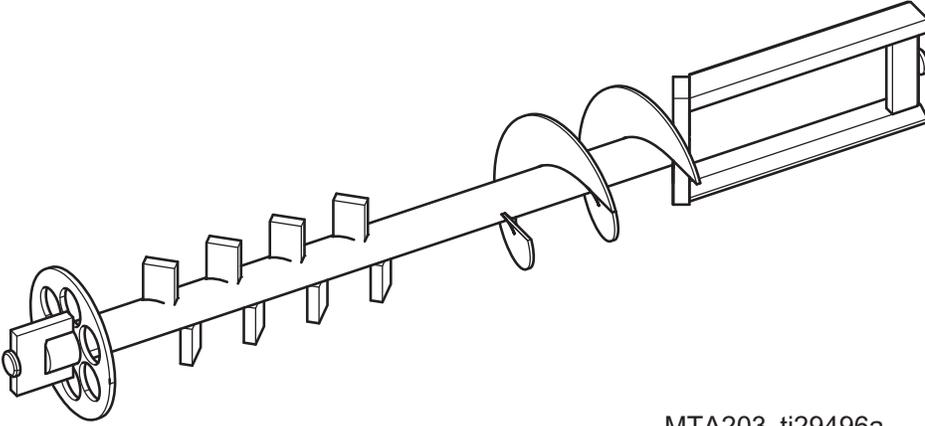

MTA203_ti29496a


MTA713 (for MP-40, MP-40 380V)

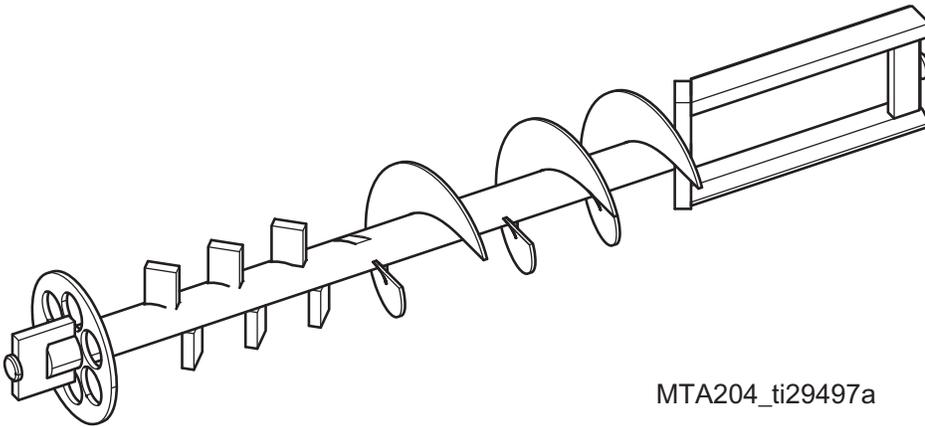

MTA204_ti29497a

Motor Assemblies (Ref. 10)

MTA738 (for MP-20, MP-20 16A)

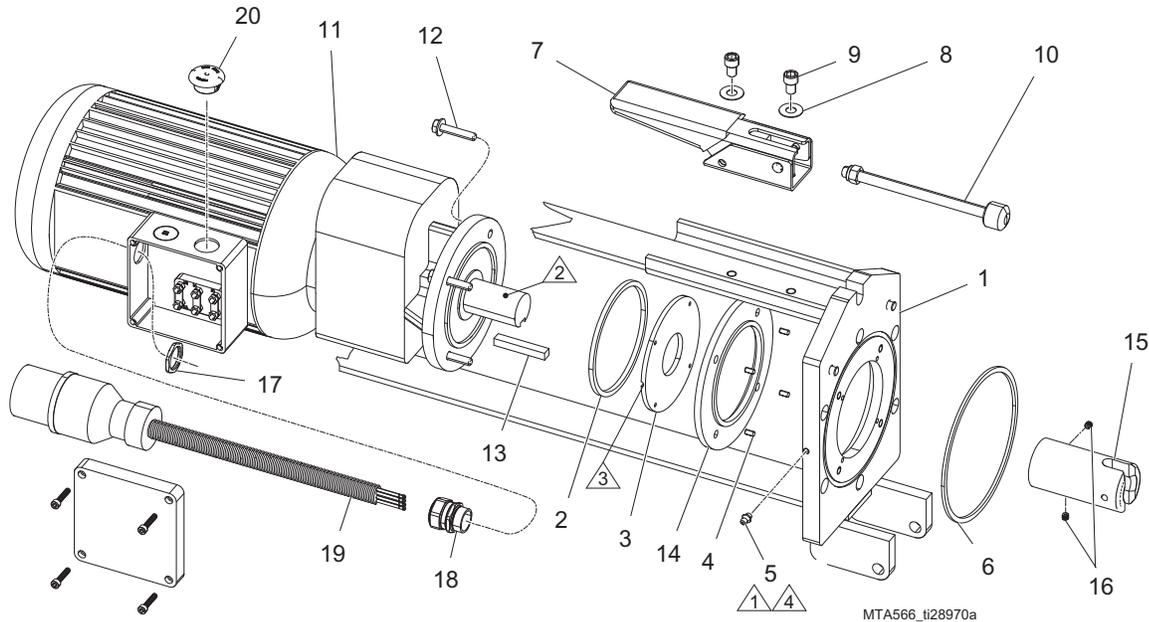

- △1 Apply pipe sealant to threads.
- △2 Apply grease lubricant to the shaft of the motor before assembly.
- △3 Match orientation of grease port to port in frame.
- △4 Add grease lubricant through grease port (5) after assembly.


Parts List

| Ref. | Part | Description | Qty. | Ref. | Part | Description | Qty. |
|------|--------|-----------------------------------|------|------|----------|---------------------------------|------|
| 1 | ----- | FRAME, mount, motor, short | 1 | 11 | † | MOTOR, gearbox, 4kW | 1 |
| 2 | MTA019 | ADAPTER, motor flange | 1 | 12 | 110837 | SCREW, flange, hex | 4 |
| 3 | ❖ | SEAL, grease, shaft, motor | 1 | 13 | MTA020†* | KEY, special, drive | 1 |
| 4 | ❖ | PIN, 3/16 dia x 3/8 dowel | 4 | 14 | ----- | SPACER, 4kw, motor | 1 |
| 5 | 115278 | FITTING, zerk, grease, 1/4-28 unf | 1 | 15 | MTA014* | ADAPTER, auger/pump | 1 |
| 6 | MTA073 | SEAL, flange, motor | 1 | 16 | * | SCREW, set 1/4-20 x .25 soc cup | 2 |
| 7 | ✿ | LATCH, catch, draw, batch, mixer | 1 | 17 | † | BUSHING, strain relief, nut | 1 |
| 8 | ✿ | WASHER, 3/8 plain flat | 2 | 18 | † | BUSHING, strain relief | 1 |
| 9 | ✿ | SCREW, shcs, 3/8-16 x 1/2 | 2 | 19 | MTA784† | CABLE, motor, 6 ft | 1 |
| 10 | ✿ | PIN, draw, assy | 1 | 20 | † | PLUG, liquid tight, 1.0 in. | 1 |

* Parts Details

| Symbol | Kit | Description | Included in Kit: Ref. (Qty.) |
|--------|--------|---|--|
| † | MTA699 | 4kW Motor Kit | 11 (1), 13 (1), 17 (1), 18 (1), 19 (1), 20 (1) |
| ❖ | MTA731 | Motor Shaft Grease Seal Replacement Kit | 3 (1), 4 (4) |
| ✿ | MTA730 | Draw Catch Latch Kit | 7 (1), 8 (2), 9 (2), 10 (1) |
| * | MTA790 | Driver Auger/Pump Adapter Kit | 13 (1), 15 (1), 16 (2) |

MTA729 (for MP-40)

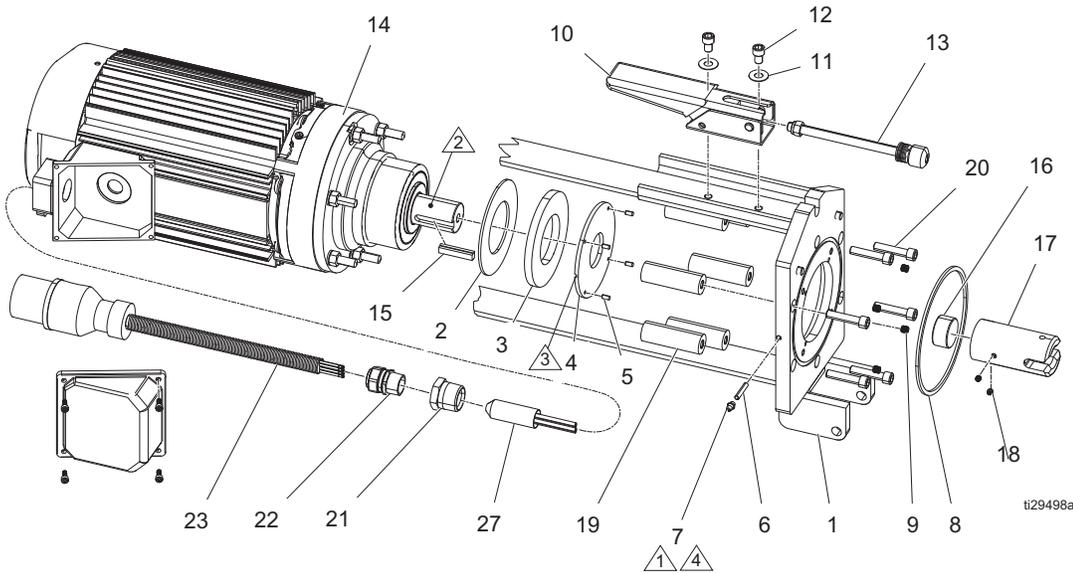


-  Apply pipe sealant to threads.
-  Apply grease lubricant to the shaft of the motor before assembly.
-  Match orientation of grease port to port in frame.
-  Add grease lubricant through grease port (5) after assembly.

| Ref. | Part | Description | Qty. | Ref. | Part | Description | Qty. |
|------|--------|-----------------------------------|------|------|---------|--------------------------------------|------|
| 1 | ----- | FRAME, mount, motor | 1 | 15 | †* | KEY, custom, sew | 1 |
| 2 | MTA274 | SEAL, pusher, sumi | 1 | 16 | MTA273 | SPACER, sumi, 1 1/2 in. | 1 |
| 3 | MTA247 | SEAL, sumi | 1 | 17 | MTA064* | ADAPTER, driver, auger/pump | 1 |
| 4 | ❖ | SEAL, grease, shaft, motor | 1 | 18 | * | SCREW, set 1/4-20 x .25 soc cup | 2 |
| 5 | ❖ | PIN, 3/16 dia x 3/8 dowel | 4 | 19 | MTA248 | SPACER, sumi | 6 |
| 6 | MTA079 | TUBE, lubricant, sumi | 1 | 20 | 564147 | SCREW, 3/8-16 x 1.75 soc hd cap | 6 |
| 7 | 115278 | FITTING, zerk, grease, 1/4-28 unf | 1 | 21 | † | FITTING, bushing | 1 |
| 8 | MTA073 | SEAL, flange, motor | 1 | 22 | † | FITTING, cbl, strain relief, 3/4 npt | 1 |
| 9 | ----- | SCREW, scr 5/16-18 x.31 soc cup | 4 | 23 | MTA784† | CABLE, motor, 6 ft | 1 |
| 10 | ✻ | LATCH, catch, draw, batch, mixer | 1 | 24 | † | SCREW, mach, pnh | 3 |
| 11 | ✻ | WASHER, 3/8 plain flat | 2 | 25 | † | WASHER | 3 |
| 12 | ✻ | SCREW, shcs, 3/8-16 x 1/2 | 2 | 26 | † | NUT, hex | 3 |
| 13 | ✻ | PIN, draw, assy | 1 | 27 | † | INSULATOR, cap, hd, heat shrink | 3 |
| 14 | † | MOTOR, gearbox, 5.5 kW | 1 | | | | |

*** Parts Details**

| Symbol | Kit | Description | Included in Kit: Ref. (Qty.) |
|--------|--------|---|--|
| † | MTA732 | 5.5 kW Motor Kit | 14 (1), 15 (1), 21 (1), 22 (1), 23 (1), 24 (3), 25 (3), 26 (3), 27 (3) |
| ❖ | MTA731 | Motor Shaft Grease Seal Replacement Kit | 4 (1), 5 (4) |
| ✻ | MTA730 | Draw Catch Latch Kit | 10 (1), 11 (2), 12 (2), 13 (1) |
| * | MTA792 | Driver Auger/Pump Adapter Kit | 15 (1), 17 (1), 18 (2) |

MTA736 (for MP-40 380V)

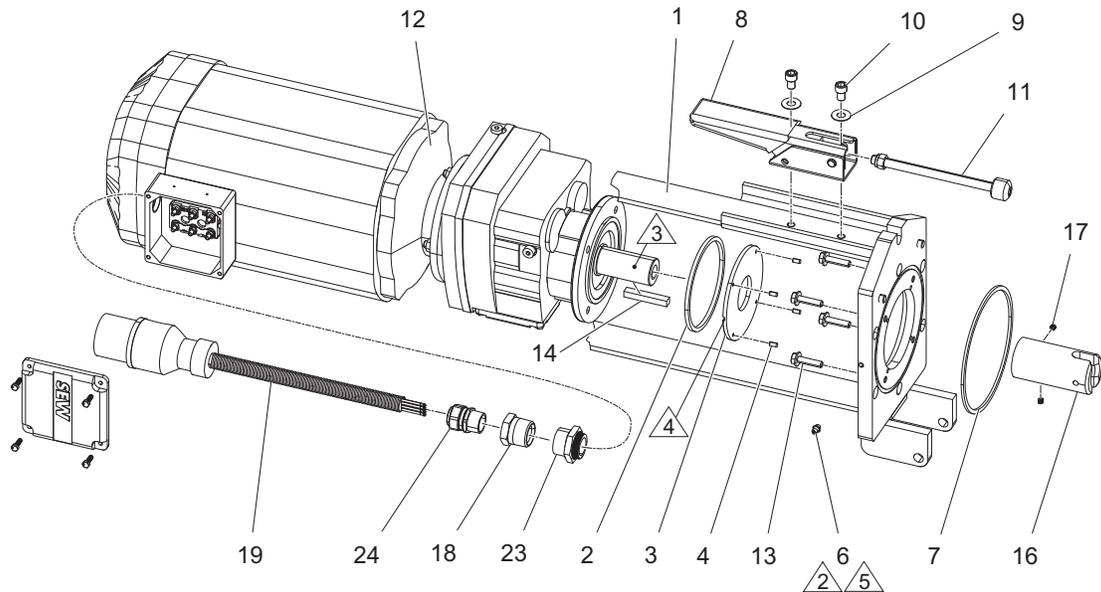

MTA565_ti29499a

-  Apply pipe sealant to threads.
-  Apply grease lubricant to the shaft of the motor before assembly.
-  Match the orientation of the grease port to the port in the flange.
-  Add grease lubricant through the grease port after assembly.

Parts List



| Ref. | Part | Description | Qty. | Ref. | Part | Description | Qty. |
|------|--------|-----------------------------------|------|------|---------|--------------------------------------|------|
| 1 | ----- | FRAME, mount, motor | 1 | 12 | † | MOTOR, gearbox, 5.5 kw, sew-Euro188 | 1 |
| 2 | MTA019 | ADAPTER, motor flange | 1 | 13 | ----- | SCREW, flange, hex, 5/16-18 x 1.25 | 4 |
| 3 | ❖ | SEAL, grease, shaft, motor | 1 | 14 | †* | KEY, special, drive | 1 |
| 4 | ----- | PIN, 3/16 dia x 3/8 dowel | 4 | 16 | MTA014* | ADAPTER, auger/pump | 1 |
| 6 | 115278 | FITTING, zerk, grease, 1/4-28 unf | 1 | 17 | * | SCREW, set 1/4-20 x .25 soc cup | 2 |
| 7 | MTA073 | SEAL, flange, motor | 1 | 18 | † | FITTING, bushing | 1 |
| 8 | ✿ | LATCH, catch, draw, batch, mixer | 1 | 19 | MTA784† | CABLE, motor, 6 ft | 1 |
| 9 | ✿ | WASHER, 3/8 plain flat | 2 | 23 | † | FITTING, cbl, strain, relief, 1 npt | 1 |
| 10 | ✿ | SCREW, shcs, 3/8-16 x 1/2 | 2 | 24 | † | FITTING, cbl, strain relief, 3/4 npt | 1 |
| 11 | ✿ | PIN, draw, assy | 1 | | | | |

*** Parts Details**

| Symbol | Kit | Description | Included in Kit: Ref. (Qty.) |
|--------|--------|---|--|
| † | MTA737 | 5.5 kW Motor Kit | 12 (1), 14 (1), 18 (1), 19 (1), 23 (1), 24 (1) |
| ❖ | MTA731 | Motor Shaft Grease Seal Replacement Kit | 3 (1), 4 (4) |
| ✿ | MTA730 | Draw Catch Latch Kit | 8 (1), 9 (2), 10 (2), 11 (1) |
| * | MTA791 | Driver Auger/Pump Adapter Kit | 14 (1), 16 (1), 17 (2) |



Power Cable (Ref. 56)

MTA727 (for MP-20, MP-20 16A). MTA007 (Plug Only).

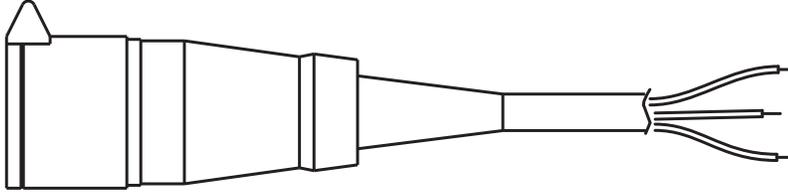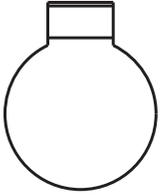



MTA158_ti29501a

MTA728 (for MP-40). MTA935 (Plug Only).

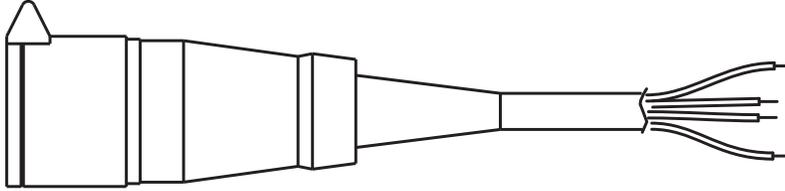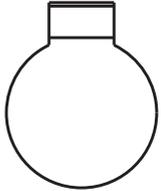

MTA380_ti29500a


MTA851 (for MP-40 380V)

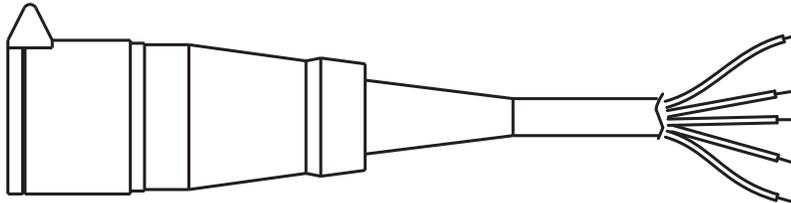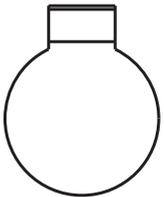

MTA475_ti29591a

Electrical Enclosure (Ref. 2) Parts


- MTA708 (for MP-20)
- MTA709 (for MP-20 16A)
- MTA710 (for MP-40)
- MTA711 (for MP-40 380V)

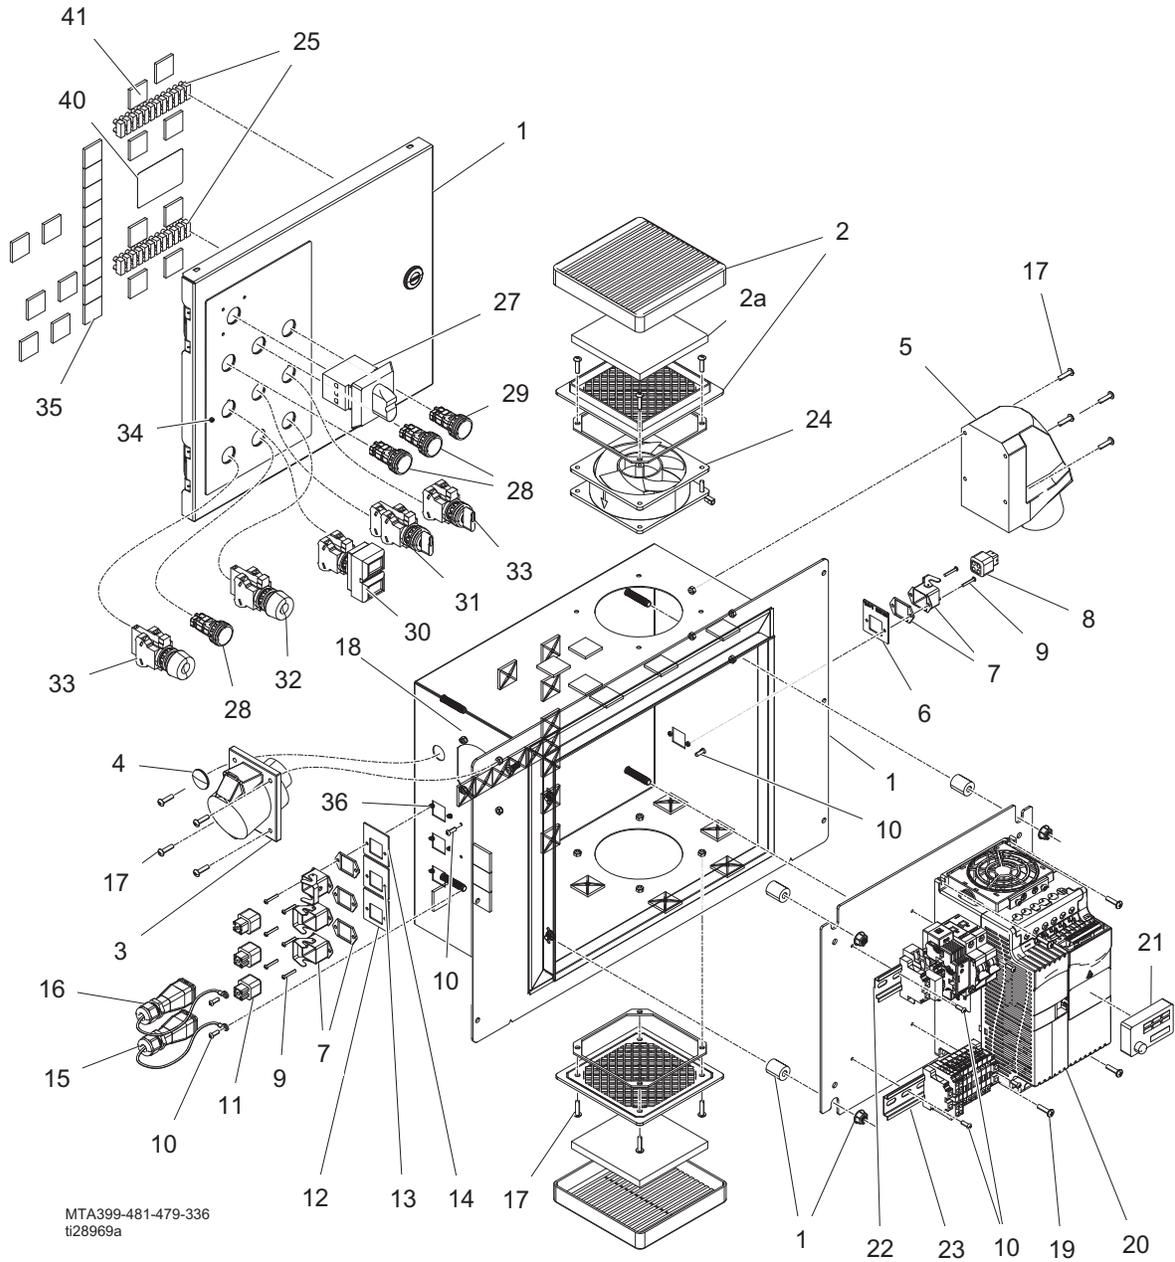


Electrical Enclosure Parts List

| Ref. | Part | Description | Qty. | Ref. | Part | Description | Qty. |
|------|--------|--|------|-------|---|--|------|
| 1 | ----- | ENCLOSURE, control | 1 | 21 | MTA831 | CONTROL, vfd keypad | 1 |
| 2 | MTA926 | FILTER, fan, assembly | 2 | 22 | ----- | MODULE, din rail assembly, MP-20 (see page 49) | 1 |
| 2a | MTA881 | KIT, filter, cooling fan (pack of 5) | 2 | ----- | MODULE, din rail assembly, MP-20 16A (see page 49) | 1 | |
| 3 | MTA839 | CONNECTOR, outlet, 230VAC, 4 wire | 1 | ----- | MODULE, din rail assembly, MP-40 (see page 49) | 1 | |
| 4 | ----- | PLUG, hole, rubber | 1 | ----- | MODULE, din rail assembly, MP-40 380V (see page 49) | 1 | |
| 5 | MTA838 | KIT, connector, 230VAC, 3 wire, inlet (for MP-20, MP-20 16A) | 1 | ----- | MODULE, din rail assembly, MP-40 380V (see page 49) | 1 | |
| | MTA849 | KIT, connector, 230VAC, 4 wire, inlet (for MP-40) | 1 | 23 | ----- | MODULE, din rail 2 | 1 |
| | MTA852 | KIT, connector, 400VAC, 5 wire, inlet (for MP-40 380V) | 1 | 24 | MTA833 | FAN, cooling | 1 |
| 6 | ----- | LABEL, water pump | 1 | 25 | ----- | TERMINAL, strip, 12 pos | 2 |
| 7 | ----- | HOUSING, panel mount, locking lever | 4 | 27 | MTA850 | KIT, disconnect, switch (for MP-20, MP-20 16A) | 1 |
| 8 | ----- | INSERT, contact, female, 4 pin | 1 | | MTA840 | KIT, disconnect, switch (for MP-40) | 1 |
| 9 | ----- | FASTENER, #4-40 x 3/4, bh, cs | 8 | | MTA853 | KIT, disconnect, switch (for MP-40 380V) | 1 |
| 10 | ----- | FASTENER, #8-32 x 1/2, ph, threading | 8 | 28 | MTA848 | KIT, indicator, green | 3 |
| 11 | ----- | INSERT, contact, female, 5 pin | 3 | 29 | MTA847 | KIT, indicator, red | 1 |
| 12 | ----- | LABEL, remote | 1 | 30 | MTA842 | KIT, switch, on/off | 1 |
| 13 | ----- | LABEL, water psi | 1 | 31 | MTA844 | KIT, switch, speed selector | 1 |
| 15 | MTA845 | KIT, harness, remote jumper | 1 | 32 | MTA843 | KIT, switch, water pump | 1 |
| 16 | MTA846 | KIT, harness, press switch jumper | 1 | 33 | MTA841 | KIT, switch, fwd/rev, prime | 1 |
| 17 | ----- | FASTENER, #10-32 x 3/4, bh, cs | 16 | 34 | ----- | LABEL, legend | 1 |
| 18 | 115483 | NUT, lock | 12 | 35 | ----- | HOLDER, zip tie mount, adhesive | 51 |
| 19 | ----- | FASTENER, #10-24 x 3/4, ph, Phillips | 4 | 36 | C27076 | NUT | 8 |
| 20 | MTA778 | KIT, VDF, MP-20 | 1 | 40 | ----- | LABEL, fuse, location | 1 |
| | MTA779 | KIT, VDF, MP-20 16A | 1 | 41 | ----- | TIE, cable, 4 in. | 31 |
| | MTA780 | KIT, VDF, MP-40 | 1 | | | | |
| | MTA781 | KIT, VDF, MP-40 380V | 1 | | | | |


MP-20 16A (MTA709)

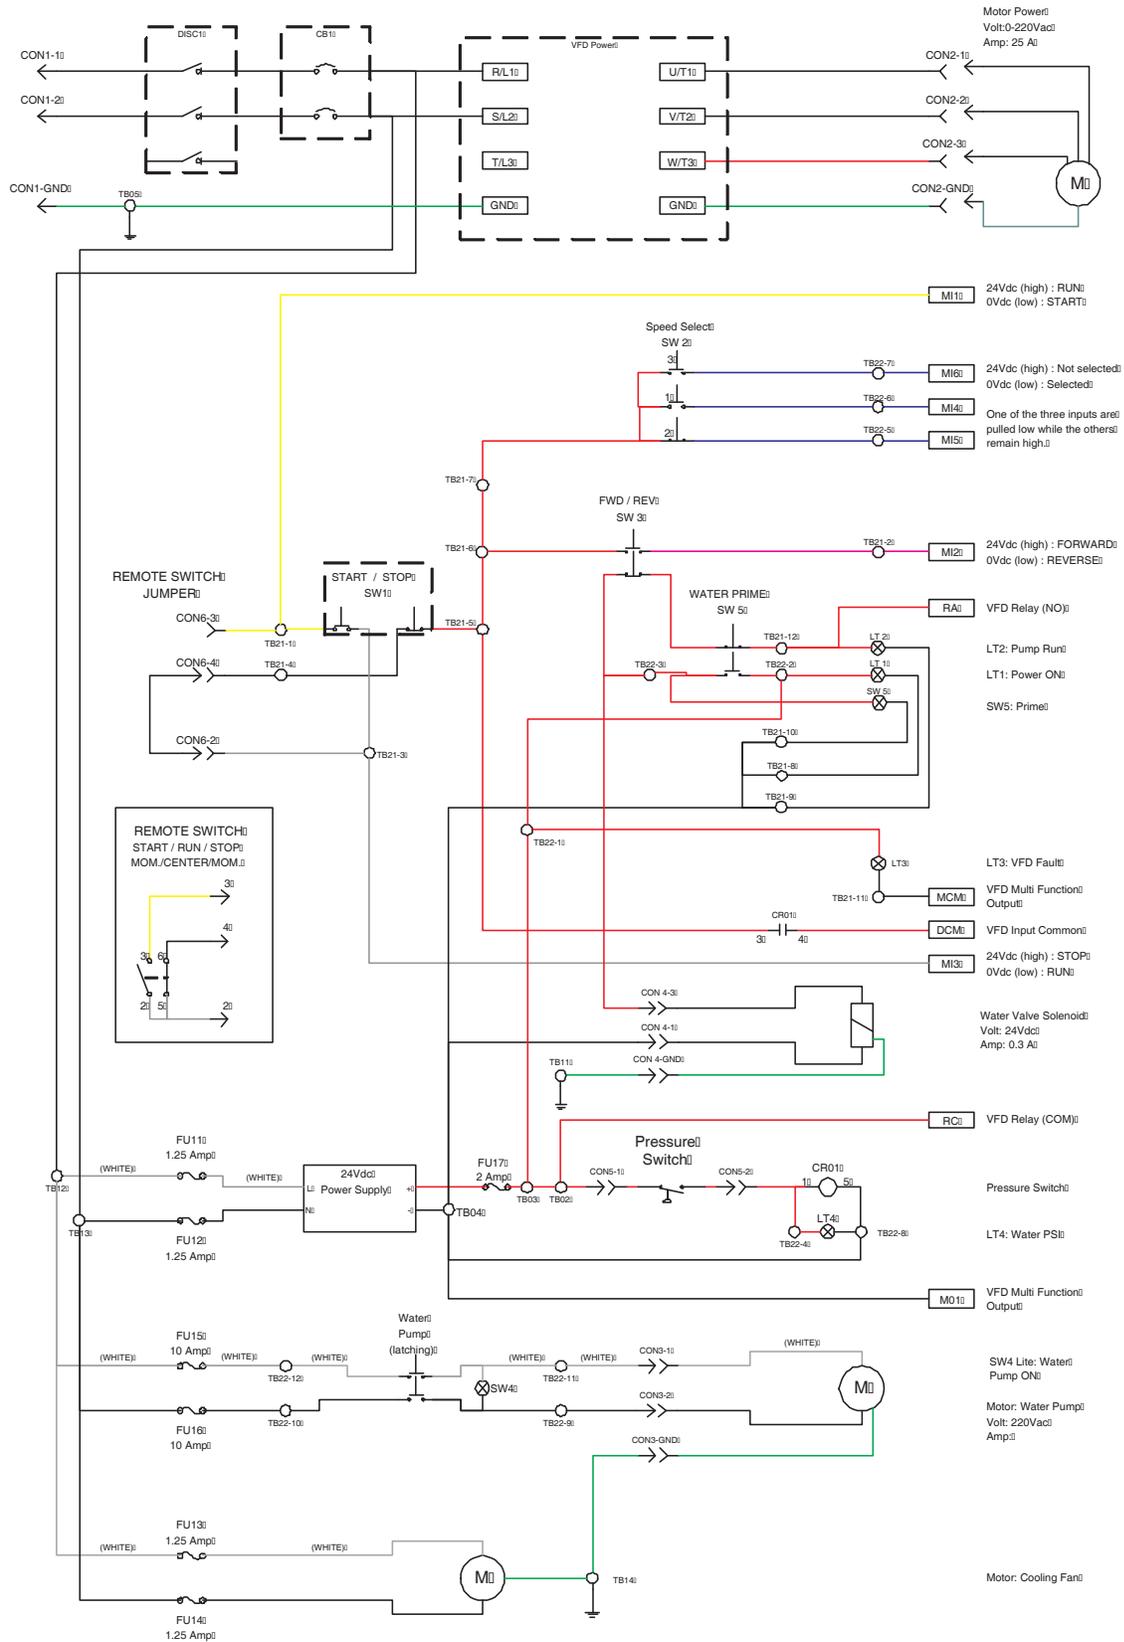

MP-40 (MTA710)

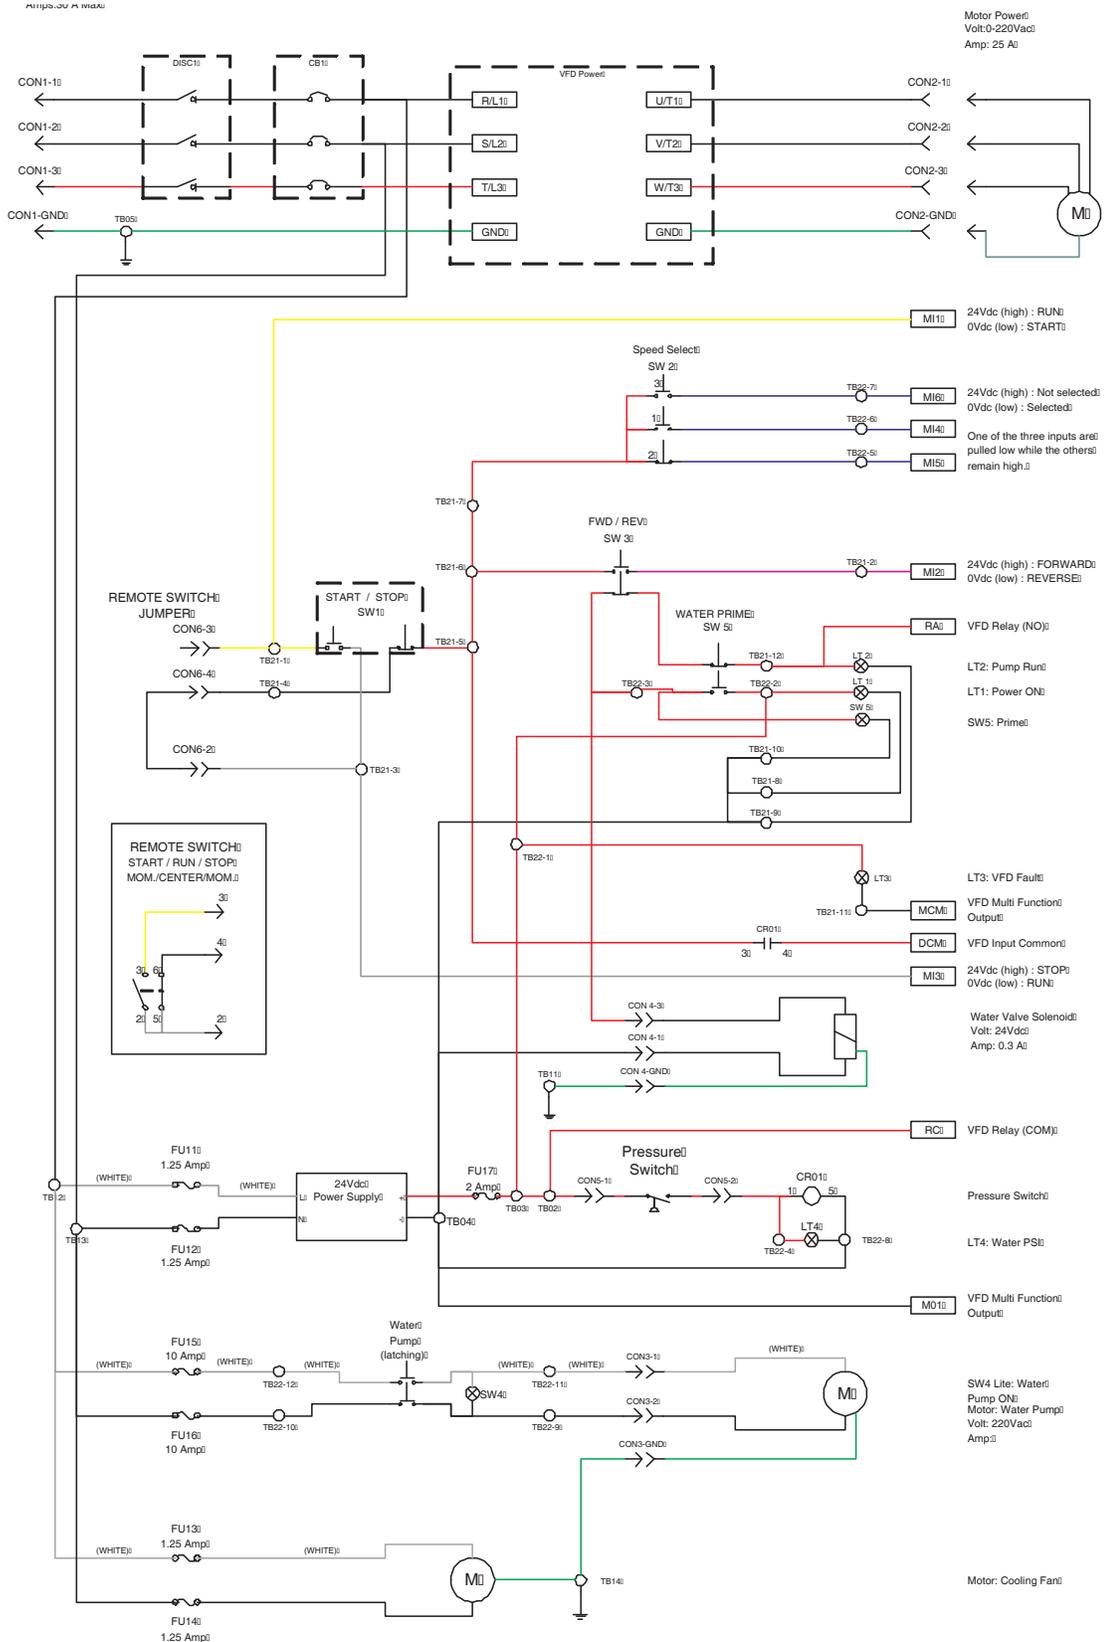


MP-40 380 Vac and Neutral (MTA711)

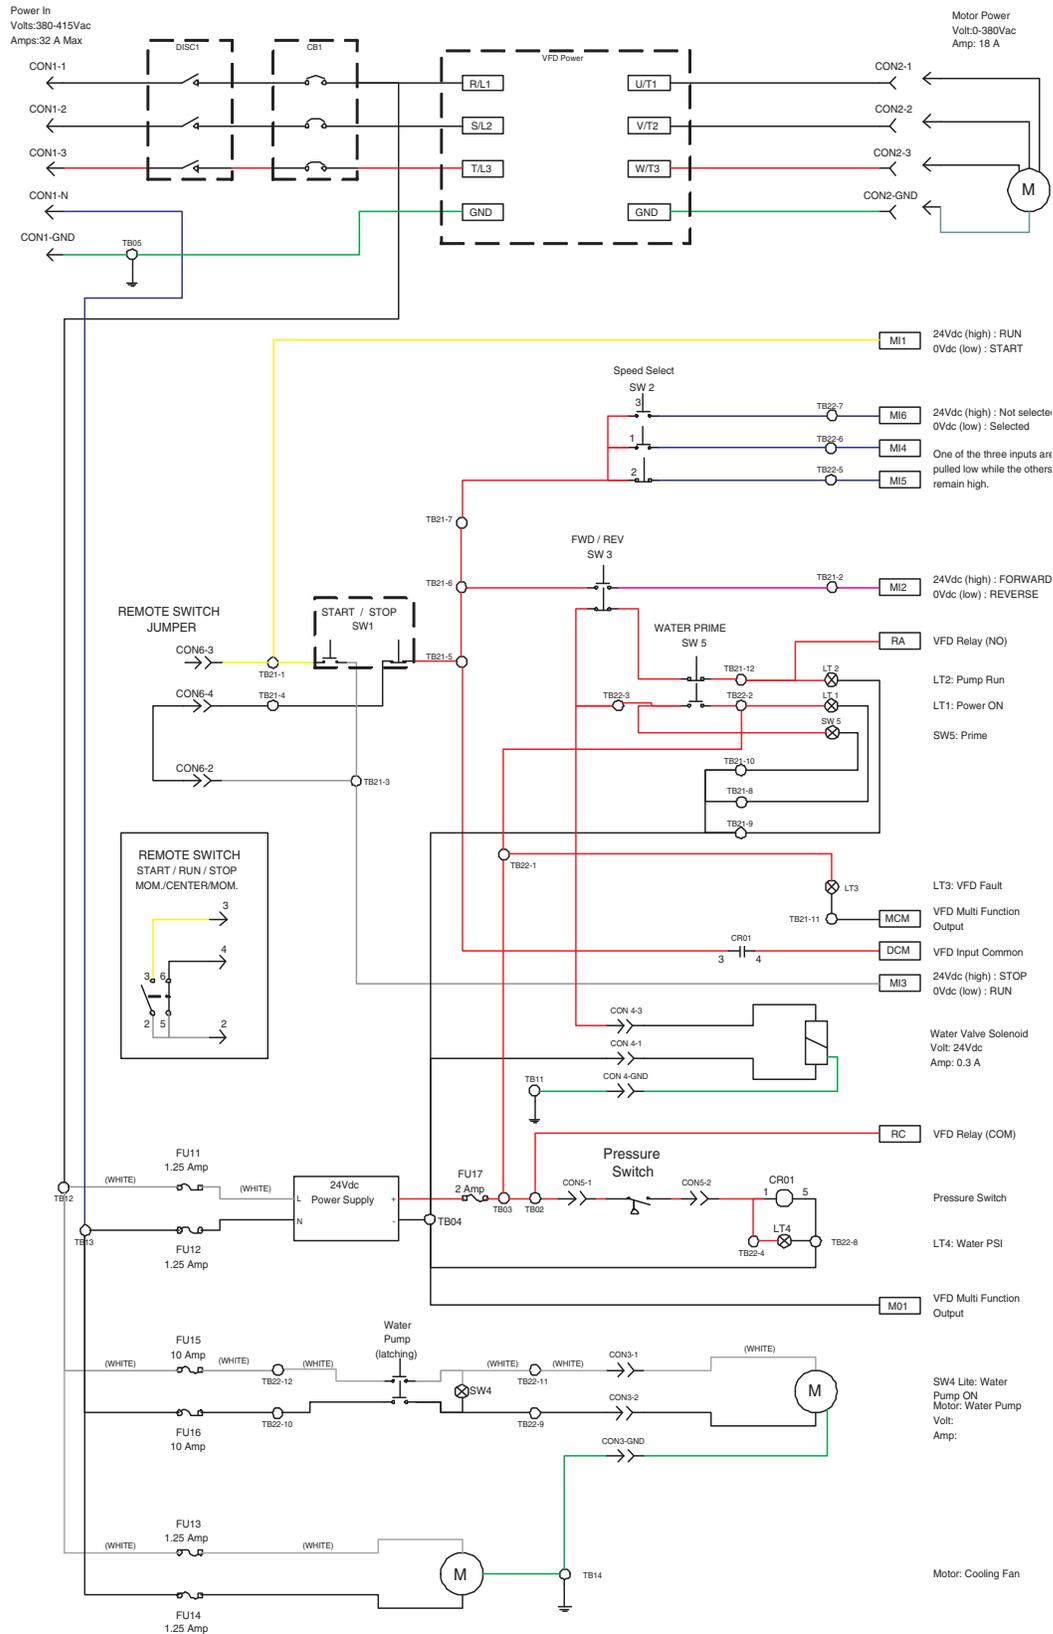


Din Rail Assembly Modules

Module, din rail assembly (for MP-20)

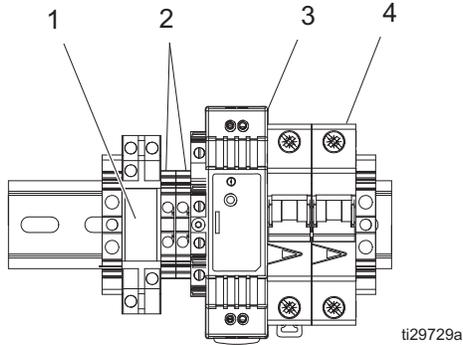


| Ref. | Part | Description | Qty. |
|------|--------|------------------------------------|------|
| 1 | MTA886 | KIT, relay, 5 pin, 24 VDC | 1 |
| 2 | MTA884 | KIT, fuse | 1 |
| 3 | MTA889 | KIT, power supply, 24 VDC, 15 watt | 1 |
| 4 | MTA890 | KIT, circuit breaker, 63A, 2 pole | 1 |

Module, din rail assembly (for MP-40)

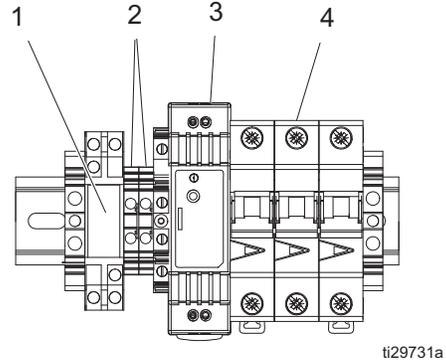


| Ref. | Part | Description | Qty. |
|------|--------|------------------------------------|------|
| 1 | MTA886 | KIT, relay, 5 pin, 24 VDC | 1 |
| 2 | MTA884 | KIT, fuse | 1 |
| 3 | MTA889 | KIT, power supply, 24 VDC, 15 watt | 1 |
| 4 | MTA891 | KIT, circuit breaker, 40A, 3 pole | 1 |

Module, din rail assembly (for MP-20 16A)

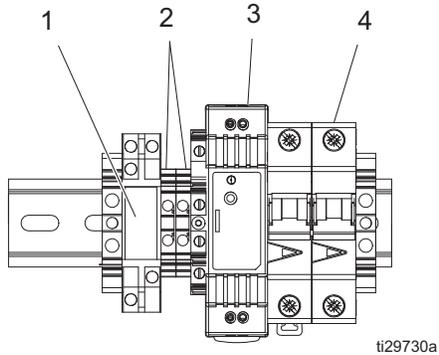

| Ref. | Part | Description | Qty. |
|------|--------|------------------------------------|------|
| 1 | MTA886 | KIT, relay, 5 pin, 24 VDC | 1 |
| 2 | MTA884 | KIT, fuse | 1 |
| 3 | MTA889 | KIT, power supply, 24 VDC, 15 watt | 1 |
| 4 | MTA893 | KIT, circuit breaker, 16A, 2 pole | 1 |

Module, din rail assembly (for MP-40 380V)

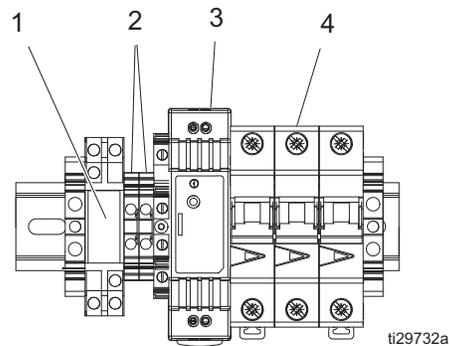

| Ref. | Part | Description | Qty. |
|------|--------|------------------------------------|------|
| 1 | MTA886 | KIT, relay, 5 pin, 24 VDC | 1 |
| 2 | MTA884 | KIT, fuse | 1 |
| 3 | MTA889 | KIT, power supply, 24 VDC, 15 watt | 1 |
| 4 | MTA892 | KIT, circuit breaker, 32A, 3 pole | 1 |

Systems and Accessories

Systems

| With Water Pump | | | |
|-----------------|------------------------|-----------------|--------|
| Description | Power | Motor | Part |
| MP-20 | 220V, 1-ph, 60 Hz, 30A | 5.4 hp (4 kW) | 25M060 |
| MP-20 16A | 220V, 1-ph, 50 Hz, 16A | 5.4 hp (4 kW) | 25M061 |
| MP-40 | 220V, 3-ph, 60 Hz, 25A | 7.5 hp (5.5 kW) | 25M062 |
| MP-40 380V | 380V, 3-ph, 50 Hz, 25A | 7.5 hp (5.5 kW) | 25M063 |

| Without Water Pump | | | |
|--------------------|------------------------|-----------------|--------|
| Description | Power | Motor | Part |
| MP-20 | 220V, 1-ph, 60 Hz, 30A | 5.4 hp (4 kW) | 25M064 |
| MP-20 16A | 220V, 1-ph, 50 Hz, 16A | 5.4 hp (4 kW) | 25M065 |
| MP-40 | 220V, 3-ph, 60 Hz, 25A | 7.5 hp (5.5 kW) | 25M066 |
| MP-40 380V | 380V, 3-ph, 50 Hz, 25A | 7.5 hp (5.5 kW) | 25M067 |

Accessories

| Kit | Description |
|--------|--|
| 17N886 | KIT, rotor/stator pump water pressure tester, 1.5 in. female camlock |

Rotor/Stator Pump Kits

| Kit | Description | System Used On | Kit Type |
|--------|-----------------------------------|--|------------------|
| MTA719 | KIT, rotor, D8-1.5, green | MP-20 (25M060, 25M064), MP-20 16A (25M061, 25M065) | Rotor only |
| MTA720 | KIT, stator, D8-1.5, green | MP-20 (25M060, 25M064), MP-20 16A (25M061, 25M065) | Stator Only |
| MTA721 | KIT, rotor/stator, D8-1.5, green | MP-20 (25M060, 25M064), MP-20 16A (25M061, 25M065) | Rotor and stator |
| MTA722 | KIT, rotor, R7-1.5, yellow | MP-20 (25M062, 25M066), MP-40 380V (25M063, 25M067) | Rotor only |
| MTA723 | KIT, stator, R7-1.5, yellow | MP-20 (25M062, 25M066), MP-40 380V (25M063, 25M067) | Stator only |
| MTA724 | KIT, rotor/stator, R7-1.5, yellow | MP-20 (25M062, 25M066), MP-40 380V (25M063, 25M067) | Rotor and stator |

Nozzle Kits

| Kit | Description | System Used On |
|--------|----------------------------|---|
| MTA725 | KIT, nozzle, output, MP-20 | MP-20 (25M060, 25M064), MP-20 16A (25M061, 25M065) |
| MTA726 | KIT, nozzle, output, MP-40 | MP-40 (25M062, 25M066), MP-40 380V (25M063, 25M067) |

Motor Kits

| Kit | Description | Associated System | Kit Type |
|--------|-----------------------------------|--|----------------|
| MTA699 | KIT, motor, ABM-4 kW, 3p | MP-20 (25M060, 25M064), MP-20 16A (25M061, 25M065) | Motor only |
| MTA738 | KIT, motor, MP-20 | MP-20 (25M060, 25M064), MP-20 16A (25M061, 25M065) | Motor assembly |
| MTA732 | KIT, motor, 5.5 kW, sumi-200 | MP-40 (25M062, 25M066) | Motor only |
| MTA729 | KIT, motor, MP-40, 3 phase, 60 Hz | MP-40 (25M062, 25M066) | Motor assembly |
| MTA737 | KIT, motor, 5.5 kW, SEW-EURO188 | MP-40 380V (25M063, 25M067) | Motor only |
| MTA736 | KIT, motor, MP-40, 3 phase, 50 Hz | MP-40 380V (25M063, 25M067) | Motor Assembly |

Drive Shaft Kits

| Kit | Description | System Used On | Kit Type |
|--------|--|---|------------------------|
| MTA706 | KIT, shaft, clean out, MP-20/40 | MP-20 (25M060, 25M064), MP-20 16A (25M061, 25M065), MP-40 (25M062, 25M066), MP-40 380V (25M063, 25M067) | Clean out shaft |
| MTA712 | KIT, shaft, drive, assembly, MP-20 | MP-20 (25M060, 25M064), MP-20 16A (25M061, 25M065) | Drive shaft |
| MTA713 | KIT, shaft, drive assembly, MP-40 | MP-40 (25M062, 25M066), MP-40 380V (25M063, 25M067) | Drive shaft |
| MTA772 | KIT, shaft, drive, high shear, assembly, MP-20 | MP-20 (25M060, 25M064), MP-20 16A (25M061, 25M065) | High shear drive shaft |
| MTA773 | KIT, shaft, drive, high shear, assembly, MP-40 | MP-40 (25M062, 25M066), MP-40 380V (25M063, 25M067) | High shear drive shaft |

Water Pump System Kits

| Kit | Description | System Used On | Kit Type |
|--------|-------------------------------|---|------------------------|
| MTA694 | KIT, pump, water, 220V, 60 Hz | MP-20 (25M060, 25M064), MP-40 (25M062, 25M066) | Water pump and harness |
| MTA695 | KIT, pump, water, 220V, 50 Hz | MP-20 16A (25M061, 25M065), MP-40 380V (25M063, 25M067) | Water pump and harness |


Enclosure Kits

| Kit | Description | Associated System |
|--------|-------------------------------------|-----------------------------|
| MTA708 | KIT, enclosure, MP-20, 1 phase | MP-20 (25M060, 25M064) |
| MTA709 | KIT, enclosure, MP-20, 1 phase, 16A | MP-20 16A (25M061, 25M065) |
| MTA710 | KIT, enclosure, MP-40, 3 phase | MP-40 (25M062, 25M066) |
| MTA711 | KIT, enclosure, MP-40, 3 phase+NEU | MP-40 380V (25M063, 25M067) |

Wheels and Casters Kits

| Kit | Description | System Used On |
|--------|--|--|
| MTA733 | KIT, caster, swivel, 6 in., with brake | MP-20 (25M060, 25M064), MP-20 16A (25M061, 25M065), MP-40 (25M062, 25M066), MP-40 380V (25M063, 25M067) |
| MTA678 | KIT, wheel, tire, 10 in., runflat | MP-20 (25M060, 25M064), MP-20 16A (25M061, 25M065), MP-40 (25M062, 25M066), MP-40 380V (25M063, 25M067) |

Dimensions

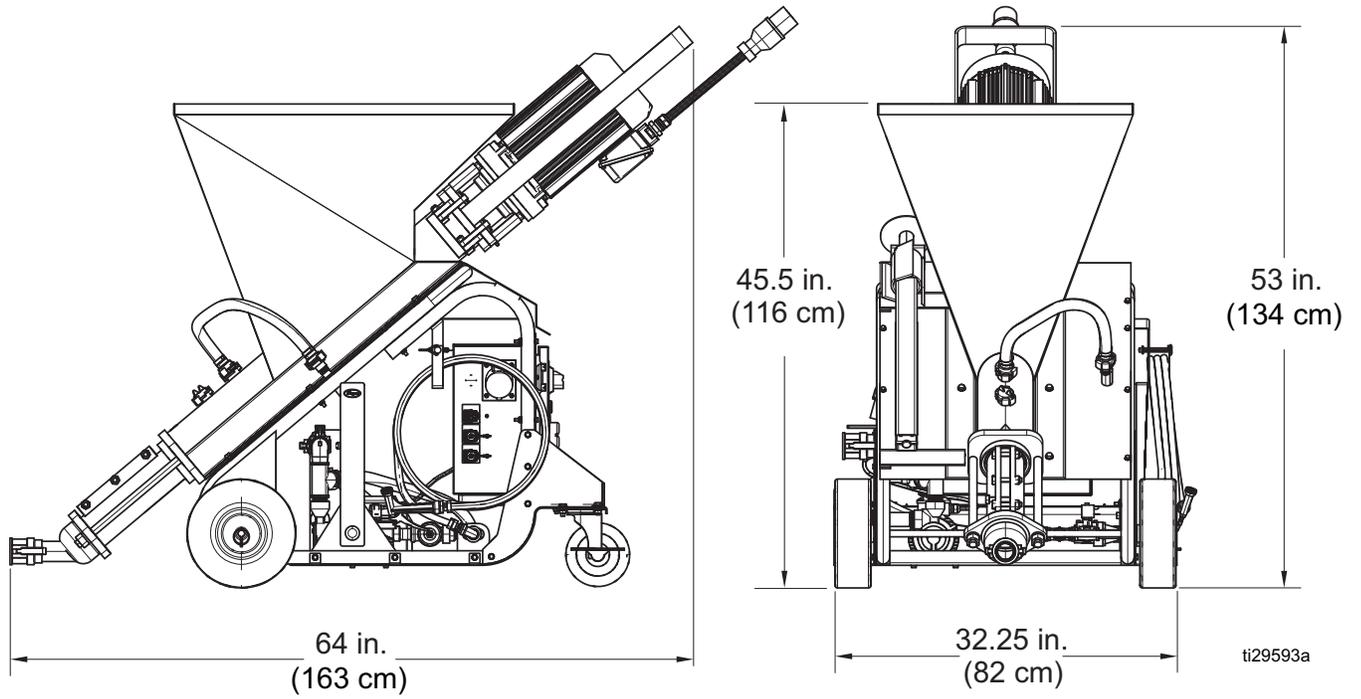

Technical Specifications

| ToughTek MP-20 Mixing Pump 25M060, 25M064 | | |
|--|---|--------------------|
| | US | Metric |
| Maximum Fluid Working Pressure | 300 psi | 2.07 MPa, 20.7 bar |
| Maximum Motor Speed | 314 rpm | |
| Weight (empty) | 430 lb | 195 kg |
| Hopper Capacity | 37.4 gallons | 141.6 liters |
| Wetted Parts | Tool steel, painted steel, plated steel, PORON® | |
| Fluid Inlet Size | 3.0 in. | 7.6 cm |
| Fluid Outlet Size | 1.5 in. npt male with 1.5 in. male camlock | |
| Rotor/Stator Pump | D8-1.5 | |
| Power Requirements | | |
| Voltage | 200-240 VAC | |
| Minimum Circuit Breaker Size | 30 Amps | |
| Phase | 1 Phase | |
| Frequency | 60 Hz | |
| Water Pump Inlet Feed Pressure Requirements | | |
| Minimum Pressure | 40 psi | 0.28 MPa, 2.8 bar |
| Maximum Pressure | 70 psi | 0.48 MPa, 4.8 bar |
| Hose Requirements | | |
| Minimum Pressure | 300 psi | 2.07 MPa, 20.7 bar |
| Minimum Hose Diameter | 1.0 in. | 25 mm |
| Minimum Hose Length | 25 ft | 7.5 m |
| Noise Level (measured at 3.1 ft) | | |
| Sound Pressure | 85 dBa | |
| Operating Ambient Temperature | | |
| Temperature | 32° F to 120° F | 0° C to 49° C |

| ToughTek MP-20 16A Mixing Pump 25M061, 25M065 | | |
|--|---|--------------------|
| | US | Metric |
| Maximum Fluid Working Pressure | 300 psi | 2.07 MPa, 20.7 bar |
| Maximum Motor Speed | 244 rpm | |
| Weight (empty) | 430 lb | 195 kg |
| Hopper Capacity | 37.4 gallons | 141.6 liters |
| Wetted Parts | Tool steel, painted steel, plated steel, PORON® | |
| Fluid Inlet Size | 3.0 in. | 7.6 cm |
| Fluid Outlet Size | 1.5 in. npt male with 1.5 in. male camlock | |
| Rotor/Stator Pump | D8-1.5 | |
| Power Requirements | | |
| Voltage | 200-240 VAC | |
| Minimum Circuit Breaker Size | 16 Amps | |
| Phase | 1 Phase | |
| Frequency | 50 Hz | |
| Water Pump Inlet Feed Pressure Requirements | | |
| Minimum Pressure | 40 psi | 0.28 MPa, 2.8 bar |
| Maximum Pressure | 70 psi | 0.48 MPa, 4.8 bar |
| Hose Requirements | | |
| Minimum Pressure | 300 psi | 2.07 MPa, 20.7 bar |
| Minimum Hose Diameter | 1.0 in. | 25 mm |
| Minimum Hose Length | 25 ft | 7.5 m |
| Noise Level (measured at 3.1 ft) | | |
| Sound Pressure | 85 dBa | |
| Operating Ambient Temperature | | |
| Temperature | 32° F to 120° F | 0° C to 49° C |

| ToughTek MP-40 Pump 25M062, 25M066 | | |
|--|---|--------------------|
| | US | Metric |
| Maximum Fluid Working Pressure | 300 psi | 2.07 MPa, 20.7 bar |
| Maximum Motor Speed | 327 rpm | |
| Weight (empty) | 480 lb | 218 kg |
| Hopper Capacity | 37.4 gallons | 141.6 liters |
| Wetted Parts | Tool steel, painted steel, plated steel, PORON® | |
| Fluid Inlet Size | 3.8 in. | 9.7 cm |
| Fluid Outlet Size | 1.5 in. npt male with 1.5 in. male camlock | |
| Rotor/Stator Pump | R7-1.5 | |
| Power Requirements | | |
| Voltage | 200-240 VAC | |
| Minimum Circuit Breaker Size | 25 Amps | |
| Phase | 3 Phase | |
| Frequency | 60 Hz | |
| Water Pump Inlet Feed Pressure Requirements | | |
| Minimum Pressure | 40 psi | 0.28 MPa, 2.8 bar |
| Maximum Pressure | 70 psi | 0.48 MPa, 4.8 bar |
| Hose Requirements | | |
| Minimum Pressure | 300 psi | 2.07 MPa, 20.7 bar |
| Minimum Hose Diameter | 1.0 in. | 25 mm |
| Minimum Hose Length | 25 ft | 7.5 m |
| Noise Level (measured at 3.1 ft) | | |
| Sound Pressure | 84 dBa | |
| Operating Ambient Temperature | | |
| Temperature | 32° F to 120° F | 0° C to 49° C |

| ToughTek MP-40 380V Mixing Pump 25M063, 25M067 | | |
|---|---|--------------------|
| | US | Metric |
| Maximum Fluid Working Pressure | 300 psi | 2.07 MPa, 20.7 bar |
| Maximum Motor Speed | 349 rpm | |
| Weight (empty) | 450 lb | 204 kg |
| Hopper Capacity | 37.4 gallons | 141.6 liters |
| Wetted Parts | Tool steel, painted steel, plated steel, PORON® | |
| Fluid Inlet Size | 3.8 in. | 9.7 cm |
| Fluid Outlet Size | 1.5 in. npt male with 1.5 in. male camlock | |
| Rotor/Stator Pump | R7-1.5 | |
| Power Requirements | | |
| Voltage | 350-415 VAC | |
| Minimum Circuit Breaker Size | 25 Amps | |
| Phase | 3 Phase | |
| Frequency | 50 Hz | |
| Water Pump Inlet Feed Pressure Requirements | | |
| Minimum Pressure | 40 psi | 0.28 MPa, 2.8 bar |
| Maximum Pressure | 70 psi | 0.48 MPa, 4.8 bar |
| Hose Requirements | | |
| Minimum Pressure | 300 psi | 2.07 MPa, 20.7 bar |
| Minimum Hose Diameter | 1.0 in. | 25 mm |
| Minimum Hose Length | 25 ft | 7.5 m |
| Noise Level (measured at 3.1 ft) | | |
| Sound Pressure | 86 dBa | |
| Operating Ambient Temperature | | |
| Temperature | 32° F to 120° F | 0° C to 49° C |

California Proposition 65

CALIFORNIA RESIDENTS

 **WARNING:** Cancer and reproductive harm – www.P65warnings.ca.gov.

Graco Standard Warranty

Graco warrants all equipment referenced in this document which is manufactured by Graco and bearing its name to be free from defects in material and workmanship on the date of sale to the original purchaser for use. With the exception of any special, extended, or limited warranty published by Graco, Graco will, for a period of twelve months from the date of sale, repair or replace any part of the equipment determined by Graco to be defective. This warranty applies only when the equipment is installed, operated and maintained in accordance with Graco's written recommendations.

This warranty does not cover, and Graco shall not be liable for general wear and tear, or any malfunction, damage or wear caused by faulty installation, misapplication, abrasion, corrosion, inadequate or improper maintenance, negligence, accident, tampering, or substitution of non-Graco component parts. Nor shall Graco be liable for malfunction, damage or wear caused by the incompatibility of Graco equipment with structures, accessories, equipment or materials not supplied by Graco, or the improper design, manufacture, installation, operation or maintenance of structures, accessories, equipment or materials not supplied by Graco.

This warranty is conditioned upon the prepaid return of the equipment claimed to be defective to an authorized Graco distributor for verification of the claimed defect. If the claimed defect is verified, Graco will repair or replace free of charge any defective parts. The equipment will be returned to the original purchaser transportation prepaid. If inspection of the equipment does not disclose any defect in material or workmanship, repairs will be made at a reasonable charge, which charges may include the costs of parts, labor, and transportation.

THIS WARRANTY IS EXCLUSIVE, AND IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.

Graco's sole obligation and buyer's sole remedy for any breach of warranty shall be as set forth above. The buyer agrees that no other remedy (including, but not limited to, incidental or consequential damages for lost profits, lost sales, injury to person or property, or any other incidental or consequential loss) shall be available. Any action for breach of warranty must be brought within two (2) years of the date of sale.

GRACO MAKES NO WARRANTY, AND DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IN CONNECTION WITH ACCESSORIES, EQUIPMENT, MATERIALS OR COMPONENTS SOLD BUT NOT MANUFACTURED BY GRACO. These items sold, but not manufactured by Graco (such as electric motors, switches, hose, etc.), are subject to the warranty, if any, of their manufacturer. Graco will provide purchaser with reasonable assistance in making any claim for breach of these warranties.

In no event will Graco be liable for indirect, incidental, special or consequential damages resulting from Graco supplying equipment hereunder, or the furnishing, performance, or use of any products or other goods sold hereto, whether due to a breach of contract, breach of warranty, the negligence of Graco, or otherwise.

FOR GRACO CANADA CUSTOMERS

The Parties acknowledge that they have required that the present document, as well as all documents, notices and legal proceedings entered into, given or instituted pursuant hereto or relating directly or indirectly hereto, be drawn up in English. Les parties reconnaissent avoir convenu que la rédaction du présente document sera en Anglais, ainsi que tous documents, avis et procédures judiciaires exécutés, donnés ou intentés, à la suite de ou en rapport, directement ou indirectement, avec les procédures concernées.

Graco Information

For the latest information about Graco products, visit www.graco.com.

For patent information, see www.graco.com/patents.

TO PLACE AN ORDER, contact your Graco distributor or call to identify the nearest distributor.

Phone: 612-623-6921 or Toll Free: 1-800-328-0211 Fax: 612-378-3505

All written and visual data contained in this document reflects the latest product information available at the time of publication. Graco reserves the right to make changes at any time without notice.

Original instructions. This manual contains English. MM 3A4349

Graco Headquarters: Minneapolis

International Offices: Belgium, China, Japan, Korea

GRACO INC. AND SUBSIDIARIES • P.O. BOX 1441 • MINNEAPOLIS MN 55440-1441 • USA
Copyright 2020, Graco Inc. All Graco manufacturing locations are registered to ISO 9001.

www.graco.com

Revision M, March 2020