

REACTOR™

312475A


Instructions for removing Electric Reactor proportioner from shipping pallet.



Important Safety Instructions

Read all warnings and instructions in manuals 312065 and 312066. Save those instructions.

1. Remove bolts that hold unit to pallet.
2. Slide unit off back support bracket.
3. Move unit to edge of pallet and slide front of unit onto ground.
4. Tilt unit so that wheels are off pallet.
5. Have a second person slide pallet away from unit so there is enough clearance for back of unit to be set on ground.

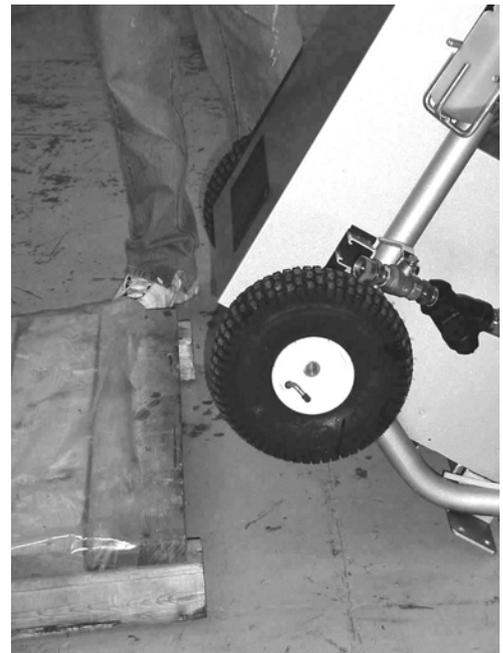

PROVEN QUALITY. LEADING TECHNOLOGY.



*All written and visual data contained in this document reflects the latest product information available at the time of publication.
Graco reserves the right to make changes at any time without notice.*

MM 312475

Graco Headquarters: Minneapolis

International Offices: Belgium, China, Japan, Korea

GRACO INC. P.O. BOX 1441 MINNEAPOLIS, MN 55440-1441

www.graco.com

10/2007