

15U955 Injection Kit

406715C

For ProMix® 2KS Proportioners using Dynamic Dosing

EN




Important Safety Instructions

Read all warnings and instructions in the ProMix 2KS installation and operation manuals. Save those instructions.

Ref.	Part No.	Description	Qty.
1	n/a	O-RING, housing	2
2	15U936	RESTRICTOR, injection; .020	1
3	15U937	RESTRICTOR, injection; .030	1
4	15U938	RESTRICTOR, injection; .040	1
7	15U941	RESTRICTOR, injection; .070	1
9	n/a	CAP, injection	1
10	n/a	O-RING, integrator base	1
11	n/a	O-RING, screw	2

Optional restrictor sizes 5, 6, and 8 are available separately. See ProMix 2KS installation manual.

- ① Remove parts from housing (H), following instructions in ProMix 2KS installation manual. Rotate housing 180°.
- ② Install one large o-ring (1) and cap (9) in housing (H).
- ③ Select desired restrictor (2, 3, 4, 7) and install in base (K).
- ④ Assemble small o-ring (10), restrictor and base, large o-ring (1), and plug (J) as shown.
- ⑤ Install setscrews and o-rings (11) in housing, with long setscrew (S) at front.
- ⑥ Screw static mixer (SM) into cap (9). Install fitting (D) on static mixer tube and secure with nut (N).

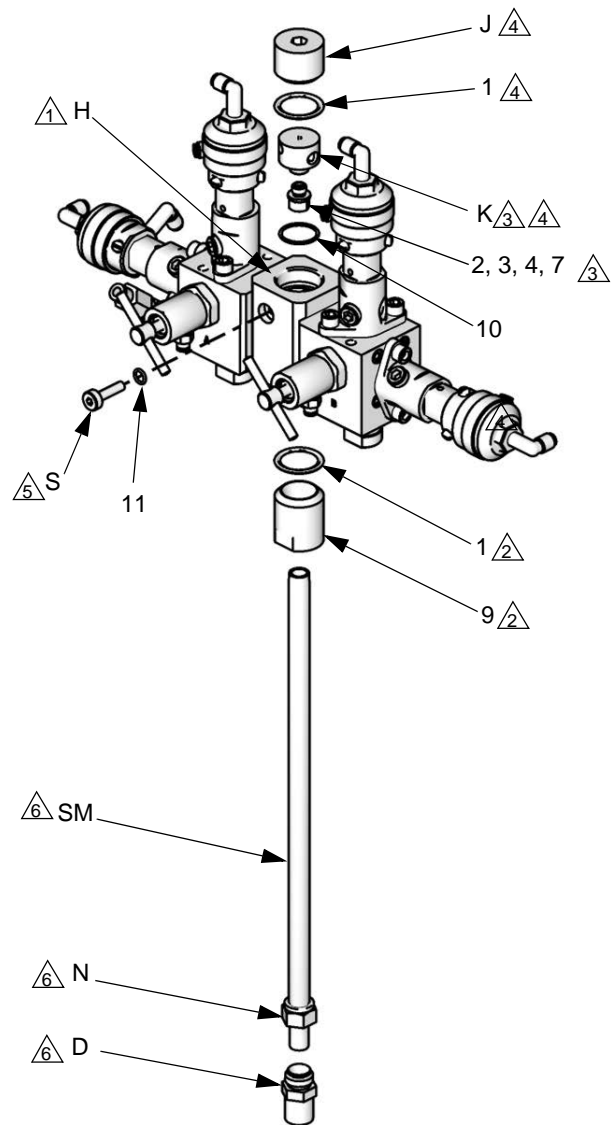

T113360b

Graco Information

For the latest information about Graco products, visit www.graco.com.

For patent information, see www.graco.com/patents.

TO PLACE AN ORDER, contact your Graco distributor or call to identify the nearest distributor.
Phone: 612-623-6921 **or Toll Free:** 1-800-328-0211 **Fax:** 612-378-3505

*All written and visual data contained in this document reflects the latest product information available at the time of publication.
Graco reserves the right to make changes at any time without notice.*

Original instructions. This manual contains English. MM 406715

Graco Headquarters: Minneapolis

International Offices: Belgium, China, Japan, Korea

GRACO INC. AND SUBSIDIARIES • P.O. BOX 1441 • MINNEAPOLIS MN 55440-1441 • USA
Copyright 2008, Graco Inc. All Graco manufacturing locations are registered to ISO 9001.

www.graco.com

Revision C, July 2016