

LineLazer IV 250_{DC} Self-Propelled Line Striper

333388B
EN

**For the application of line striping materials.
For professional use only.
For outdoor use only.
Not for use in hazardous locations or explosive atmospheres.**

*Maximum Operating Speed: 10 mph (16 kph)
Maximum Operating Pressure: 3300 psi (22.8 MPa, 228 bar)*



IMPORTANT SAFETY INSTRUCTIONS

Read all warnings and instructions in this manual and the engine manual.
Be familiar with the controls and the proper usage of the equipment.
Save these instructions.

Model	Guns	Pressurized Bead System	Description
24U242	2	No	LLIV 250DC
24U243	2	Yes	LLIV 250DC
24U810	3	No	LLIV 250DC
24U820	3	Yes	LLIV 250DC

Related Manuals:	
334053	Repair
334054	Parts
311254	Gun
309277	Pump
312307	Auto-Layout Applications Methods
332230	Pressurized Bead System (PBS)

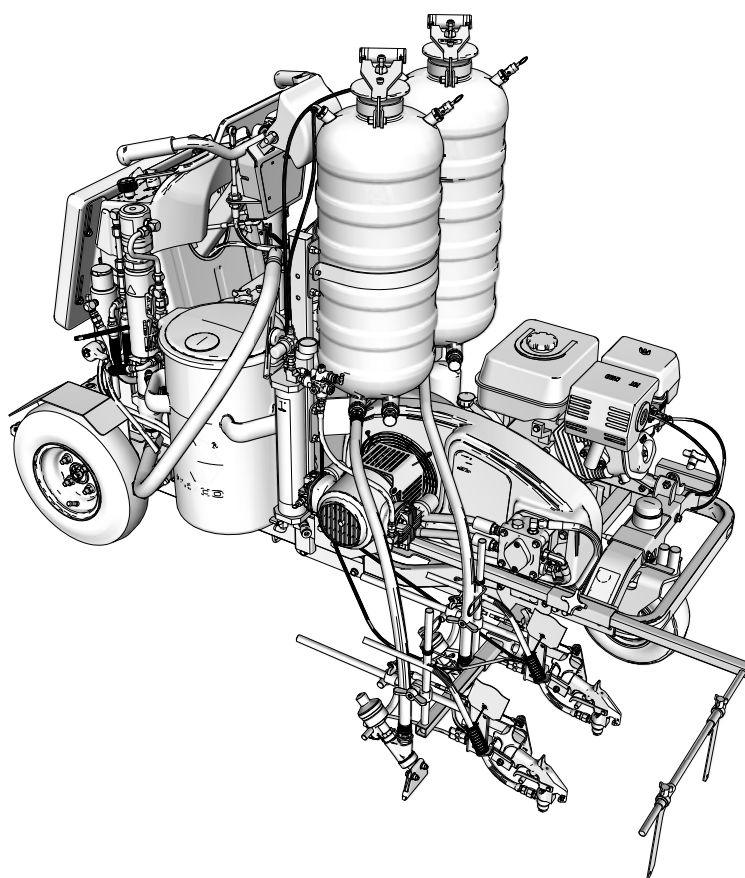













Table of Contents







Warnings	3	Smart Control Operation	21
Component Identification (Striper)	6	Menu Tree	21
Component Identification (Controls)	7	Control Features	22
Grounding Procedure		Main Menus	23
(For Flammable Materials Only)	8	Initial Setup	24
Pressure Relief Procedure	8	Striping Mode	26
Setup/Startup	9	Measure Mode	27
SwitchTip and Guard Assembly	11	Layout Mode	28
Gun Placement	12	Stall Calculator	29
Install Guns	12	Angle Calculator	30
Position Guns	12	Setup/Information	31
Gun Arm Mounts	13	Data/Information	32
Change Gun Position		Information (2)	33
(Front and Back)	13	World Symbol Key	35
Change Gun Position		Cleanup	36
(Left and Right)	13	Hydraulic Oil/Filter Change	37
Gun Cable Adjustment	15	Removal	37
Change Trigger Position	16	Installation	37
Gun Positions Chart	17	Technical Specifications	38
Driving Instructions	18	Graco Standard Warranty	40
Parking/Emergency Brake	19		
Drive Engagement	19		
Straight Line Adjustment	19		
Handle Bar Height Adjustment	20		
Platform Storage Position	20		
Front Pad Adjustment	20		

Warnings

The following warnings are for the setup, use, grounding, maintenance, and repair of this equipment. The exclamation point symbol alerts you to a general warning and the hazard symbols refer to procedure-specific risks. When these symbols appear in the body of this manual or on warning labels, refer back to these Warnings. Product-specific hazard symbols and warnings not covered in this section may appear throughout the body of this manual where applicable.

 WARNING	
 	<p>TRAFFIC HAZARD Being struck by other vehicles may result in serious injury or death.</p> <ul style="list-style-type: none"> Do not operate in traffic. Use appropriate traffic control in all traffic areas. Follow local highway and transportation regulations for traffic control (for example: Manual on Uniform Traffic Control Devices, U.S. Department of Transportation).
   	<p>FIRE AND EXPLOSION HAZARD Flammable fumes, such as solvent and paint fumes, in work area can ignite or explode. To help prevent fire and explosion:</p> <ul style="list-style-type: none"> Use equipment only in well ventilated area. Do not fill fuel tank while engine is running or hot; shut off engine and let it cool. Fuel is flammable and can ignite or explode if spilled on hot surface. Eliminate all ignition sources; such as pilot lights, cigarettes, portable electric lamps, and plastic drop cloths (potential static arc). Keep work area free of debris, including solvent, rags and gasoline. Do not plug or unplug power cords, or turn power or light switches on or off when flammable fumes are present. Ground all equipment in the work area. See Grounding instructions. Use only grounded hoses. Hold gun firmly to side of grounded pail when triggering into pail. Do not use pail liners unless they are antistatic or conductive. Stop operation immediately if static sparking occurs or you feel a shock. Do not use equipment until you identify and correct the problem. Keep a working fire extinguisher in the work area.
  	<p>INJECTION HAZARD High-pressure fluid from gun, hose leaks, or ruptured components will pierce skin. This may look like just a cut, but it is a serious injury that can result in amputation. Get immediate surgical treatment.</p> <ul style="list-style-type: none"> Do not spray without tip guard and trigger guard installed. Engage trigger lock when not spraying. Do not point gun at anyone or at any part of the body. Do not put your hand over the spray tip. Do not stop or deflect leaks with your hand, body, glove, or rag. Follow the Pressure Relief Procedure when you stop spraying and before cleaning, checking, or servicing equipment. Tighten all fluid connections before operating the equipment. Check hoses and couplings daily. Replace worn or damaged parts immediately.
	<p>CARBON MONOXIDE HAZARD Exhaust contains poisonous carbon monoxide, which is colorless and odorless. Breathing carbon monoxide can cause death.</p> <ul style="list-style-type: none"> Do not operate in an enclosed area.

! WARNING

	<p>PRESSURIZED ALUMINUM PARTS HAZARD</p> <p>Use of fluids that are incompatible with aluminum in pressurized equipment can cause serious chemical reaction and equipment rupture. Failure to follow this warning can result in death, serious injury, or property damage.</p> <ul style="list-style-type: none"> • Do not use 1,1,1-trichloroethane, methylene chloride, other halogenated hydrocarbon solvents or fluids containing such solvents. • Many other fluids may contain chemicals that can react with aluminum. Contact your material supplier for compatibility.
 	<p>ENTANGLEMENT HAZARD</p> <p>Rotating parts can cause serious injury.</p> <ul style="list-style-type: none"> • Keep clear of moving parts. • Do not operate equipment with protective guards or covers removed. • Do not wear loose clothing, jewelry or long hair while operating equipment. • Equipment can start without warning. Before checking, moving, or servicing equipment, follow the Pressure Relief Procedure and disconnect all power sources.
 	<p>MOVING PARTS HAZARD</p> <p>Moving parts can pinch, cut or amputate fingers and other body parts.</p> <ul style="list-style-type: none"> • Keep clear of moving parts. • Do not operate equipment with protective guards or covers removed. • Do not wear loose clothing, jewelry or long hair while operating equipment. • Equipment can start without warning. Before checking, moving, or servicing equipment, follow the Pressure Relief Procedure and disconnect all power sources.
	<p>EQUIPMENT MISUSE HAZARD</p> <p>Misuse can cause death or serious injury.</p> <ul style="list-style-type: none"> • Do not operate the unit when fatigued or under the influence of drugs or alcohol. • Do not exceed the maximum working pressure or temperature rating of the lowest rated system component. See Technical Data in all equipment manuals. • Use fluids and solvents that are compatible with equipment wetted parts. See Technical Data in all equipment manuals. Read fluid and solvent manufacturer's warnings. For complete information about your material, request MSDS from distributor or retailer. • Do not leave the work area while equipment is energized or under pressure. • Turn off all equipment and follow the Pressure Relief Procedure when equipment is not in use. • Check equipment daily. Repair or replace worn or damaged parts immediately with genuine manufacturer's replacement parts only. • Do not alter or modify equipment. Alterations or modifications may void agency approvals and create safety hazards. • Make sure all equipment is rated and approved for the environment in which you are using it. • Use equipment only for its intended purpose. Call your distributor for information. • Route hoses and cables away from traffic areas, sharp edges, moving parts, and hot surfaces. • Do not kink or over bend hoses or use hoses to pull equipment. • Keep children and animals away from work area. • Comply with all applicable safety regulations. • Do not carry passengers. • Check work area for reduced overhead clearance (e.g. doorways, tree branches, parking ramp ceilings) and avoid contacting them.

WARNING



BATTERY HAZARD

The battery may leak, explode, cause burns, or cause an explosion if mishandled. Contents of an open battery can cause severe irritation and/or chemical burns. If on skin, wash with soap and water. If in eyes, flush with water for at least 15 minutes and get immediate medical attention.

- Only use the battery type specified for use with the equipment. See **Technical Data**.
- Battery maintenance must only be performed or supervised by personnel knowledgeable of batteries and the required precautions. Keep unauthorized personnel away from battery.
- Do not dispose of battery in fire. The battery is capable of exploding.
- Follow local ordinances and/or regulations for disposal.
- Do not open or mutilate the battery. Released electrolyte has been known to be harmful to the skin and eyes and to be toxic.
- Remove watches, rings, or other metal objects.
- Only use tools with insulated handles. Do not lay tools or metal parts on top of battery.



BURN HAZARD

Equipment surfaces and fluid that's heated can become very hot during operation. To avoid severe burns:

- Do not touch hot fluid or equipment.



PERSONAL PROTECTIVE EQUIPMENT


Wear appropriate protective equipment when in the work area to help prevent serious injury, including eye injury, hearing loss, inhalation of toxic fumes, and burns. This protective equipment includes but is not limited to:

- Protective eyewear, and hearing protection.
- Respirators, protective clothing, and gloves as recommended by the fluid and solvent manufacturer.

CALIFORNIA PROPOSITION 65

This product contains a chemical known to the State of California to cause cancer, birth defects or other reproductive harm. Wash hands after handling.


Component Identification (Striper)

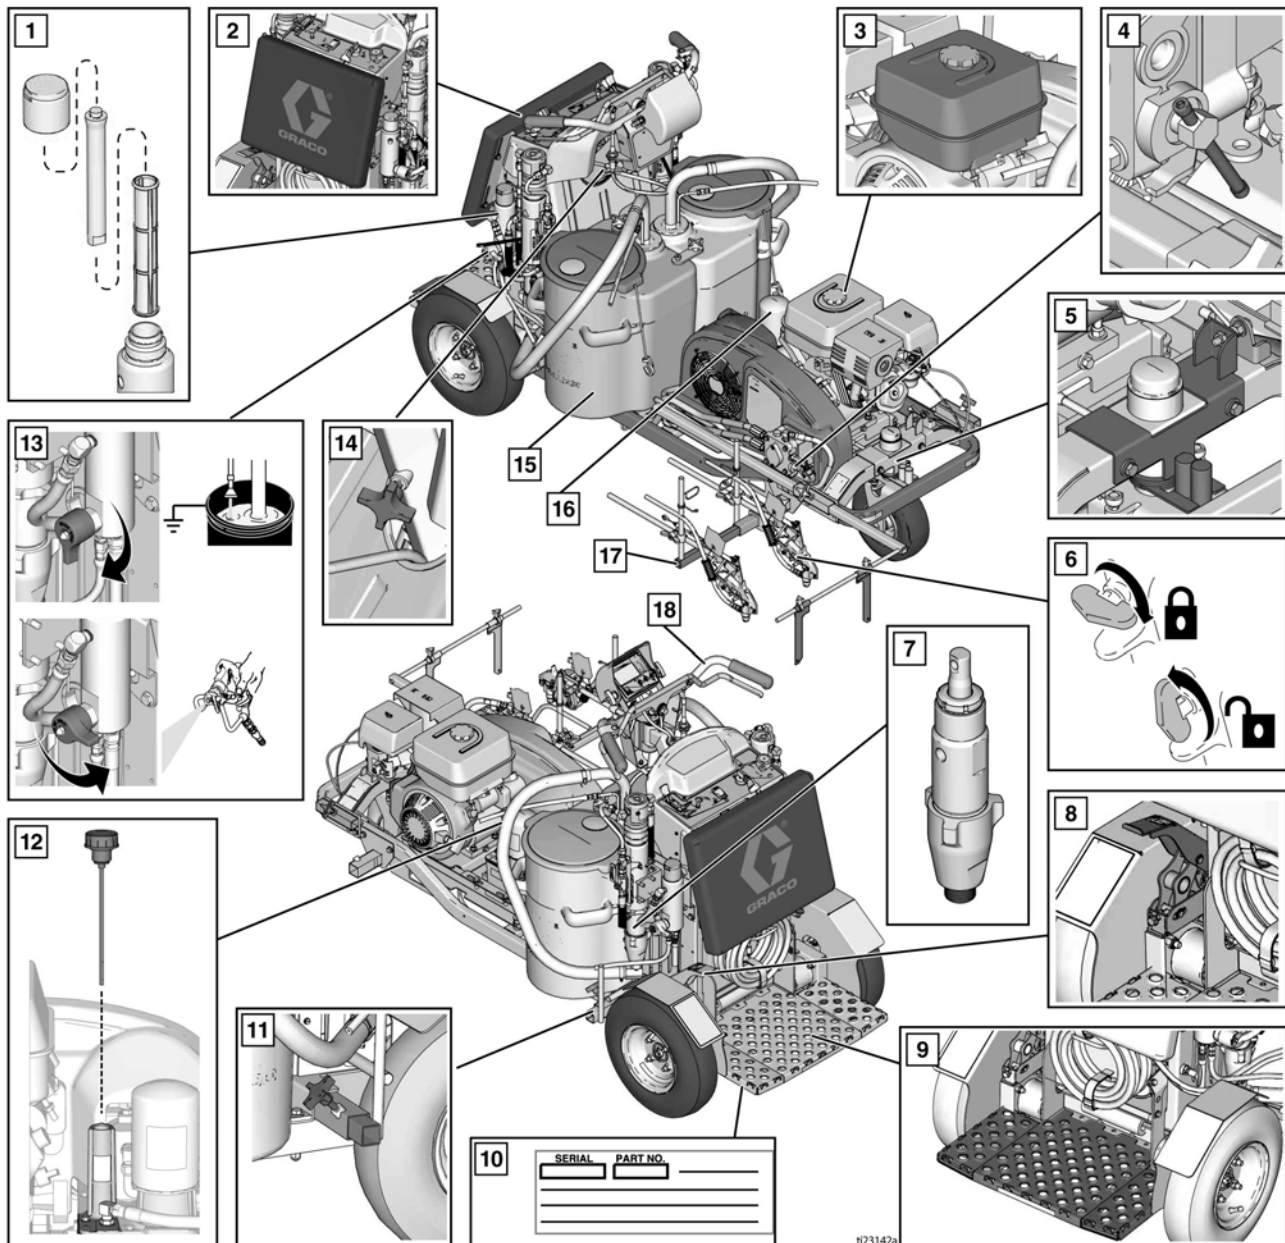

1	Paint Filter, both sides
2	Adjustable Pad
3	Engine Fuel Cap
4	Wheel Motor Bypass Valve
5	Straight Line Adjuster
6	Gun Trigger Lock
7	Displacement Pump, both sides
8	Brake
9	Operator Platform

10	Serial Label under operator platform
11	Rear Gun Arm Mount, both sides
12	Hydraulic Fill Cap / Dipstick
13	Prime / Drain Valve, both sides
14	Handle Bar Height Adjustment Knob
15	Two Paint Hoppers (15 gallon / 56 liter)
16	Hydraulic Oil Filter
17	Front Gun Mount, both sides
18	Steering Handle

Component Identification (Controls)

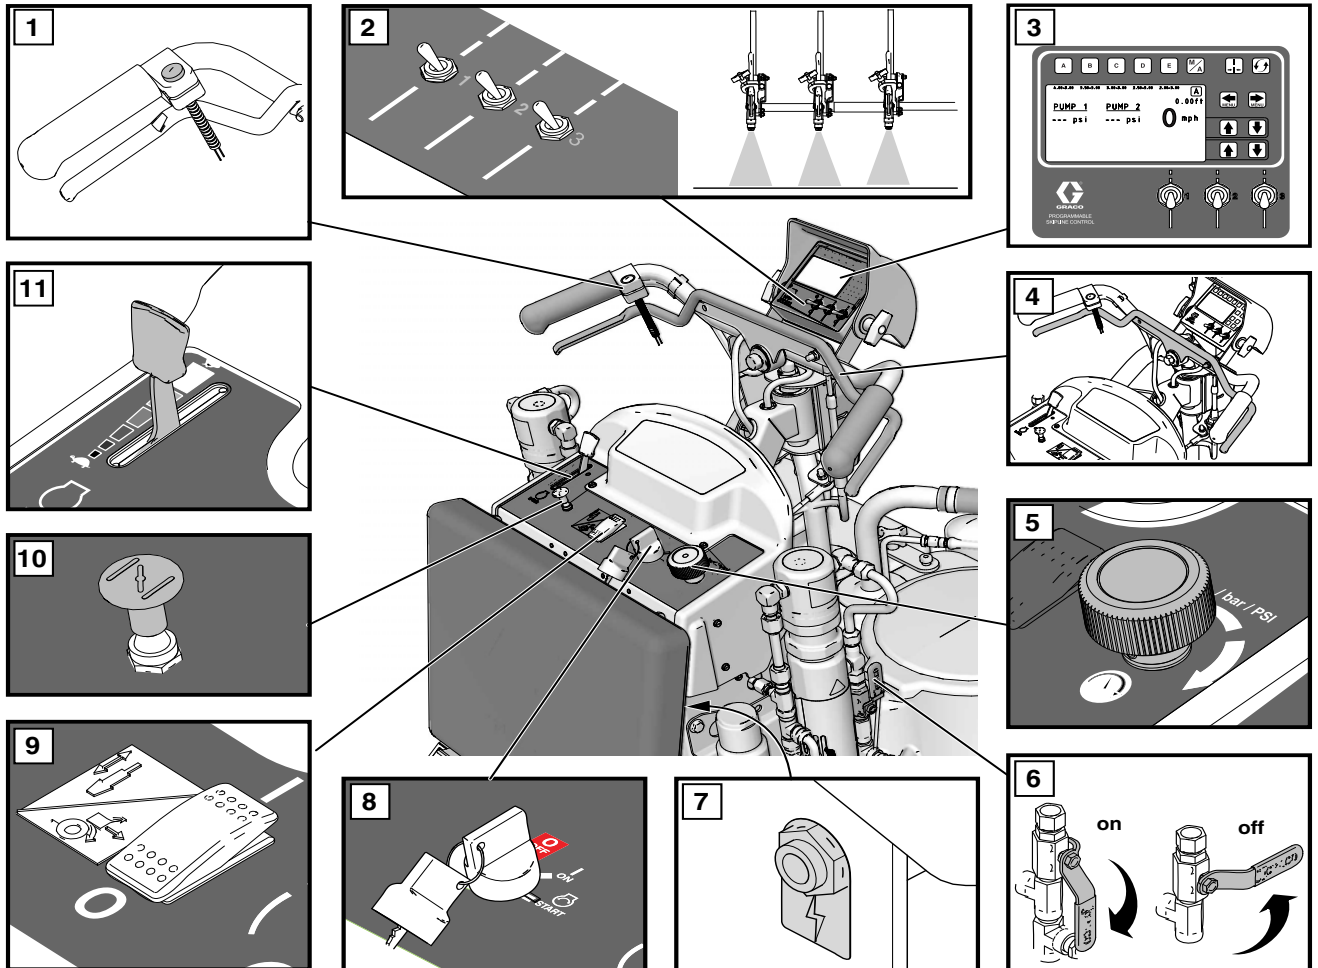




t123143a

1	Gun Trigger Control
2	Gun 1, 2, 3 Selector
3	Display
4	Forward / Reverse Lever
5	Pressure Control


6	Hydraulic Pump Valve, both sides
7	12V Accessory Jack
8	Engine Key Switch, Off - On - Start
9	Engine Clutch Switch
10	Engine Choke
11	Engine Throttle

Grounding Procedure (For Flammable Materials Only)





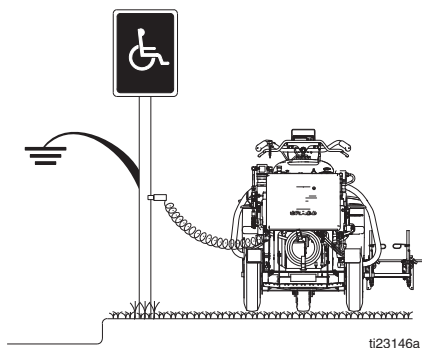

						
---	---	---	--	--	--	--

This equipment must be grounded to reduce the risk of static sparking. Static sparking can cause fumes to ignite or explode. Grounding provides an escape wire for the electric current.

1. Position striper so that the tires are not on pavement.
2. Striper is shipped with a grounding clamp. Grounding clamp must attach to grounded object (e.g. metal sign post).




Pressure Relief Procedure


					
---	---	--	---	---	---

This equipment stays pressurized until pressure is manually relieved. To help prevent serious injury from pressurized fluid, such as skin injection, splashing fluid and moving parts, follow the Pressure Relief Procedure when you stop spraying and before cleaning, checking, or servicing the equipment.


1. Perform **Grounding Procedure** if using flammable materials.
2. Set both (2) pump valves to **OFF**. Turn engine **OFF**.

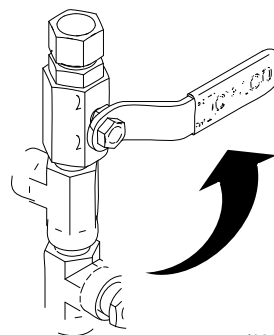

3. Turn pressure control to lowest setting. Trigger all guns to relieve pressure.

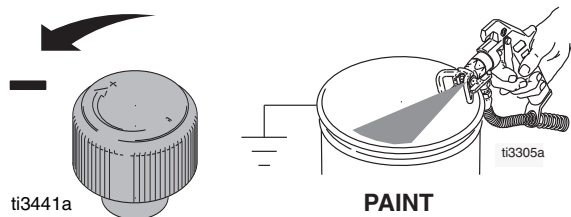

4. Engage all gun trigger locks. Turn both (2) prime valves down.

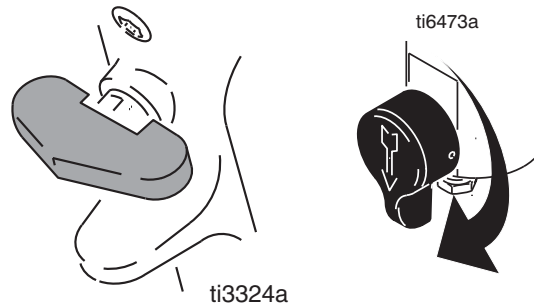


Setup/Startup




This equipment stays pressurized until pressure is manually relieved. To help prevent serious injury from pressurized fluid, such as skin injection, splashing fluid and moving parts, follow the Pressure Relief Procedure when you stop spraying and before cleaning, checking, or servicing the equipment.


1. Perform **Grounding Procedure (For Flammable Materials Only)**, page 8 if using flammable materials.
2. Fill both (2) throat packing nuts with Throat Seal Liquid (TSL) to decrease packing wear.

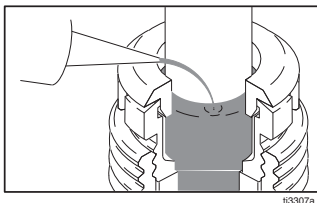


3. Check engine oil level. Add SAE 10W-30 (summer) or 5W-30 (winter). See engine manual.

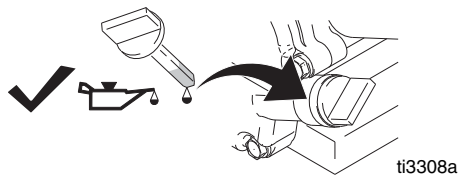


4. Fill fuel tank.

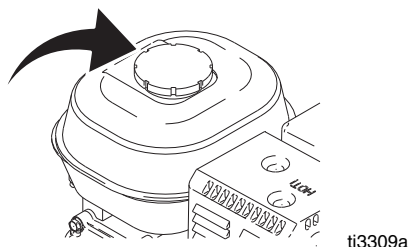


5. Set both (2) pump valves to **OFF**.

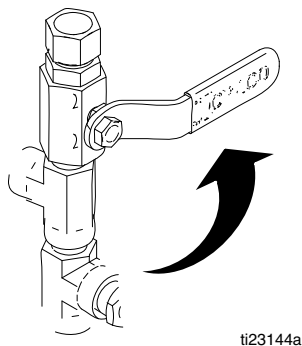

6. If removed, install both (2) strainers.

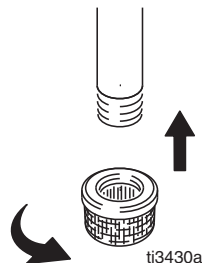


7. Turn both (2) prime valves down. Turn pressure control counterclockwise to lowest pressure.

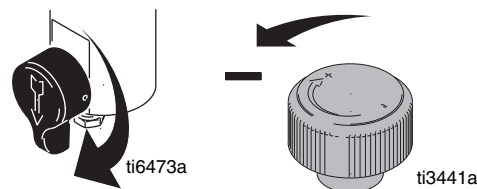


NOTE: Minimum hose size allowable for proper sprayer operation is 3/8 in. x 11 ft (9.5mm x 3.3m).

8. Place both (2) siphon tube sets in grounded metal pail partially filled with flushing fluid. Attach ground wire to true earth ground. Use water to flush water-base paint and mineral spirits to flush oil-base paint and storage oil.

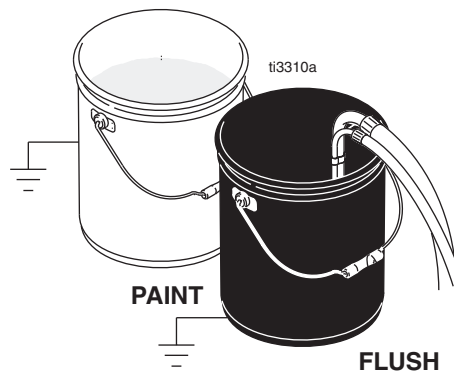


9. Apply brake.

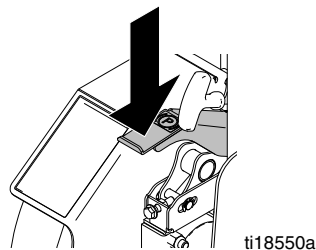


10. Start engine:


- a. Move fuel valve to open.

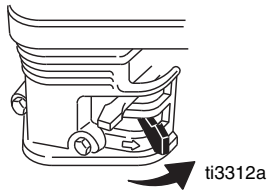


- b. Move choke to closed.

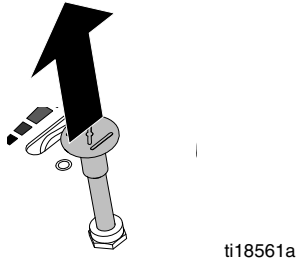


- c. Set throttle to fast.

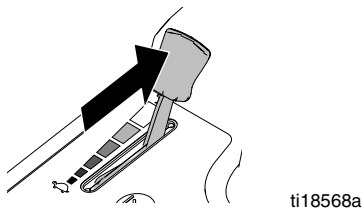


- d. Turn engine key switch clockwise to START.

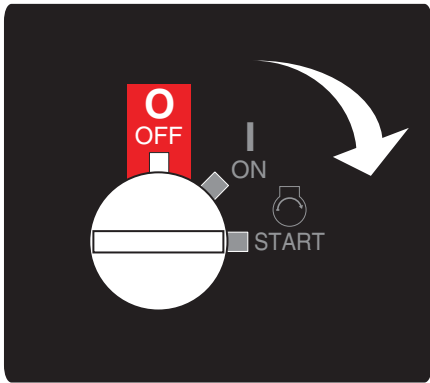


- e. After engine starts, move choke to open.

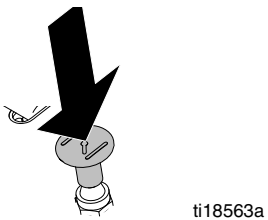


11. Set engine clutch switch to ON.

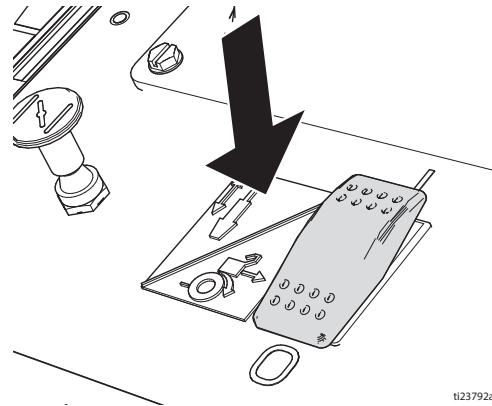


12. Set throttle to desired setting.

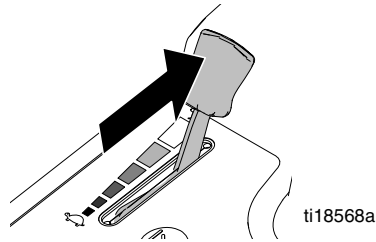


13. Set both (2) pump valves ON (pumps are now active).

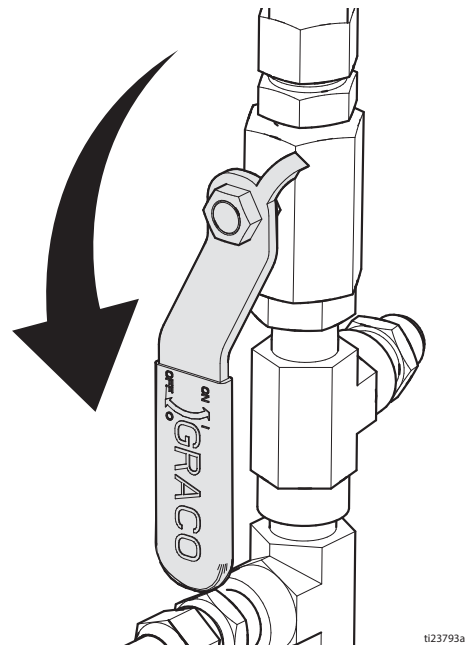


14. Increase pressure control enough to start pump. Allow fluid to circulate for 15 seconds.

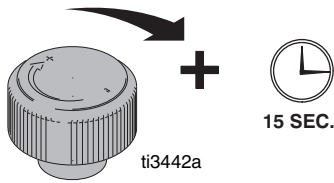

15. Turn pressure down, turn both prime valves horizontal. Disengage gun trigger lock.

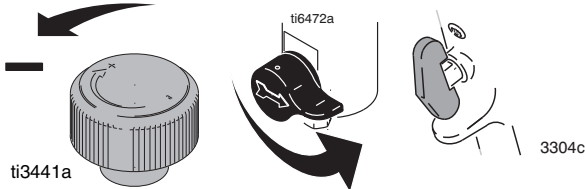


16. Hold all guns against a grounded metal flushing pail. Trigger guns and increase fluid pressure slowly until pumps run smoothly.

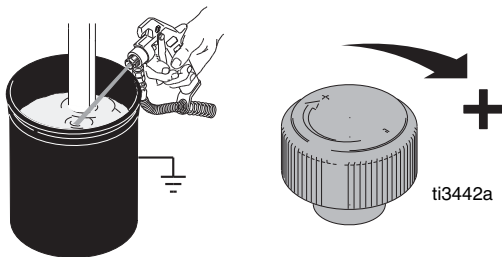


To avoid skin injection injury, do not stop leaks with your hand or a rag.

17. Inspect fittings for leaks. If leaks occur, turn sprayer OFF immediately. Perform **Pressure Relief Procedure**. Tighten leaky fittings. Repeat **Startup**, steps 1 - 17. If no leaks, continue to trigger gun until system is thoroughly flushed. Proceed to step 18.

18. Place siphon tube in paint pails.

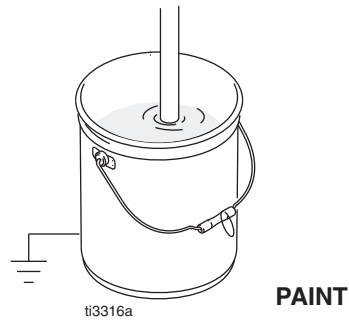


19. Trigger all guns again into a flushing fluid pail until paint appears. Assemble tips and guards.

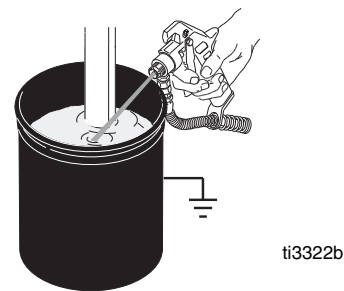


SwitchTip and Guard Assembly

1. Engage trigger lock. Use end of SwitchTip (A) to press OneSeal (B) into tip guard (D), with curve matching tip bore (C).

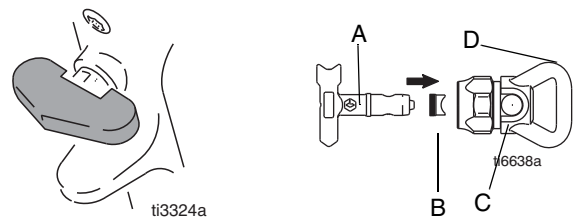


2. Insert SwitchTip in tip bore and firmly thread assembly onto gun.

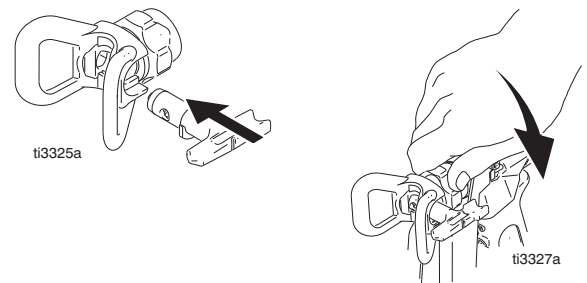

Gun Placement


Install Guns

1. Insert guns into gun holder. Tighten clamps.

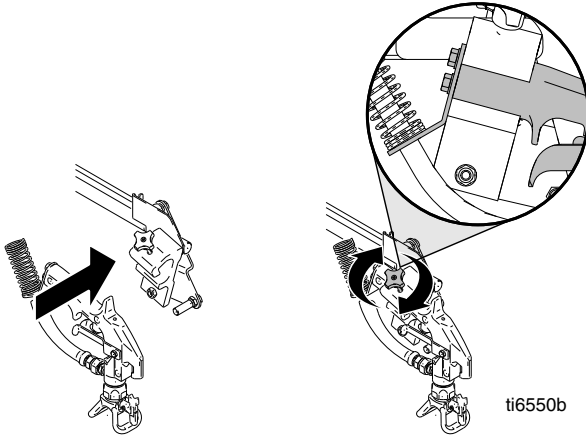


Position Guns


2. Position guns: up/down, forward/reverse, left/right. See **Gun Positions Chart**, page 17 for examples.

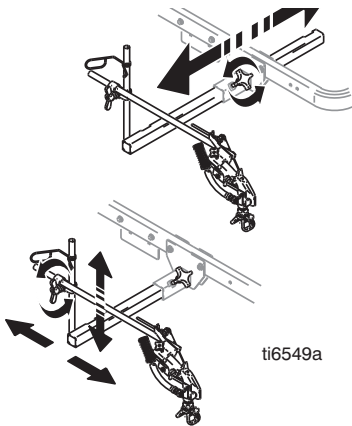


3. Use the three gun selector switches to determine which guns are active. Each gun selector switch has 3 positions: programmed line pattern, OFF, and continuous line.

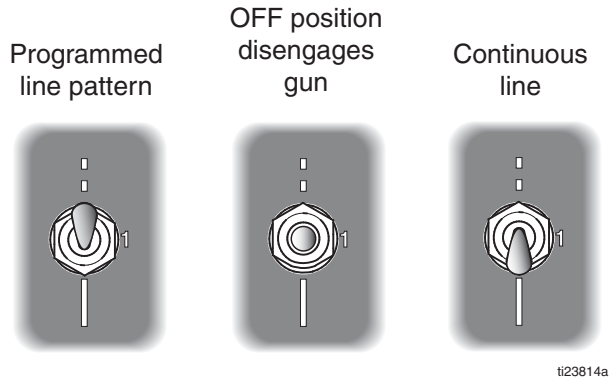

4. Use the gun trigger control to actuate guns.

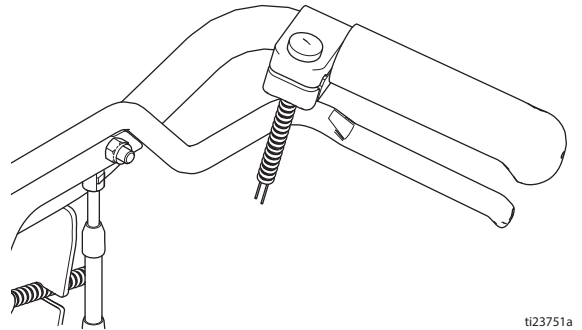


2 Examples:

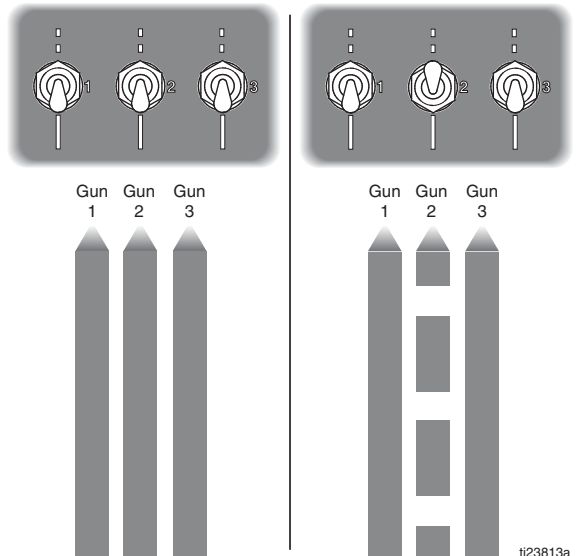


Gun Arm Mounts

This unit is equipped with front and rear gun arm mounts on either side.

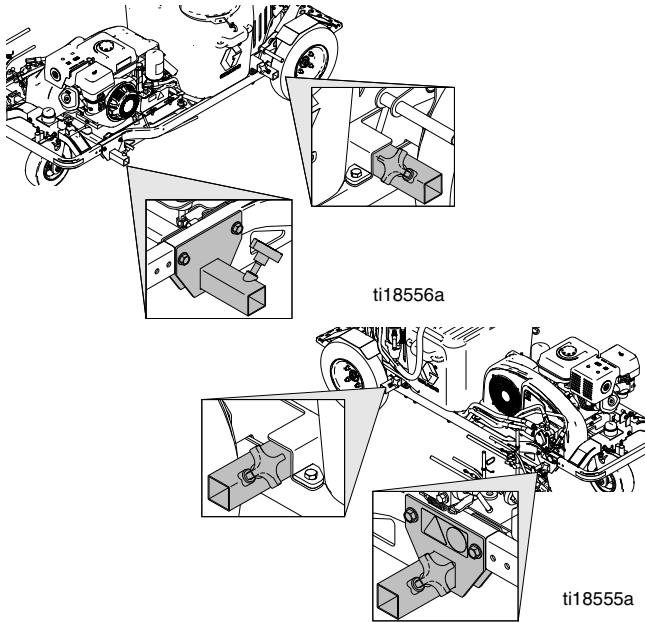


Change Gun Position (Front and Back)


1. Loosen gun arm knob and remove from gun arm mounting slot.

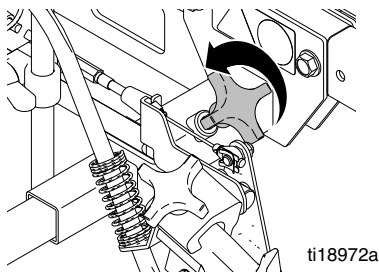


2. Slide gun arm assembly (including gun and hoses) out from gun arm mounting slot.

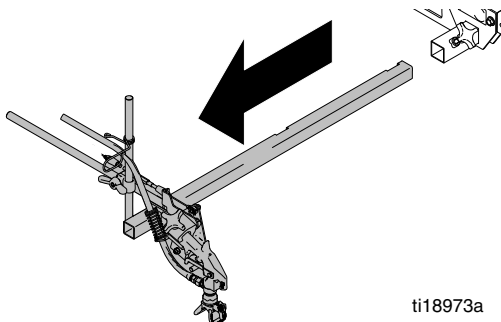

3. Slide gun arm assembly into desired gun arm mounting slot.

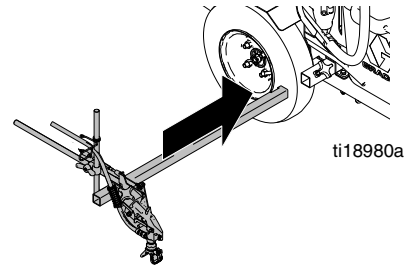

4. Tighten gun arm knob into gun arm mounting slot.

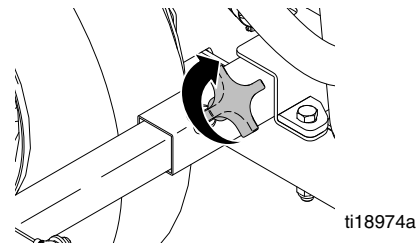


NOTICE

Make sure all hoses, cables, and wires are properly routed through brackets and do NOT rub on tire. Contact with tire will result in damaged hoses, cables, and wires.


Change Gun Position (Left and Right)

Removal

1. Loosen gun arm knob on gun arm mounting slot.

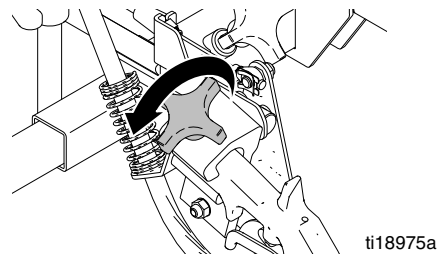


2. Remove guns from gun mounts. Gun hoses are color coded: Gun 1 Blue, Gun 2 Green, Gun 3 Black.

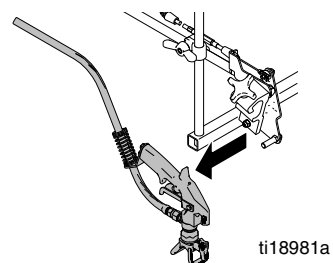


Gun Placement


- Loosen gun mounting wing nut and remove gun mount.

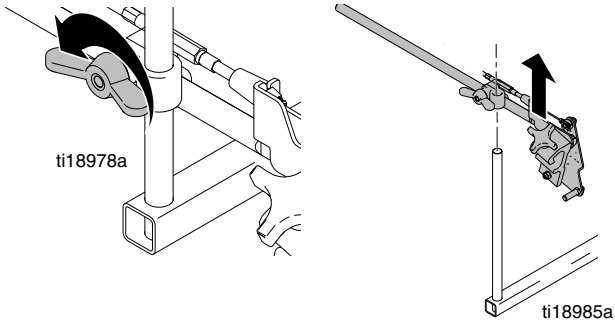


- Install gun mount onto gun arm assembly and tighten gun mount wing nut.

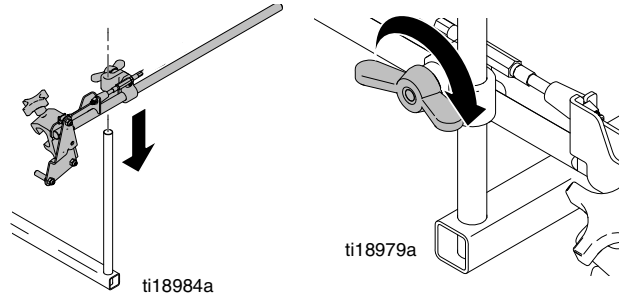


- Slide gun arm assembly out from gun arm mounting slot.

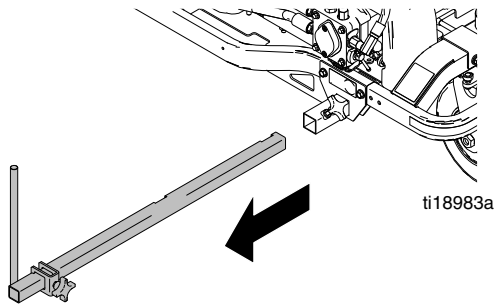

- Install guns into gun mounts.

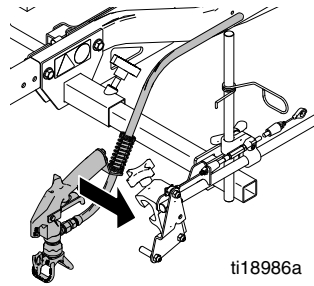


- Tighten gun knob into holder.

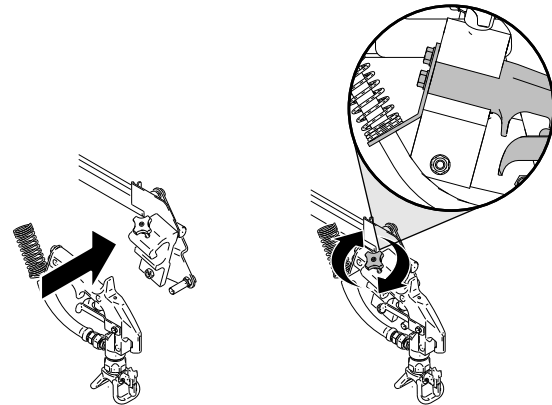

NOTE: Make sure all hoses, cables, and wires are properly routed through brackets.


Installation

- Slide gun arm assembly into gun arm mounting slot.

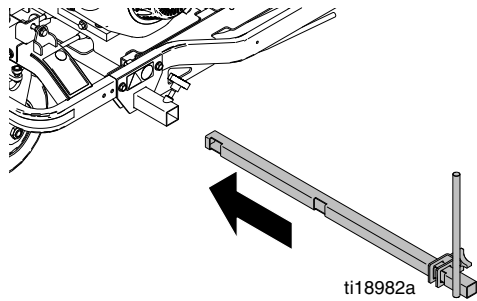

Gun Cable Adjustment

Adjusting the gun cable will increase or decrease the gap between the trigger plate and the gun trigger. To adjust trigger gap, perform the steps below.

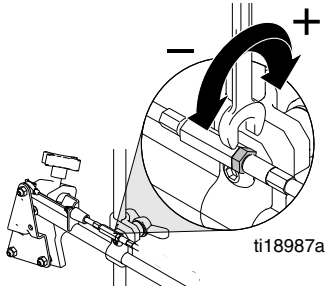


1. Use wrench to loosen locking nut on cable adjuster.
2. Loosen or tighten adjuster until desired result is achieved. **NOTE:** More thread exposed means less gap between gun trigger and trigger plate.
3. Use wrench to tighten locking nut on the adjuster.


Adding Gun Cable

This line stripper is equipped with three gun actuators. Each gun actuator is capable of operating two cables. For additional (3 to 6 guns) gun installation, attach cable to the desired actuator rod.


1. Select cable end with adjuster.
2. Install exposed cable through cable bracket slot.

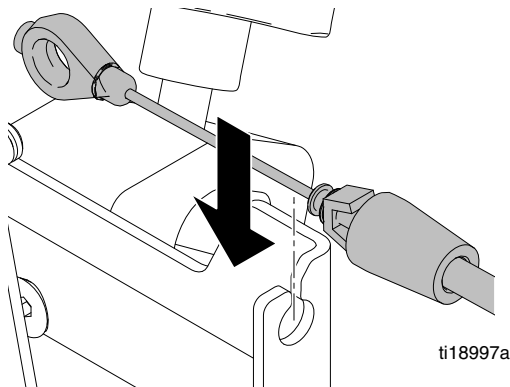


3. Insert plastic cable retainer into cable bracket hole.

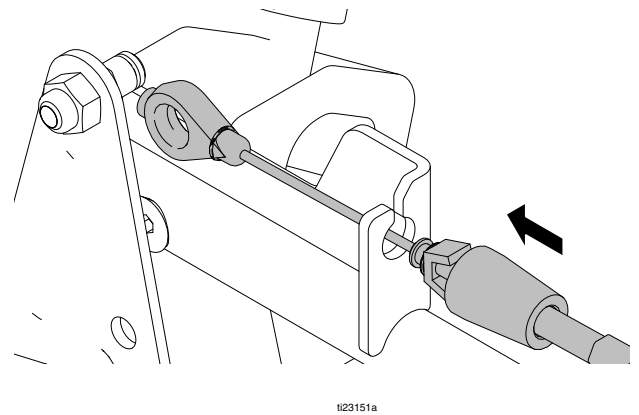


4. Install cable end onto trigger plate pin and install clip.

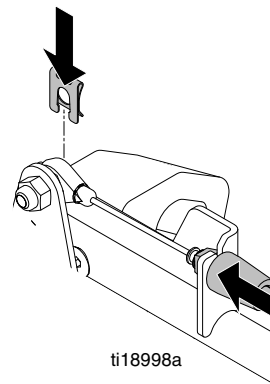

5. Route cable around unit and up through cable holes behind hose mount.

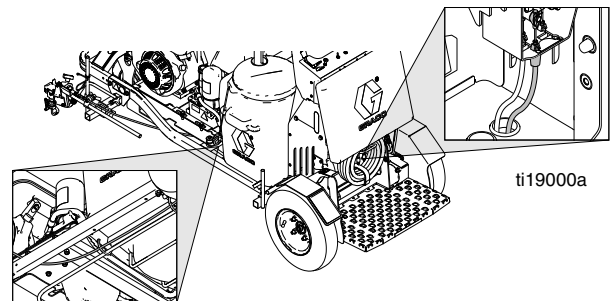


6. Route cable end loop through rectangular hole in bracket and insert plastic cable retainer into the actuator bracket. Install cable end onto actuator rod and install clip.

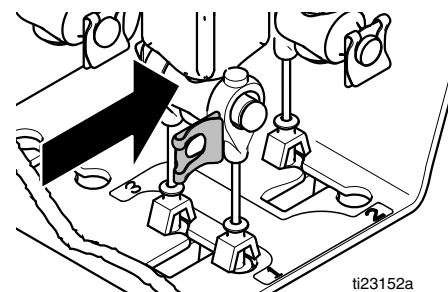


Change Trigger Position

Removal


1. Remove both hand grips from handle bar (spraying compressed air into end of handle grip works well for this).

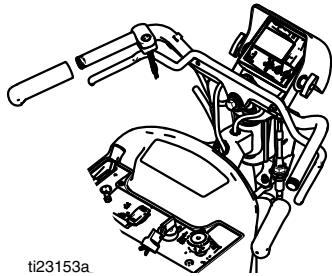

2. Use an allen wrench to loosen bolt on trigger mounting clamp.

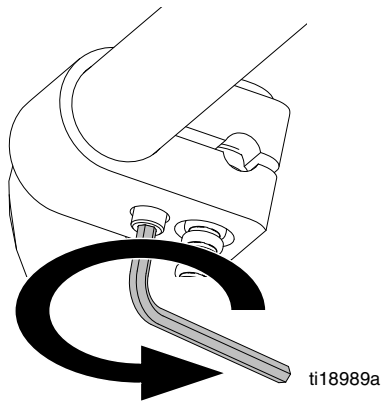


3. Remove trigger assembly from handle bar.

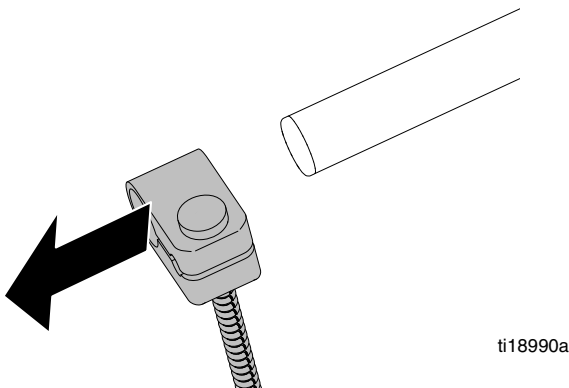


Installation


1. Route trigger wire to other side of handle bar. Make sure wire is routed behind steering column, through wire slot on steering plate, and into wire clamp on handle bar.

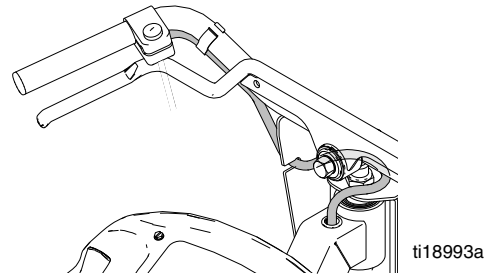


2. Install trigger assembly onto desired handle bar.

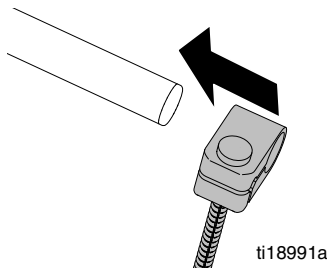


3. Use allen wrench to tighten bolt on trigger mounting clamp.

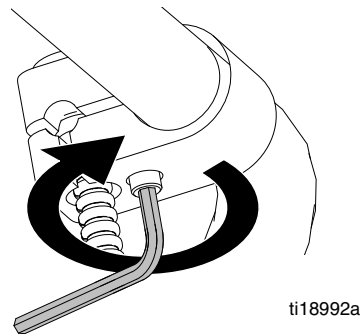

4. Replace hand grips.

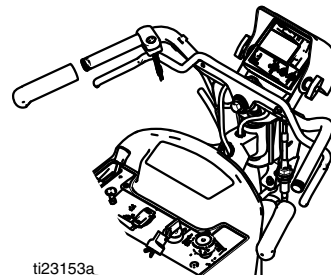

Gun Positions Chart

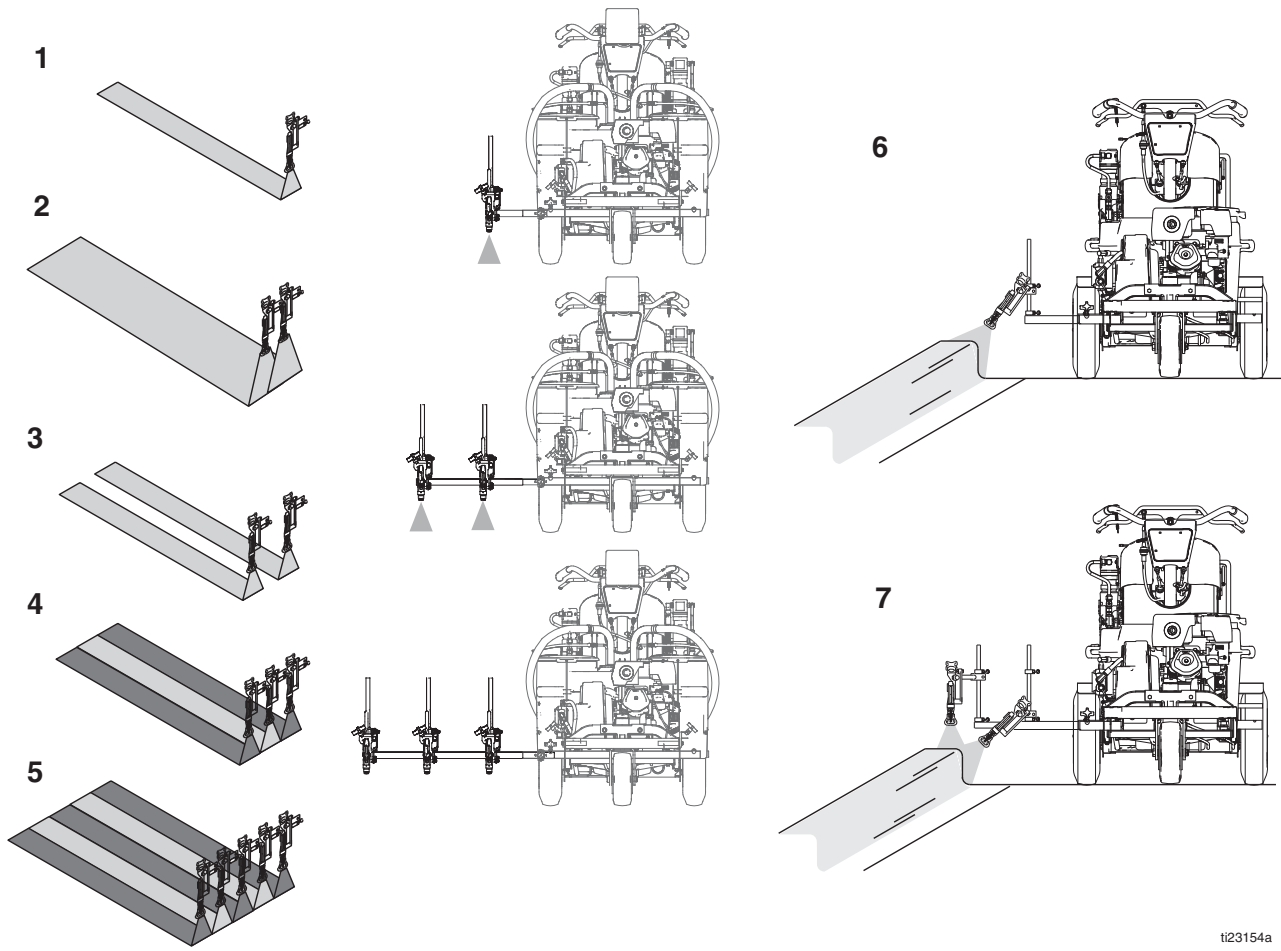

ti23154a

1	One line
2	One line up to 24 in. (61 cm) wide
3	Two lines
4	One line with two line highlight
5	Two lines with three line highlight
6	One gun curb
7	Two gun curb

Driving Instructions




Perform startup see, **Setup/Startup**, page 9.


Use the handle bars of the LineStriper to control all motion during operation. In addition to steering the LineStriper, the handle bars also control forward and reverse movement by pulling the forward/reverse control lever.

NOTE: Make sure wheel motor bypass valve is engaged (see page 19).


To move forward: Disengage brake and slowly pull control lever on right side of handlebar.

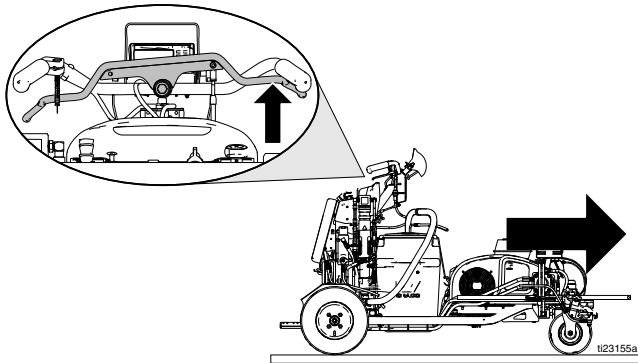



To move in reverse: Slowly pull control lever on left side of handlebar.

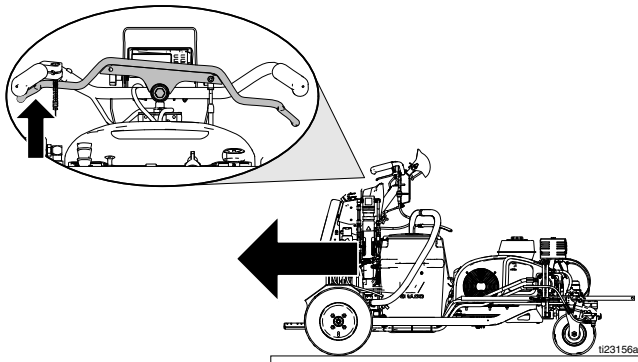

To stop: Release control lever and allow it to return to center.

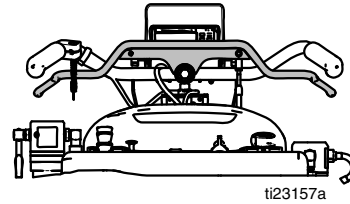


To turn right and left: Turn the handle bar right or left to steer the LineStriper.

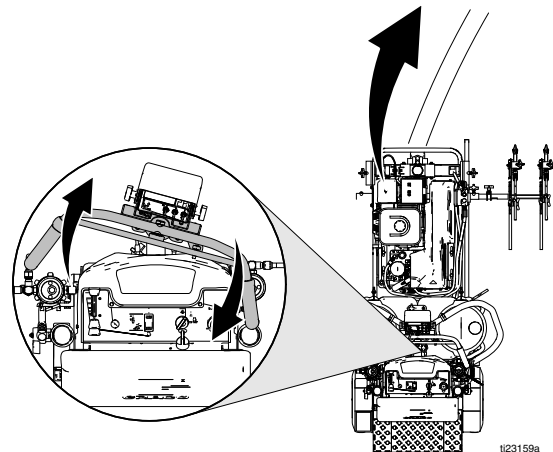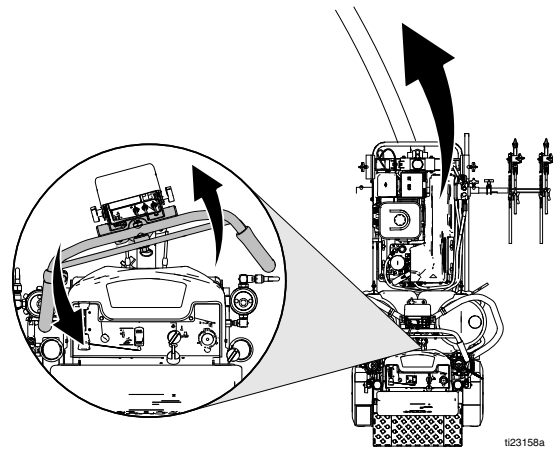


Parking/Emergency Brake

This unit is equipped with a parking brake. Always engage parking brake when not in operation. Brake may also be used to slow machine in an emergency situation.

1. Step down on the brake lever to engage parking brake.

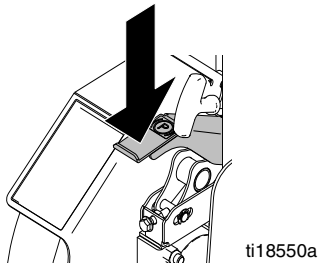



2. Lift brake lever up with foot to disengage parking brake.

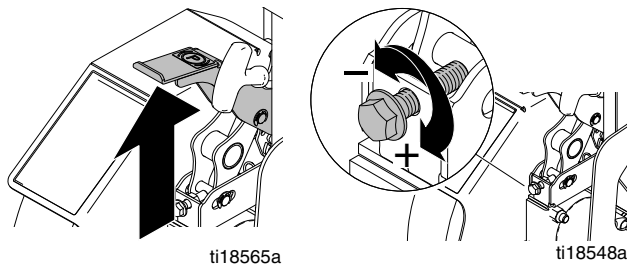

NOTE: Adjust screw for more or less braking force.

Drive Engagement


The wheel motor bypass valve allows the operator to disengage the wheel tension and push the unit around. Rotate one complete turn counter-clockwise to disengage.

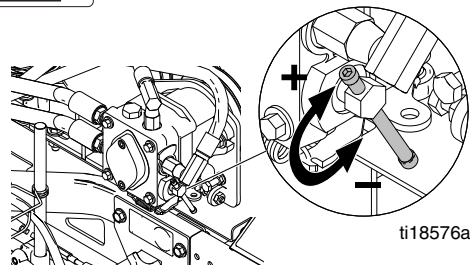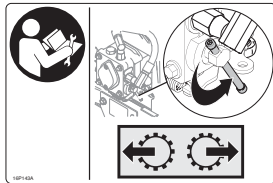


Straight Line Adjustment

The front wheel is set to center the unit and allow the operator to form straight lines. Over time, the wheel may become misaligned and will need to be readjusted. To re-center the front wheel, perform the following steps:


1. Loosen two bolts on the wheel alignment plate.

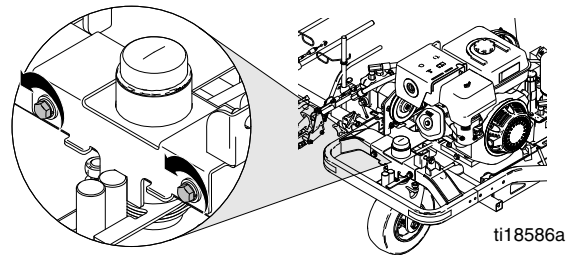


2. If striper arcs to the right, turn adjuster screw clockwise.

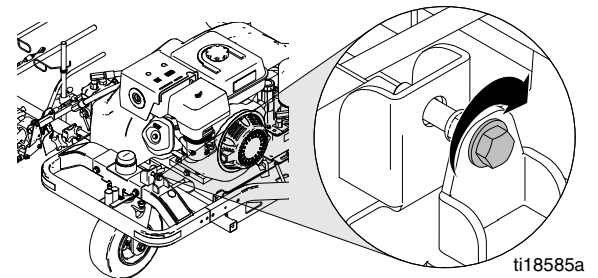

3. If striper arcs to the left, turn adjuster screw counter-clockwise.

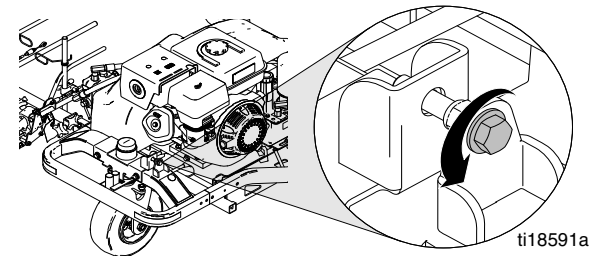


4. Test-drive the striper. Repeat steps 2 and 3 until striper drives straight. Tighten two bolts on wheel alignment plate to lock the new wheel setting.

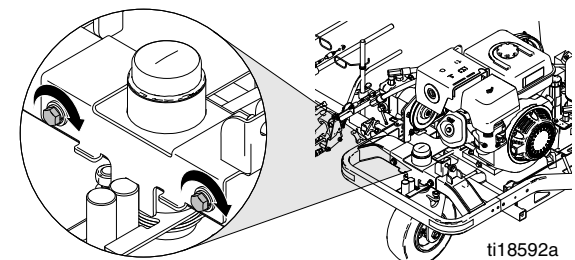


Handle Bar Height Adjustment


1. Loosen handlebar height adjuster lock.

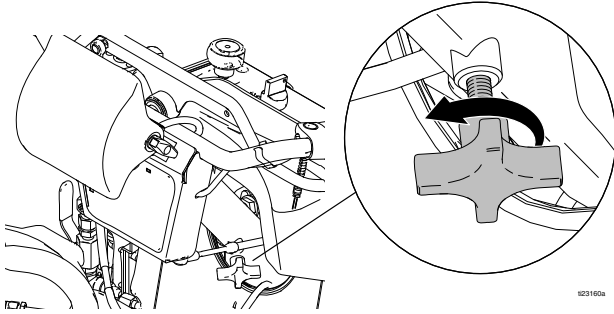

2. Raise or lower handlebars to desired height.

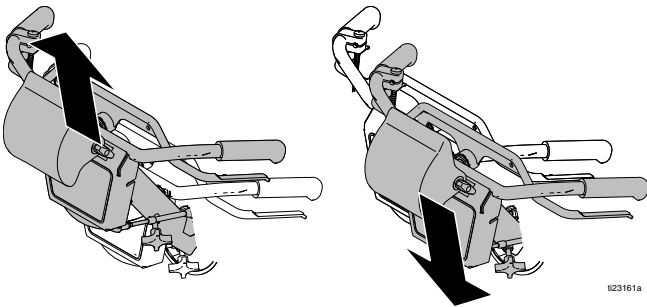


3. Tighten handlebar height adjuster lock.

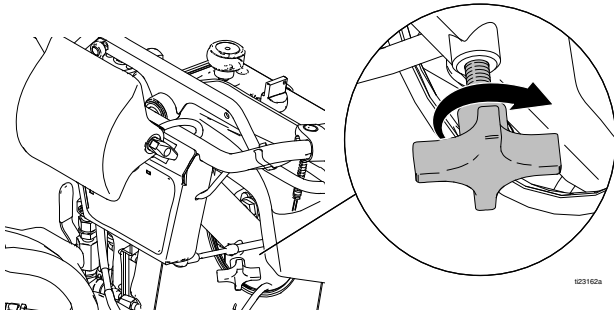


Platform Storage Position

1. Raise stand and pin self-locks.

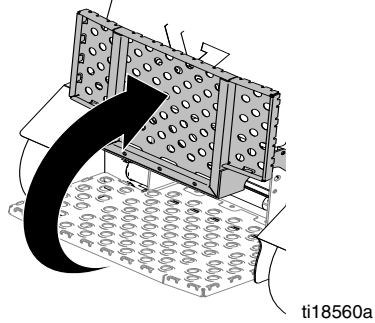


2. To lower stand, pull pin and lower stand.

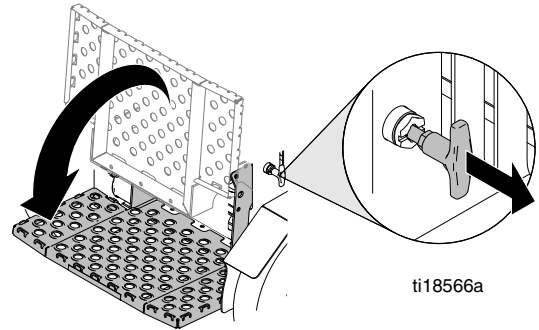

Front Pad Adjustment


1. Loosen four bolts.
2. Slide pad up or down to desired position.

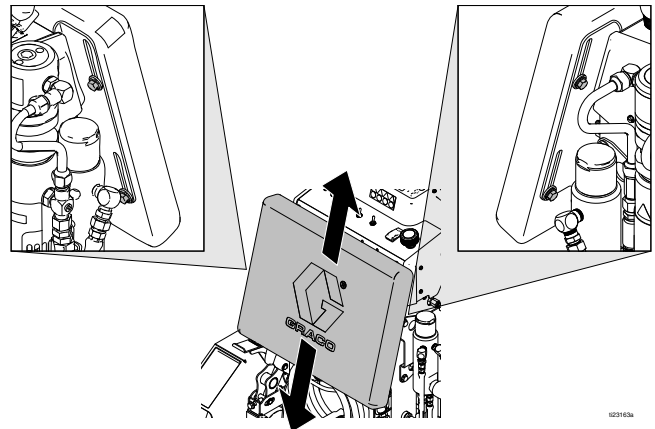

3. Tighten four bolts.


Smart Control Operation

Menu Tree

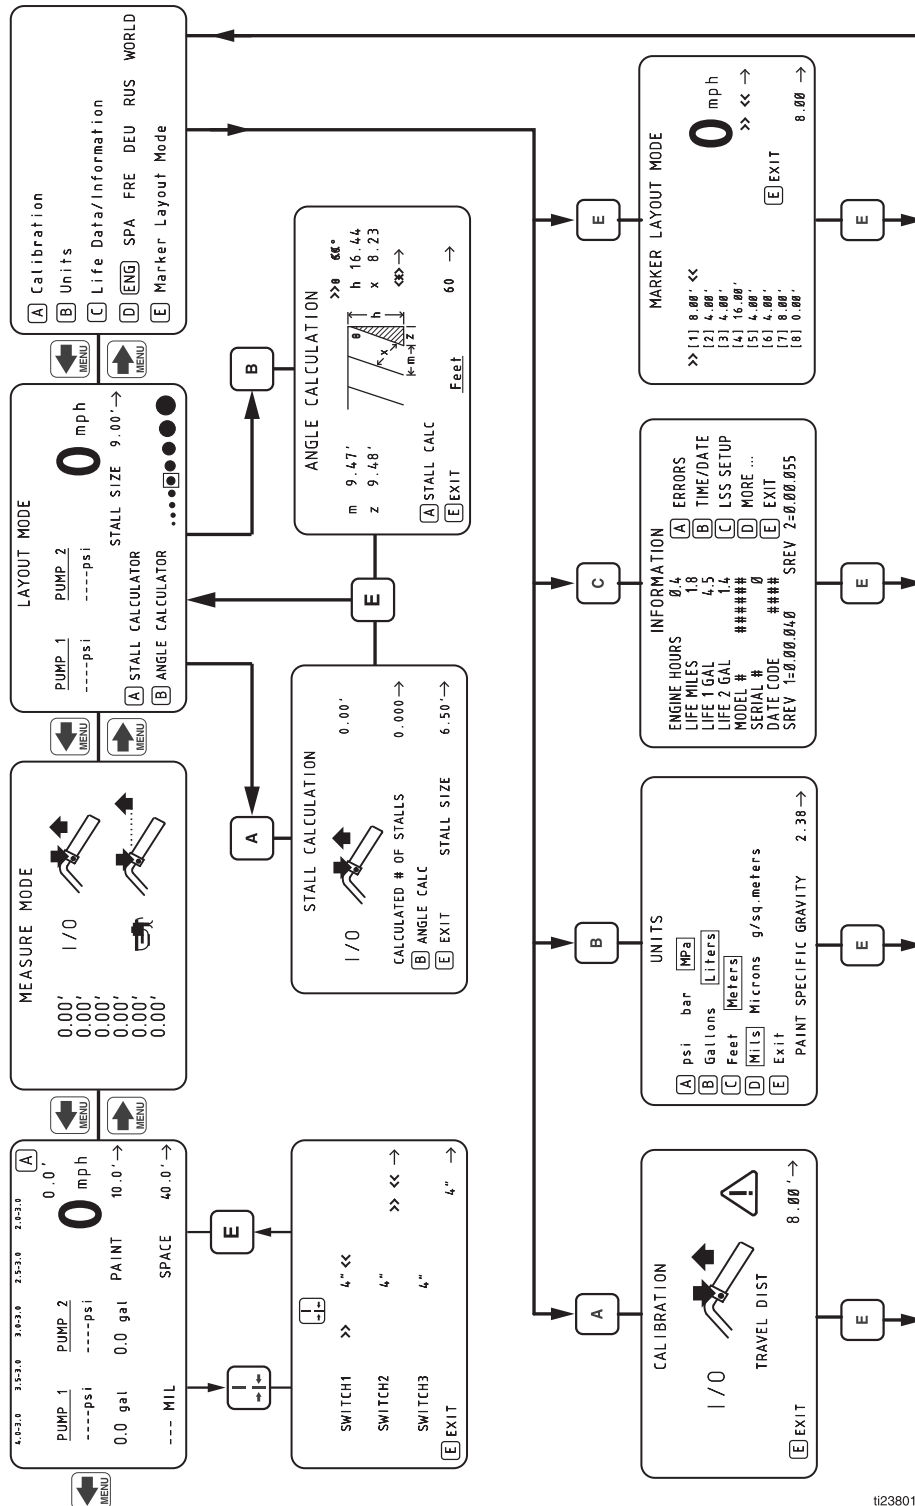

ti23801b

Control Features

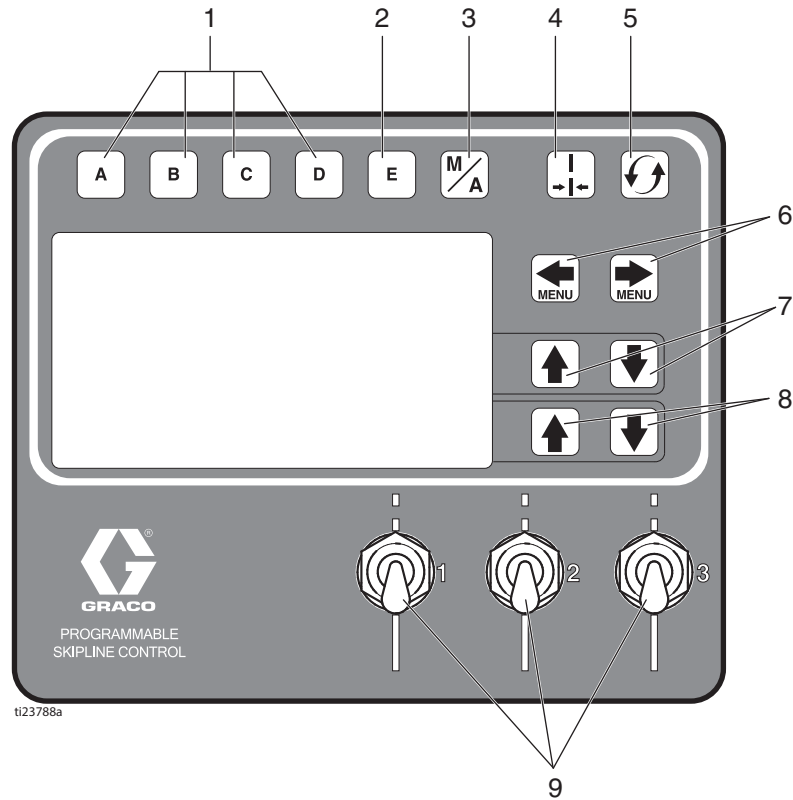


Ref.	Switch / Indicator	Explanation
1	Menu Controls	Provides menu specific commands as displayed on LCD screen. Provides skipline paint and space distance storage for instant change. Press and hold button to store pattern. Selects preset values "Favorite" or sub-menus.
2	Menu Control	Selects preset values or exits and returns to previous menu.
3	M/A button	Selects MANUAL or AUTOMATIC mode.
4	Line Width button	Input line width for MIL (thickness) calculation.
5	Reset button	Resets values to zero.
6	MENU arrow buttons	Used to switch between menus, adjusting values and resetting values. Scrolls through Striping Mode, Measure Mode, Layout Mode, and Setup/Information Menus.
7	Arrow buttons	Used in conjunction with the menus to adjust on-screen values. Adjusts adjacent values displayed.
8	Arrow buttons	Used in conjunction with the menus to adjust on-screen values. Adjusts adjacent values displayed.
9	Paint gun switches 1, 2 and 3	Enables/disables paint guns 1, 2 and 3. Up – skip line. Center – off. Down – continuous line.

Main Menu


Use MENU buttons   to scroll through the four main menus.

Striping Mode

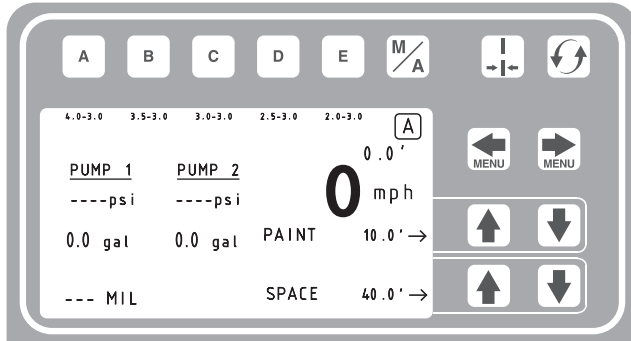


See **Striping Mode**, page 26 for features.

Measure Mode

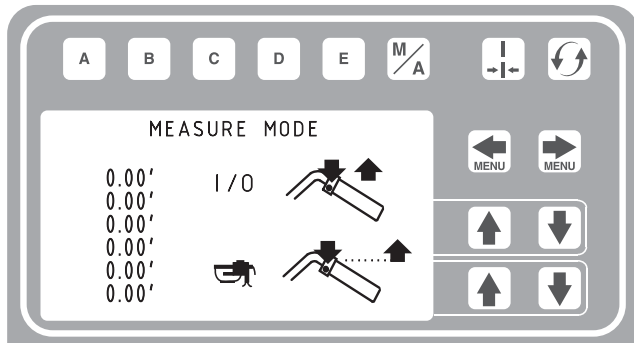


See **Measure Mode**, page 27 for features.

Layout Mode

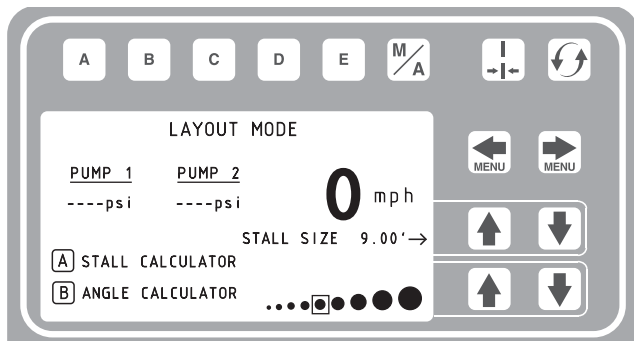

See **Layout Mode**, page 28 for features.

Setup/Information

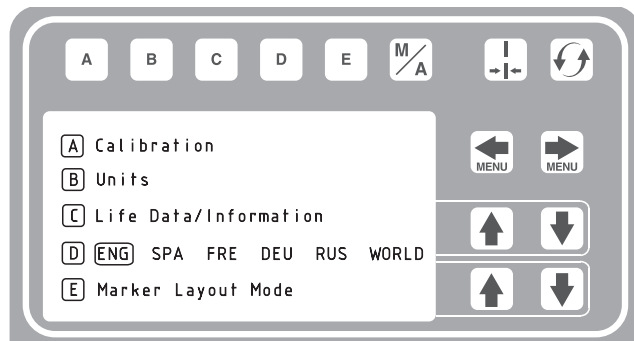


See **Setup/Information**, page 31 for features.

Initial Setup

The initial setup prepares the striper for operation based on a number of user entered parameters. Language selections and the units of measure selections can be set before you start or changed later.

Language

From Setup/Information select appropriate language by pressing **D** until the language is outlined.

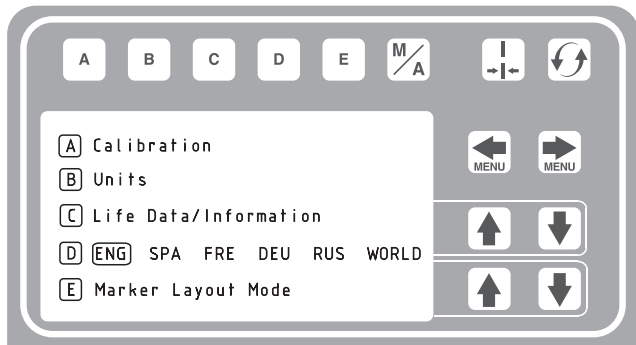


ENG = English
 SPA = Spanish
 FRE = French
 DEU = German
 RUS = Russian
 WORLD = Symbols see **World Symbol Key**, page 35.

NOTE: Languages can also be changed later.

Units

Select appropriate units of measure.

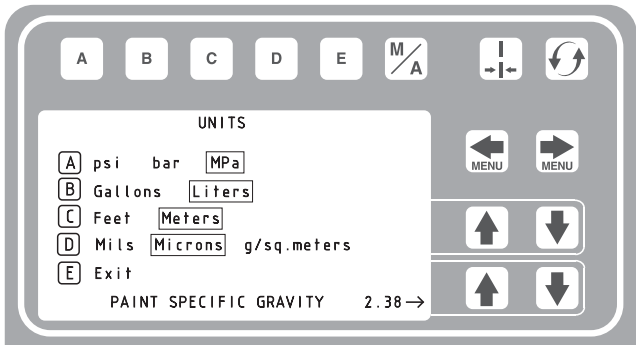

US Units

Pressure = psi
 Volume = gallons
 Distance = feet
 Line Thickness = mil

SI Units

Pressure = bar (MPa available)
 Volume = liters
 Distance = meters
 Line thickness = micron (g/m² available)


Paint Specific Gravity = Use UP and DOWN arrows to set specific gravity. Required to determine paint thickness.

NOTE: All units can be changed individually at any time.


Calibration

1. Check rear tire pressure 55 ± 5 psi (379 ± 34 kpa) and fill if necessary.


2. Remove and rotate calibration bar.

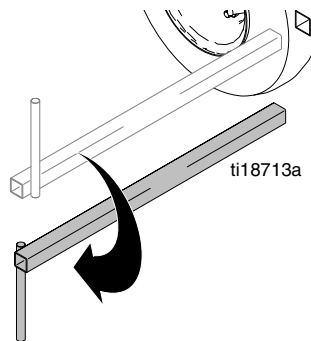


3. Insert calibration bar face down.

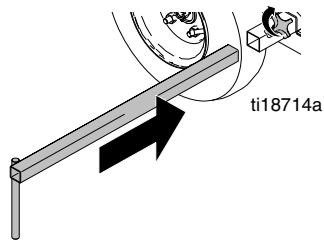


4. Tighten knob.

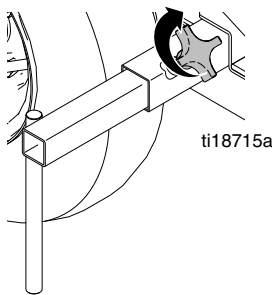


- Extend steel tape to distance greater than 26 ft. (8m).

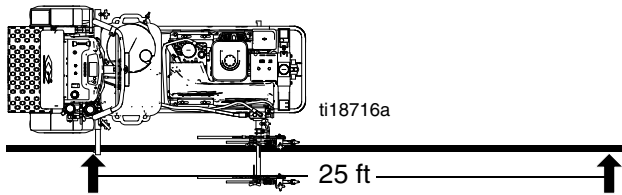


- Press to select Setup/Information.

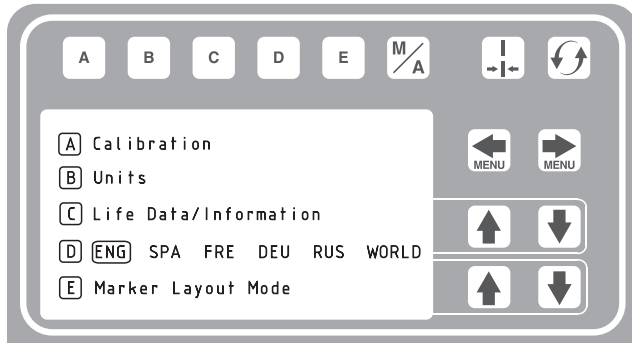


- Press for Calibration. Set TRAVEL DIST to 25 ft (7.6m) or longer. Longer distances ensure better accuracy, depending on conditions.

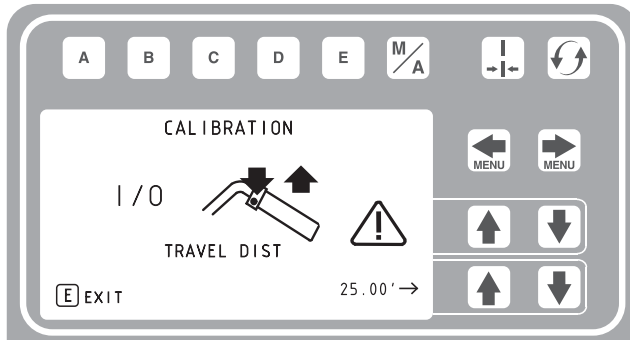


- Align calibration bar rear edge with 1 foot (30.5cm) on steel tape.

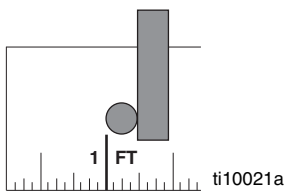


- Push gun trigger control to start calibration.

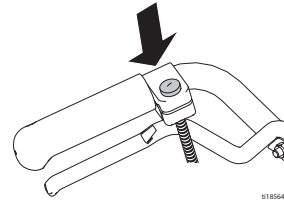


- Move striper forward. Keep calibration bar over steel tape.

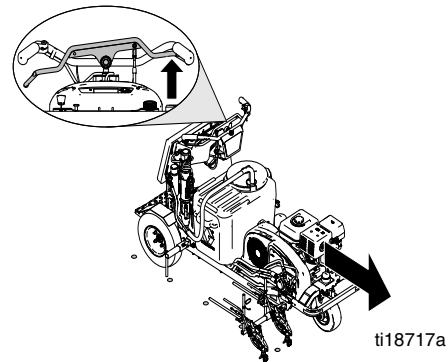

- Stop when calibration bar rear edge aligns with 26-ft. (8m) on steel tape (25-ft./ 7.6m distance).

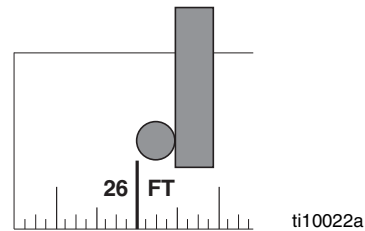

- Push gun trigger control to complete calibration.

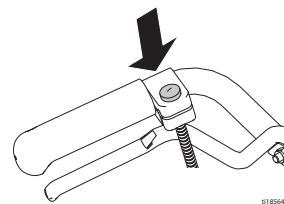


- Calibration is not complete when the exclamation symbol is displayed.
- Calibration is finished when the check mark symbol is displayed.

- Calibration is now complete.

Go to Measure Mode and verify accuracy by measuring the tape (see **Measure Mode**, page 27).

Striping Mode

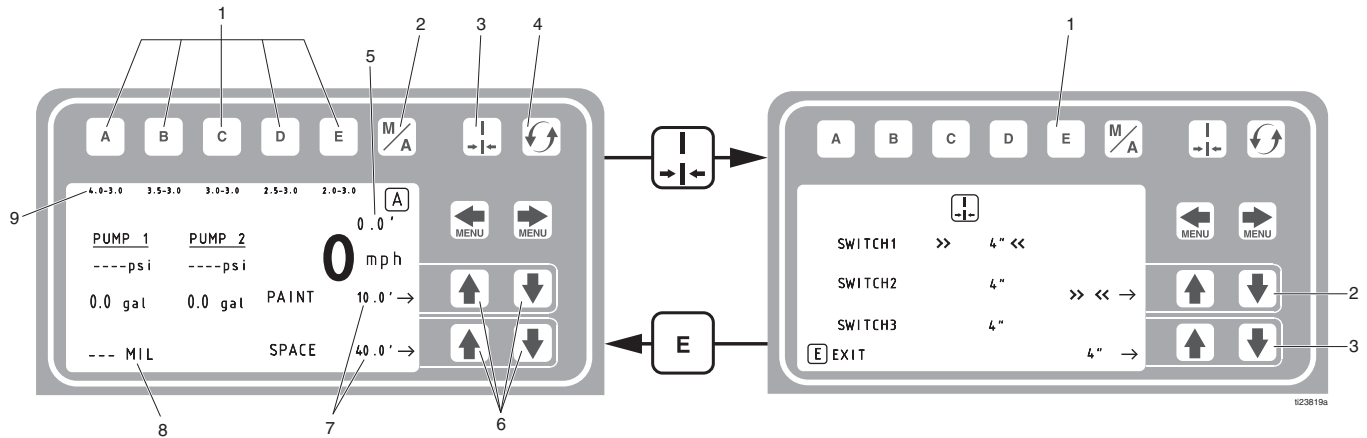

Ref.	Description
1	Select a "Favorite", press for less than one second.
	Save a "Favorite", press and hold for more than three seconds.
2	Cycles between Manual or Automatic Mode.
	Manual Mode: Press and hold gun trigger control to stripe. Automatic Mode: Press and release gun trigger control to start striping. Press and release button again to stop.
3	Line width button for MIL (thickness) calculation.
4	Resets "Job" values to zero.
5	Total line length sprayed.
6	Paint and Space length adjustment buttons.
7	Paint and Space distance that is sprayed if a switch is set to skip line.
8	MIL thickness. While spraying "Instant MIL avg" is displayed. When stopped total "Job MIL avg" is displayed.
9	Five skip line favorites

Ref.	Description
1	Exits and returns to the Striping Mode Menu.
2	Select switch 1, 2, or 3.
3	Line Width Adjustment, if switch is operating more than one gun add the line widths together.

Operating in Striping Mode

Striper must be running and clutch engaged before activating gun trigger control.



1. Make sure engine is running and clutch switch is engaged.
2. Use gun selector switches to select guns and line type.
3. Activate gun trigger control to began spraying.


NOTE: In Automatic Mode the striper has a low speed shutoff value of 0.6 MPH (1.0 kilometer/hour). The low speed shutoff value can be adjusted or disabled. See **Data/Information**, page 32.

NOTE: In Automatic Mode the **A** will flash when gun trigger control is pressed to signal mode is active.


Measure Mode

Measure Mode replaces a tape measure to measure distances when laying out an area to be striped.

1. Use   to select Measure Mode.

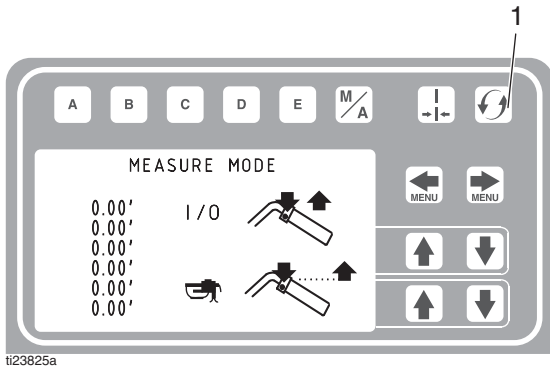

2. Press and release gun trigger control. Move striper forwards or backwards. (Moving backwards is a negative distance.)

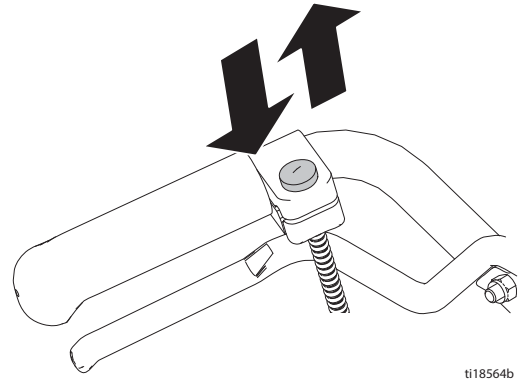

3. Press and release gun trigger control to end measured length. Up to six lengths are viewable.



NOTE: The most recent measured length is also saved as the measured distance in the Stall Calculator display. See **Stall Calculator**, page 29.


NOTE: Press and hold gun trigger control at any time to apply a dot. If trigger is held while striper is moving, a dot is marked every 12-inches (30.5cm).

Ref.	Description
1	Hold to reset values to zero.

Layout Mode

Layout Mode is used to calculate and mark parking lot stalls.


1. Use   to select Layout Mode.

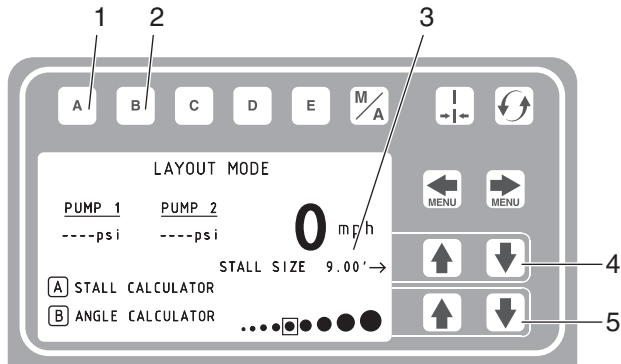

ti23820a


Ref.	Description
1	Opens Stall Calculator Menu. See Stall Calculator , page 29.
2	Opens Angle Calculator Menu. See Angle Calculator , page 30.
3	Distance between dots laid by striper
4	Adjust stall size/dot spacing width.
5	Adjust dot size.

2. Press and release gun trigger control and move striper forward.

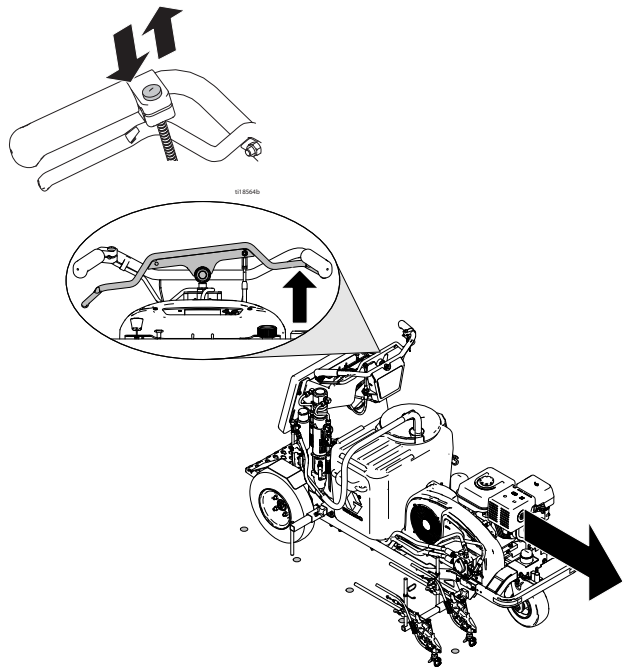




3. Striper default is to place a dot every 9.0 ft (2.7m) to mark the stall size. Stall size is adjustable.
4. Dots are laid down until gun trigger control is pressed and released again.

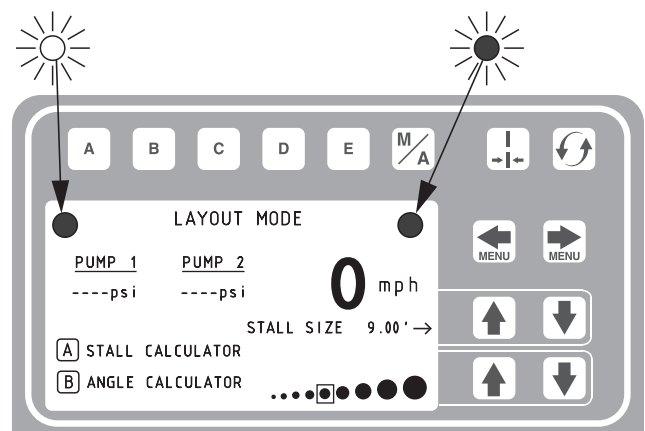
NOTE: An indicator before and after Layout Mode on the screen alternately flash when gun trigger control is pressed to signal mode is active.



Stall Calculator


Stall Calculator is used to set the stall size. The striper divides the measured length by the stall size to determine the number of stalls that will fit in the length measured.

1. Use   to select Layout Mode. Press  to open Stall Calculator Menu.

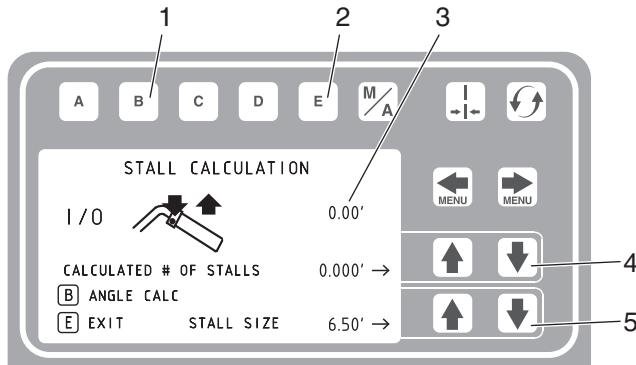

ti23821a


Ref.	Description
1	Opens Angle Calculator Menu. See Angle Calculator , page 30.
2	Exits and returns stall size to Layout Mode.
3	Measured distance.
4	Calculated # of stalls. Changing the number of stalls will change the stall size.
5	Stall size. Changing stall size changes the calculated # of stalls.

2. The most recent length measured in Measure Mode is displayed or press gun trigger control to start a new measurement. Press again to stop measuring.
Stall size and calculated number of stalls are both adjustable.
3. Press  to return to Layout Mode. The Stall size is saved and displayed on the Layout Mode screen.
4. Press and release gun trigger control to start marking dots. Press and release gun trigger control again to stop.

Angle Calculator

Angle Calculator is used to determine the offset value and dot spacing value for a layout.

1. Use to select Layout Mode. Press to open Angle Calculator Menu.

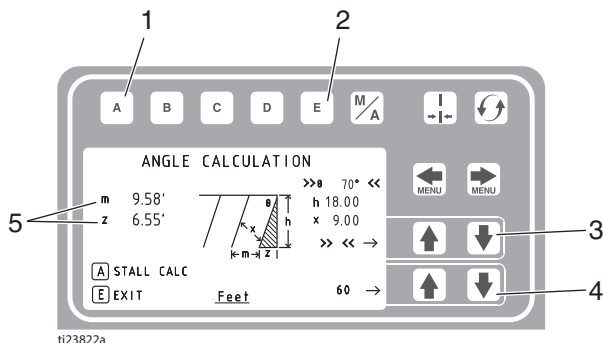


Ref.	Description
1	Opens Stall Calculator.
2	Exits and returns to Layout Mode.
3	Select θ , h, or x.
4	Adjust the parameter selected.
5	Calculated offset and dot spacing.



2. Dot spacing (m) and offset (z) are calculated based on the parameters entered:

- θ - Stall angle
- h - Depth of stall
- x - Stall size (width)

3. Measure and mark the offset distance (z) calculated for the first stall.

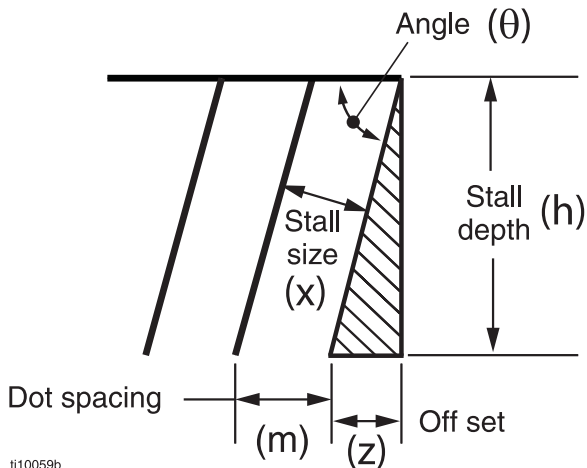


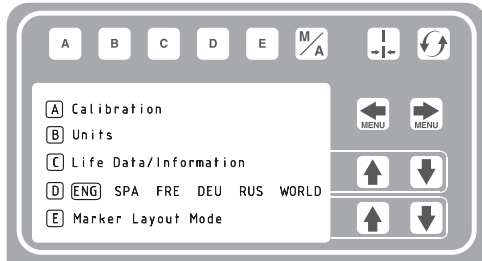
4. Press to return to Layout Mode. The dot spacing value (m) is saved and displayed as stall size on the Layout Mode screen.

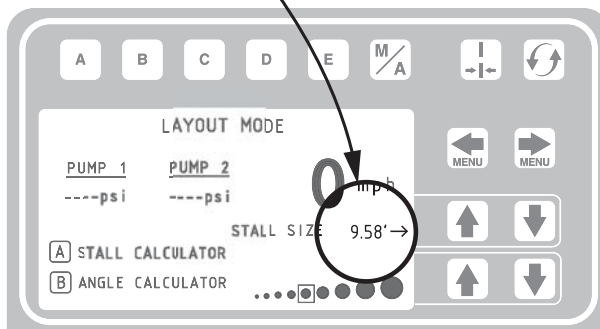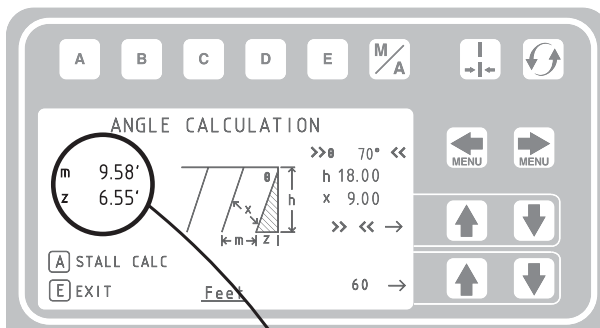


5. Press and release gun trigger control to start marking stall size dots. Press and release gun trigger control to stop marking.

Setup/Information


Use   to select Setup/Information.




Press **D** to select Language.
See **Language**, page 24.

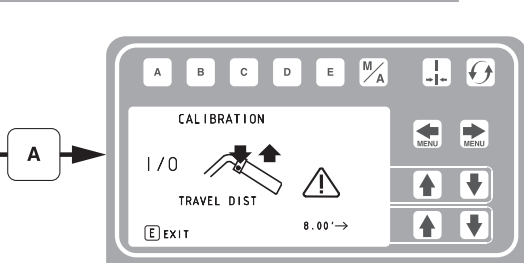


See **Calibration**, page 24.

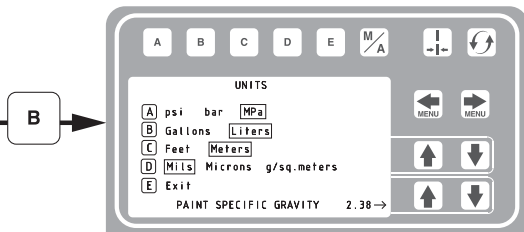

See **Units**, page 24.

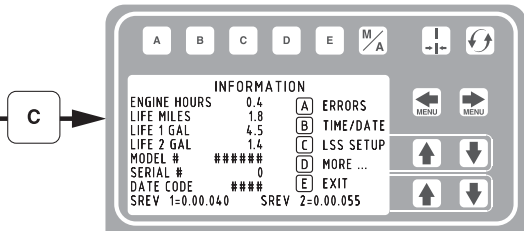

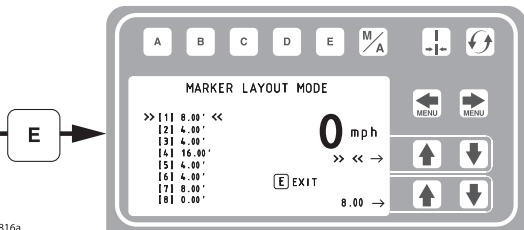


See **Data/Information**, page 32.




See **Marker Layout Mode**, page 34.

ti23816a

Data/Information

Use   to select Setup/Information. Press  to open Data/Information Menu.

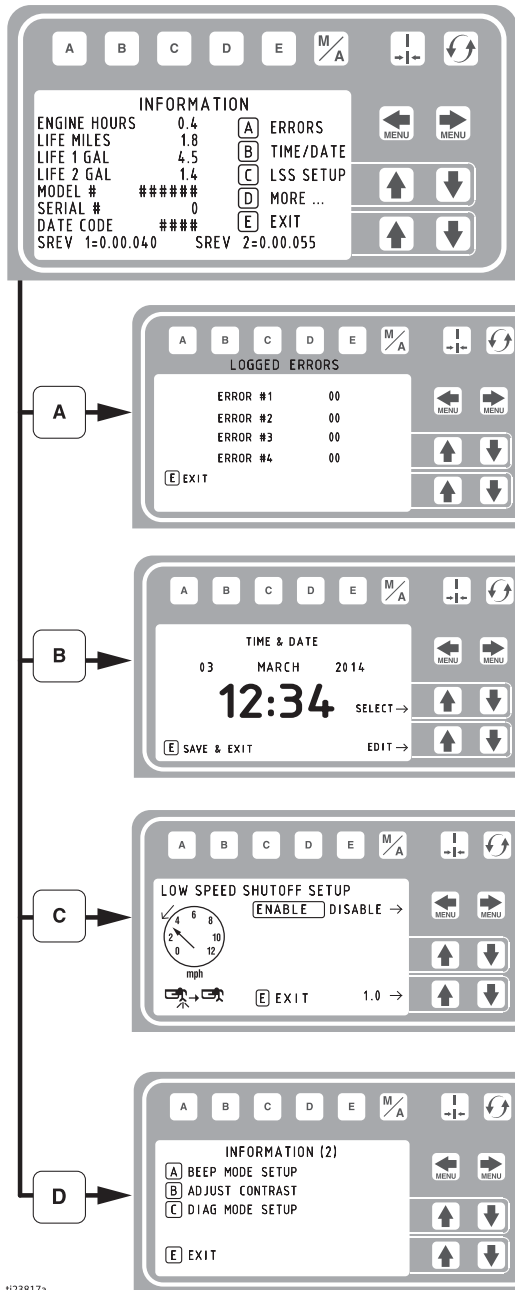



t123817a

Displays and logs life data and striper information.

Logs last four error codes that occurred.

Code	Description
02	Over pressure on sensor #1
03	No transducer #1 detected
22	Over pressure on sensor #2
23	No transducer #2 detected





Set time and date using arrow keys.


Use   to enable or disable low speed shutoff when in Automatic Mode.

Use up and down arrows to adjust low speed shutoff value.

See **Information (2)**, page 33.

Information (2)

Use   to select Setup/Information. Press  to open Data/Information Menu. Press  to open Information (2) Menu.

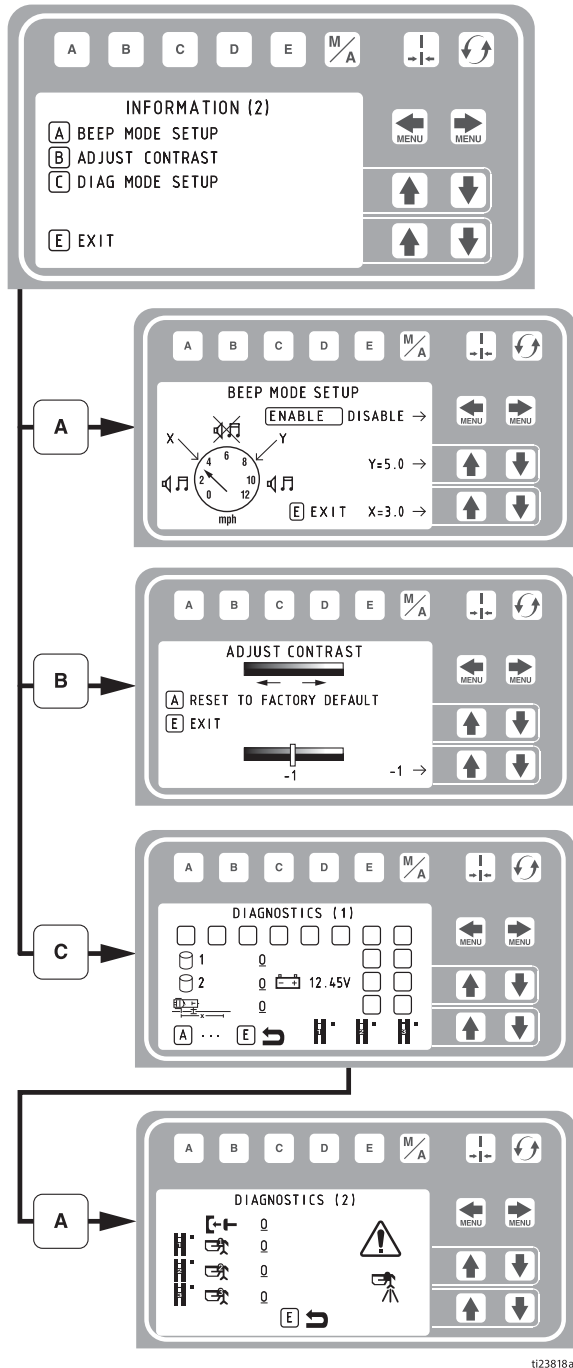




Set low speed limit (X) and high speed limit (Y). If you travel outside of these speeds while stripping the striper will beep. Fast beep if traveling above the limit and a slow beep if traveling below the limit.

Adjust screen contrast to the desired value.

Used for Troubleshooting.

-  Membrane Switch
-  Wheel Sensor
-  Gallon Counter
-  Gun Switches

Used for Troubleshooting.


-  Clutch
-  Solenoids
-  Caution Guns will Spray

ti23818a

Marker Layout Mode

The Measure Mode feature sprays a dot or a series of dots to mark an area.

- Use to select Setup/Information. Press to open Marker Layout Mode.

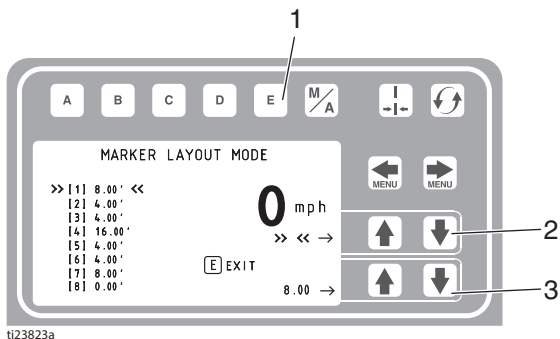


ti23823a

Ref.	Description
1	Exits and returns to Information Menu.
2	Select value to change.
3	Adjust spacing value.

- Use arrow keys to set up a marker pattern.
- Marker layout example shows a typical lane layout for reflective markers. Set space sizes up to eight consecutive measurements. By leaving zeros in any space, Marker Layout Mode will skip to the next measurement in a continuous loop.

Some other uses of Marker Layout Mode are:

- Multiple spaced handicap stall layout
- Double line stalls

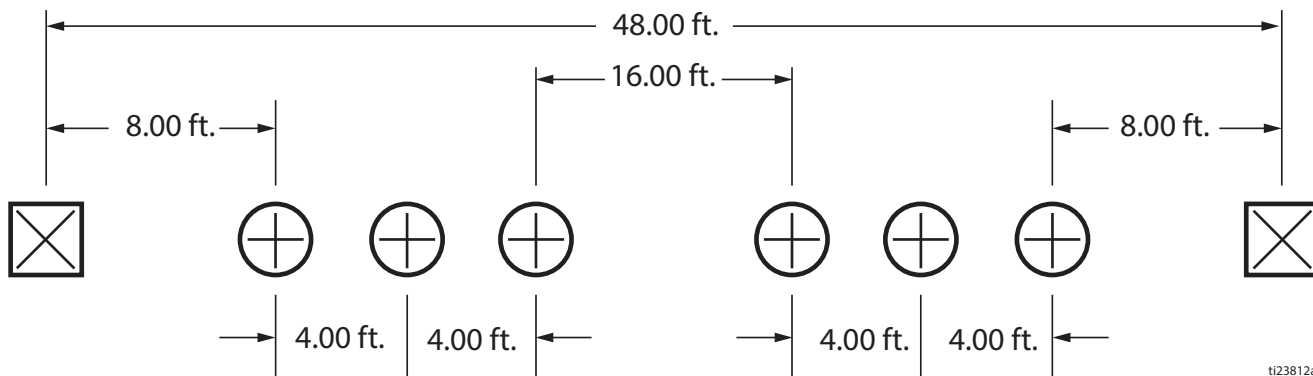


ti23812a


- Set gun switch to skip line.



- Press gun trigger control to start marking dots. Press gun trigger control again to stop.

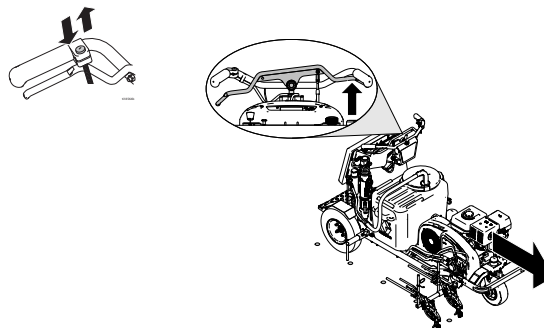

NOTE: An indicator before and after Marker Mode on the screen alternately flash when gun trigger control is pressed to signal mode is active.

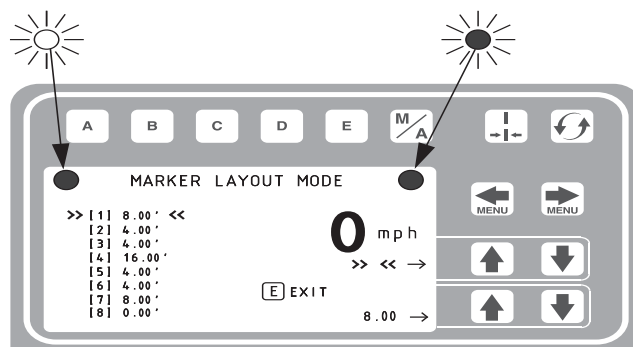







World Symbol Key

LL250 GLOBAL SYMBOL KEY MENU SCREENS


STRIPING MODE	MEASURE MODE	LAYOUT MODE	SETTINGS/DATA
<p>MANUAL OR AUTOMATIC MODE</p> <p>PRESSURE</p> <p>GALLONS/LITERS</p> <p>LINE THICKNESS</p> <p>PAINT LENGTH</p> <p>SPACE LENGTH</p> <p>LINE WIDTH</p> <p>SWITCH 1</p> <p>SWITCH 2</p> <p>SWITCH 3</p> <p>EXIT</p>	<p>1 2 3 4 5 6 7 8 9 10</p> <p>PRESS TO START/STOP</p> <p>HOLD TO SPRAY A DOT</p>	<p>STALL CALCULATOR</p> <p>ANGLE CALCULATOR</p> <p>STALL WIDTH</p> <p>DOT SIZE SELECTOR</p>	<p>CALIBRATE</p> <p>UNITS</p> <p>INFORMATION & LIFE DATA</p> <p>LANGUAGE SELECTION</p> <p>MARKER LAYOUT MODE</p> <p>SPECIFIC GRAVITY</p> <p>ENGINE HOURS</p> <p>TOTAL DISTANCE</p> <p>TOTAL GALLONS</p> <p>SOFTWARE REV</p> <p>ERROR CODES</p> <p>BEEP MODE</p> <p>CONTRAST</p> <p>DIAGNOSTICS</p> <p>TIME AND DATE</p> <p>LOW SPEED SHUTOFF</p>

1023824a


Cleanup

					
<p>This equipment stays pressurized until pressure is manually relieved. To help prevent serious injury from pressurized fluid, such as skin injection, splashing fluid and moving parts, follow the Pressure Relief Procedure when you stop spraying and before cleaning, checking, or servicing the equipment.</p>					

1. Perform **Pressure Relief Procedure**, page 8.
2. Remove guard and SwitchTip from all guns.

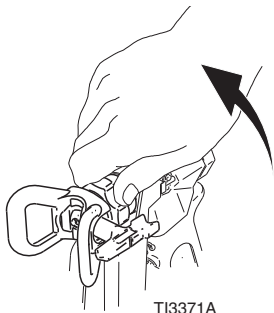

3. Unscrew both (2) caps, remove filters. Assemble without filter.

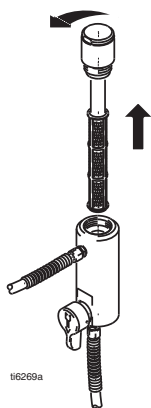


4. Clean filter, guard and SwitchTip in flushing fluid.



FLUSH

5. Place siphon tube set in grounded metal pail partially filled with flushing fluid. Attach ground wire to true earth ground. Perform Startup steps 10 - 16 (see page 10) to flush out paint in sprayer. Use water to flush water-base paint and mineral spirits solvent (also called white spirit) to flush oil-base paint.
6. Hold gun against paint bucket and pull trigger until water or solvent appears.

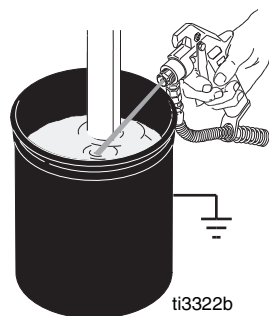

7. Move gun to solvent or water bucket. Hold gun against bucket and pull trigger until the system is thoroughly flushed.
8. Fill pump with Pump Armor and reassemble filter, guard and SwitchTip.
9. Each time you spray and store, fill throat packing nut with TSL to decrease packing wear.

Hydraulic Oil/Filter Change

Removal




This equipment stays pressurized until pressure is manually relieved. To help prevent serious injury from pressurized fluid, such as skin injection, splashing fluid and moving parts, follow the Pressure Relief Procedure when you stop spraying and before cleaning, checking, or servicing the equipment.

1. Perform **Pressure Relief Procedure**, page 8.
2. Place drip pan or rags under sprayer to catch hydraulic oil that drains out.
3. Remove drain plug. Allow hydraulic oil to drain.
4. Unscrew filter (227) slowly - oil runs into groove and drains out rear.

Installation

1. Apply a light film of oil on filter gasket. Install drain plug and oil filter (227). Tighten oil filter 3/4 turn after gasket contacts base.
2. Fill with five quarts of Graco hydraulic oil 169236 (5 gallon/20 liter) or 207428 (1 gallon/3.8 liter).
3. Check oil level.

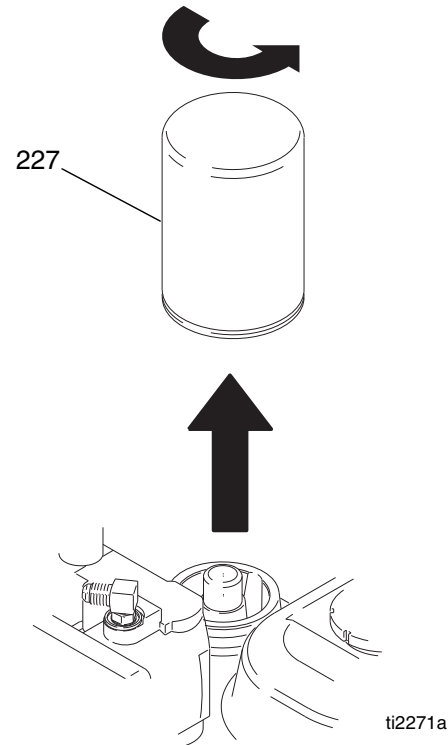

ti2271a

Technical Specifications

LineLazer IV 250DC (Models 24U242 - 2-gun, 24U810 - 3-gun)		
	U.S.	Metric
Dimensions		
Height (with handle bar down)	Unpackaged - 50.5 in. Packaged - 63.5 in.	Unpackaged - 128.3 cm Packaged - 161.3 cm
Width	Unpackaged - 33.0 in. Packaged - 45.0 in.	Unpackaged - 83.8 cm Packaged - 114.3 cm
Length (with platform down)	Unpackaged - 73.5 in. Packaged - 78.0 in.	Unpackaged - 186.7 cm Packaged - 198.1 cm
Weight (dry - no paint)	Unpackaged - 752 lbs Packaged - 890 lbs	Unpackaged - 341 kg Packaged - 404 kg
Noise (dBa)		
Sound Power per ISO 3744:	103.1	
Sound Pressure measured at 3.3 feet (1m):	86.5	
Vibration (m/s²) (8 hours daily exposure)		
Hand Arm (per ISO 5349)	1.6	
Whole Body (per ISO 2631)	0.4	
Power Rating (Horse Power)		
Power Rating (Horse Power) per SAE J1349	11.9 HP @ 3600 rpm	8.8 kW @ 3600 rpm
Maximum Delivery	2.5 gpm	9.5 lpm
Maximum Tip Size 1 gun 2 gun 3 gun	.055 .039 .033	
Inlet paint strainer	16 mesh	1190 micron
Outlet paint strainer	50 mesh	297 micron
Pump inlet size	1 in. NSPM (m)	
Pump outlet size	3/8 NPT (f)	
Hydraulic reservoir capacity	1.25 gallons	4.73 liters
Maximum hydraulic pressure	1825 psi	124 bar
Maximum working pressure	3300 psi	228 bar, 22.8 MPa
Maximum forward speed	10 mph	16 kph
Maximum reverse speed	6 mph	9.7 kph
Electrical Capacity	14 A @ 3600 rpm	
Starting Battery	12V, 33Ah, Sealed lead acid	

Wetted Parts: PTFE, Nylon, polyurethane, V-Max, UHMWPE, fluoroelastomer, acetal, leather, tungsten carbide, stainless steel, chrome plating, nickel-plated carbon steel, ceramic

LineLazer IV 250DC with Pressurized Bead System (Models 24U243 - 2-gun, 24U820 - 3-gun)		
	U.S.	Metric
Dimensions		
Height (with handle bar down)	Unpackaged - 55.7 in. Packaged - 63.5 in.	Unpackaged - 141.5 cm Packaged - 161.3 cm
Width	Unpackaged - 33.0 in. Packaged - 45 in.	Unpackaged - 83.8 cm Packaged - 114.3 cm
Length (with platform down)	Unpackaged - 73.5 in. Packaged - 78.0 in.	Unpackaged - 186.7 cm Packaged - 198.1 cm
Weight (dry - no paint or beads)	Unpackaged - 864 lbs Packaged - 1002 lbs	Unpackaged - 392 kg Packaged - 455kg
Noise (dBa)		
Sound Power per ISO 3744:	105.9	
Sound Pressure measured at 3.3 feet (1m):	89.1	
Vibration (m/s²) (8 hours daily exposure)		
Hand Arm (per ISO 5349)	2.4	
Whole Body (per ISO 2631)	0.4	
Power Rating (Horse Power)		
Power Rating (Horse Power) per SAE J1349	11.9 HP @ 3600 rpm	8.8 kW @ 3600 rpm
Maximum Delivery	2.5 gpm	9.5 lpm
Maximum Tip Size		
1 gun	.055	
2 gun	.039	
3 gun	.033	
Inlet paint strainer	16 mesh	1190 micron
Outlet paint strainer	50 mesh	297 micron
Pump inlet size	1 in. NSPM (m)	
Pump outlet size	3/8 NPT (f)	
Hydraulic reservoir capacity	1.25 gallons	4.73 liters
Maximum hydraulic pressure	1825 psi	124 bar
Maximum working pressure	3300 psi	228 bar, 22.8 MPa
Maximum forward speed	10 mph	16 kph
Maximum reverse speed	6 mph	9.7 kph
Electrical Capacity	14 A @ 3600 rpm	
Starting Battery	12V, 33Ah, Sealed lead acid	

Wetted Parts: PTFE, Nylon, polyurethane, V-Max, UHMWPE, fluoroelastomer, acetal, leather, tungsten carbide, stainless steel, chrome plating, nickel-plated carbon steel, ceramic

Graco Standard Warranty

Graco warrants all equipment referenced in this document which is manufactured by Graco and bearing its name to be free from defects in material and workmanship on the date of sale to the original purchaser for use. With the exception of any special, extended, or limited warranty published by Graco, Graco will, for a period of twelve months from the date of sale, repair or replace any part of the equipment determined by Graco to be defective. This warranty applies only when the equipment is installed, operated and maintained in accordance with Graco's written recommendations.

This warranty does not cover, and Graco shall not be liable for general wear and tear, or any malfunction, damage or wear caused by faulty installation, misapplication, abrasion, corrosion, inadequate or improper maintenance, negligence, accident, tampering, or substitution of non-Graco component parts. Nor shall Graco be liable for malfunction, damage or wear caused by the incompatibility of Graco equipment with structures, accessories, equipment or materials not supplied by Graco, or the improper design, manufacture, installation, operation or maintenance of structures, accessories, equipment or materials not supplied by Graco.

This warranty is conditioned upon the prepaid return of the equipment claimed to be defective to an authorized Graco distributor for verification of the claimed defect. If the claimed defect is verified, Graco will repair or replace free of charge any defective parts. The equipment will be returned to the original purchaser transportation prepaid. If inspection of the equipment does not disclose any defect in material or workmanship, repairs will be made at a reasonable charge, which charges may include the costs of parts, labor, and transportation.

THIS WARRANTY IS EXCLUSIVE, AND IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.

Graco's sole obligation and buyer's sole remedy for any breach of warranty shall be as set forth above. The buyer agrees that no other remedy (including, but not limited to, incidental or consequential damages for lost profits, lost sales, injury to person or property, or any other incidental or consequential loss) shall be available. Any action for breach of warranty must be brought within two (2) years of the date of sale.

GRACO MAKES NO WARRANTY, AND DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IN CONNECTION WITH ACCESSORIES, EQUIPMENT, MATERIALS OR COMPONENTS SOLD BUT NOT MANUFACTURED BY GRACO. These items sold, but not manufactured by Graco (such as electric motors, switches, hose, etc.), are subject to the warranty, if any, of their manufacturer. Graco will provide purchaser with reasonable assistance in making any claim for breach of these warranties.

In no event will Graco be liable for indirect, incidental, special or consequential damages resulting from Graco supplying equipment hereunder, or the furnishing, performance, or use of any products or other goods sold hereto, whether due to a breach of contract, breach of warranty, the negligence of Graco, or otherwise.

Graco Information

For the latest information about Graco products, visit www.graco.com.

For patent information, see www.graco.com/patents.

TO PLACE AN ORDER, contact your Graco distributor or call 1-800-690-2894 to identify the nearest distributor.

*All written and visual data contained in this document reflects the latest product information available at the time of publication.
Graco reserves the right to make changes at any time without notice.*

Original instructions. This manual contains English. MM 333388

Graco Headquarters: Minneapolis

International Offices: Belgium, China, Japan, Korea

GRACO INC. AND SUBSIDIARIES • P.O. BOX 1441 • MINNEAPOLIS MN 55440-1441 • USA

Copyright 2014, Graco Inc. All Graco manufacturing locations are registered to ISO 9001.

www.graco.com

Revision B - June 2014