

MODEL LSPBR 1000™

STAINLESS STEEL, LOW SHEER, WATERBASE COMPATIBLE

Back Pressure Regulator

308115L

EN

For use with waterbase fluids in circulating air spray systems. Provides regulated back pressure to the spray gun(s) and maintains proper circulating pressure throughout the system.

For use in circulating air spray systems only.


For professional use only.

Part No. 223824, Series B

with 2 inch sanitary clamp

Part No. 224486, Series B

with 1-1/2 inch npt(f) fittings

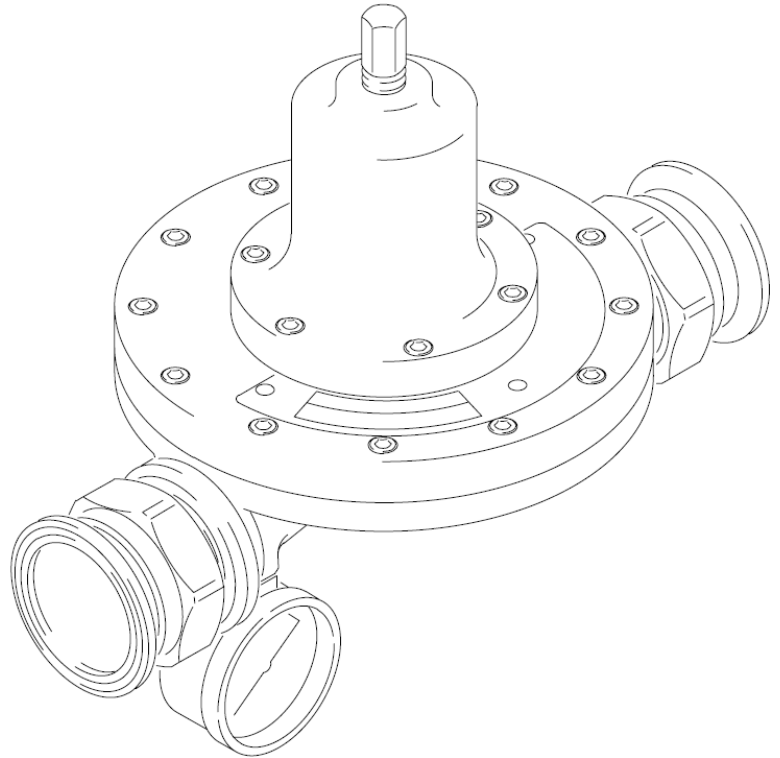

300 psi (2.1 MPa, 21 bar) Maximum Working Pressure

200 psi (1.4 MPa, 14 bar) Maximum Regulated Pressure

20 GPM (75 L/min) Maximum Fluid Flowrate

U.S. and Foreign Patents Pending



Important Safety Instructions

Read all warnings and instructions in this manual. Save these instructions.

Contents

Warnings	3
Installation	4
Operation	5
Service	6
Parts	8
Dimensions	10
Technical Specifications	11
Graco Standard Warranty	12

Symbols

Warning Symbol

This symbol alerts you to the possibility of serious injury or death if you do not follow the instructions.









Caution Symbol

This symbol alerts you to the possibility of damage to or destruction of equipment if you do not follow the corresponding instructions.



Warnings

The following warnings are for the setup, use, grounding, maintenance, and repair of this equipment. The exclamation point symbol alerts you to a general warning and the hazard symbols refer to procedure-specific risks. When these symbols appear in the body of this manual or on warning labels, refer back to these Warnings. Product-specific hazard symbols and warnings not covered in this section may appear throughout the body of this manual where applicable.

 <h2 style="margin: 0;">WARNING</h2>	
 	<p>EQUIPMENT MISUSE HAZARD</p> <p>Equipment misuse can cause the equipment to rupture, malfunction, or start unexpectedly and result in a serious injury.</p> <ul style="list-style-type: none"> • This equipment is for professional use only. • Read all the instruction manuals, tags, and labels before operating the equipment. • Use the equipment only for its intended purpose. If you are uncertain about usage, call your Graco distributor. • Do not alter or modify this equipment. Use only genuine Graco parts and accessories. • Check the equipment daily. Repair or replace worn or damaged parts immediately. • Do not exceed the maximum pressure of the lowest rated system component. This equipment has a 300 psi (2.1 MPa, 21 bar) maximum inlet pressure and a 30 psi (210 kPa, 2.1 bar) maximum static fluid pressure. • Use fluids that are compatible with the equipment wetted parts. See the Technical Data section of all the equipment manuals. Read the fluid manufacturer's warnings. • Route the hoses away from traffic areas, sharp edges, moving parts, and hot surfaces. Do not expose Graco hoses to temperatures above 180°F (82°C) or below -40°F (-40°C). • Comply with all applicable local, state, and national fire, electrical, and other safety regulations.
  	<p>PRESSURIZED EQUIPMENT HAZARD</p> <p>Spray from the gun, hose leaks, or ruptured components can splash fluid in the eyes or on the skin and cause serious injury.</p> <ul style="list-style-type: none"> • Do not stop or deflect fluid leaks with your hand, body, glove, or rag. • Follow the Pressure Relief Procedure in your separate equipment manuals whenever you: are instructed to relieve pressure; stop spraying; clean, check, or service the equipment; and install or clean the spray tip. • Tighten all fluid connections before operating the equipment. • Check the hoses, tubes, and couplings daily. Replace worn, damaged, or loose parts immediately. Permanently coupled hoses cannot be repaired; replace the entire hose.

Installation

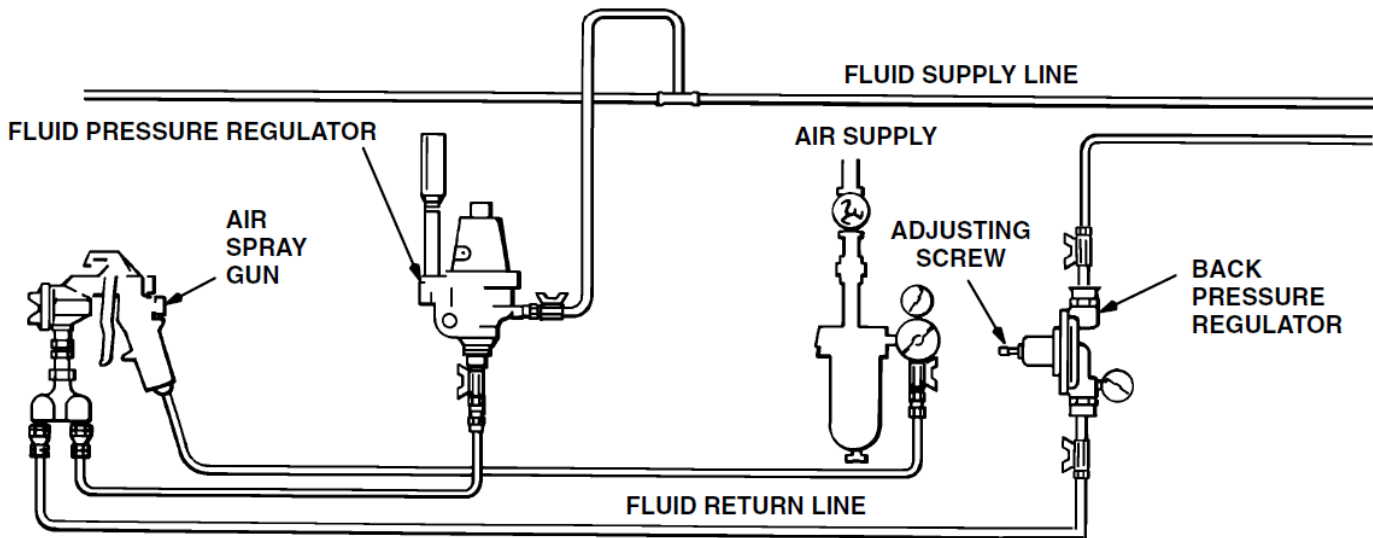


Fig. 1: Installing the Back Pressure Regulator

The regulator is available with either 2 in. sanitary clamps (Model 223824) or with 1-1/2 in. npt(f) fittings (Model 224486). Be sure to order the regulator with the type of end fittings required. The fittings should not need to be removed or replaced during installation.

Install the back pressure regulator in the spray gun return line. See Fig. 1. Connect the fluid line to the inlet and outlet fittings, making sure the flow direction agrees with the IN and OUT markings on the regulator body.

! WARNING

If the end fittings are loosened or removed, be sure to torque them to 100 to 110 ft-lb (135 to 150 N•m) when they are tightened or installed. Failure to do so could cause fluid to discharge and result in serious injury or property damage.

! CAUTION

The fluid flow direction must agree with the IN and OUT markings on the regulator body. Failure to do so will damage the back pressure regulator.

The back pressure regulator is adjustable to control the fluid pressures in a circulating system from 15 to 200 psi (0.1 to 1.4 MPa, 1 to 14 bar).

If more than one spray station is used, install the back pressure regulator in the fluid supply line after the last station. This will help maintain proper circulating pressures in the system.

! CAUTION

To avoid excessive wear on the diaphragm, regulator inlet pressure should not be allowed to pulsate greater than +/- 5% of nominal pressure.

Operation

NOTE: The back pressure regulator controls pressure ahead of its intake.

Turn the adjusting screw clockwise to increase upstream pressure and counterclockwise to decrease pressure.

Adjust the pump pressure and back pressure regulator for the best spraying combination and for proper circulation of fluid. Turn the back pressure regulator's adjusting screw fully clockwise, so fluid flow is minimal and back pressure is at maximum, before beginning adjustment.

Flush the back pressure regulator with a compatible solvent whenever the rest of the system or unit is being flushed. Open the back pressure regulator before flushing by turning the screw counterclockwise.




CAUTION

To avoid damaging the diaphragm

1. Never back flush.
2. If an external pump is used to flush, make sure the inlet pressure to the back pressure regulator does not exceed 30 psi (210 kPa, 2.1 bar).

Service

 WARNING
To reduce the risk of serious injury, including fluid injection, splashing in the eyes or on the skin, or injury from moving parts, always open the back pressure regulator and relieve all air and fluid pressures in the system before removing or servicing the back pressure regulator.

NOTE: Regulator an inspection of the regulator, based upon the degree and kind of service, is essential.

1. Shut off the pump and open the back pressure regulator by turning the adjustment screw (15) counter-clockwise until no spring pressure is felt. Relieve all air and fluid pressures in the system.


NOTE: The back pressure regulator can either be serviced while it remains in the fluid line or it can be removed from the line for servicing.

2. Disassemble the regulator and clean it with a suitable solvent. See the **Parts Drawing** on page 8.
3. Carefully inspect the diaphragm (10) for cracks or other damage. Replace if necessary.
4. Check the parts for chips or dirt before assembling the regulator.


5. Install the diaphragm parts onto the regulator base (9).

Lubricate the parts as indicated in the **Parts Drawing** on page 8.


Tighten the cover screws (2) finger tight, then torque them to 70 to 90 in-lb (8.0 to 10.2 N•m) in a criss-cross pattern. See the *TOP VIEW* in the *Parts Drawing*.

 CAUTION
Do not lubricate the parts with silicone grease. Silicone grease will contaminate the fluid and blemish the finish of the surface being painted.


6. Tighten the regulator cap screws (2) finger tight, then torque them to 70 to 90 in-lb (8.0 to 10.2 N•m) in a criss-cross pattern. See the *TOP VIEW* in the **Parts Drawing**.
7. To remove or install the gauge (8), use the wrench on the square portion of the gauge stud only. Use thread sealer sparingly on the gauge's male threads when install it to avoid plugging the gauge.
8. Install the back pressure regulator back in the fluid line.

 WARNING
If the end fittings (16) are loosened or removed, be sure to torque them to 100 to 110 ft-lb (135 to 150 N•m) when they are tightened or installed. Failure to do so could cause fluid to discharge and result in serious injury or property damage.

Parts

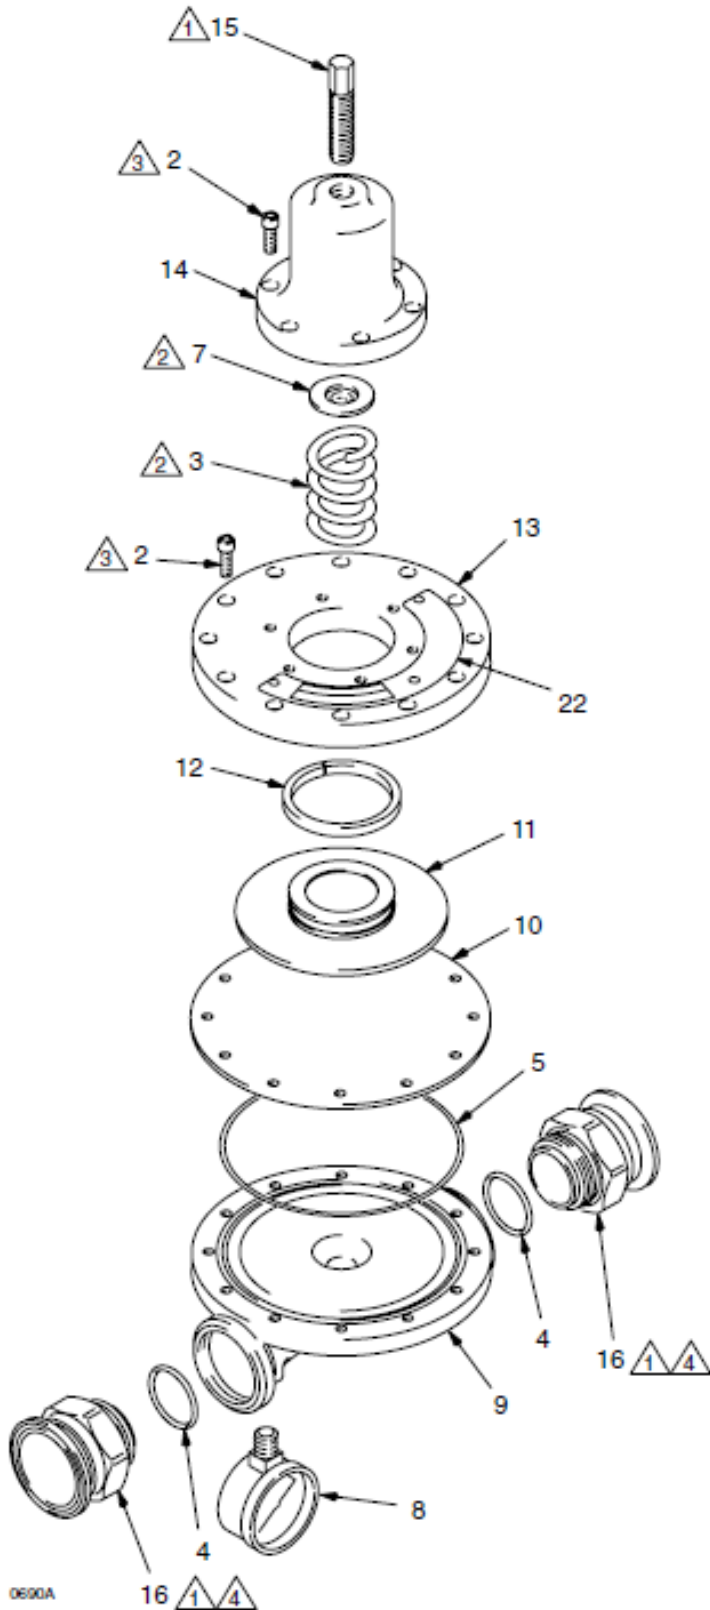

Torque diaphragm cover screws and cap screws in a criss-cross pattern to 70 to 90 in-lb (8.0 to 10.2 N•m).

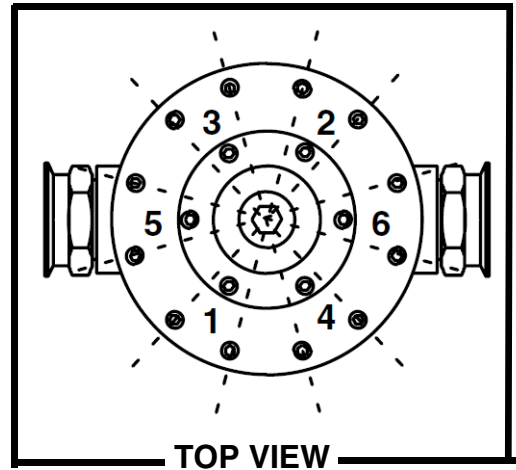

① Lubricate threads with light grease.

② Lubricate with lithium-base grease.

③ See **TOP VIEW**.

④ Torque to 100 to 110 ft-lbs (135 to 150 N•m).

Part No. 223824, Series B

With 2 in. sanitary clamp fittings.

Part No. 224486, Series B

with 1-1/2 inch npt(f) fittings.

Ref.	Part	Description	Qty.
2	112166	SCREW, cap, sch; 1/4–20 x 3/4"	18
3	104144	SPRING, compression	1
4†	107078	O-RING, PTFE	2
5†	111331	O-RING, PTFE	1
7	160033	PLATE, spring	1
8★	187873	GAUGE, 0 to 200 psi (0 to 1.4 MPa, 0 to 14 bar)	1
9	186866	BASE, regulator	1
10†	190849	DIAPHRAGM	1
11	186868	PLATE, diaphragm	1
12†	190857	BEARING	1
13	186870	COVER, diaphragm	1
14	186871	CAP	1
15	186872	SCREW, adjustment	1
16	187004	FITTING, 2" sanitary clamp (for Model 223824 only)	2
	187150	FITTING, 1-1/2" npt(f) (for Model 224486 only)	
22	187223	PLATE, warning	1


★ *Recommended Tool Box spare parts. Keep these spare parts on hand to reduce down time.*

† *These parts are included in repair kit 224437. Note that the kit includes one new-style PTFE O-ring, Part No. 111331 (Ref. 5), and one old-style PTFE O-ring, Part No. 111278.*

 CAUTION
--

<p>Do not lubricate the parts with silicone grease. Silicone grease will contaminate the fluid and blemish the finish of the surface being painted.</p>

Dimensions

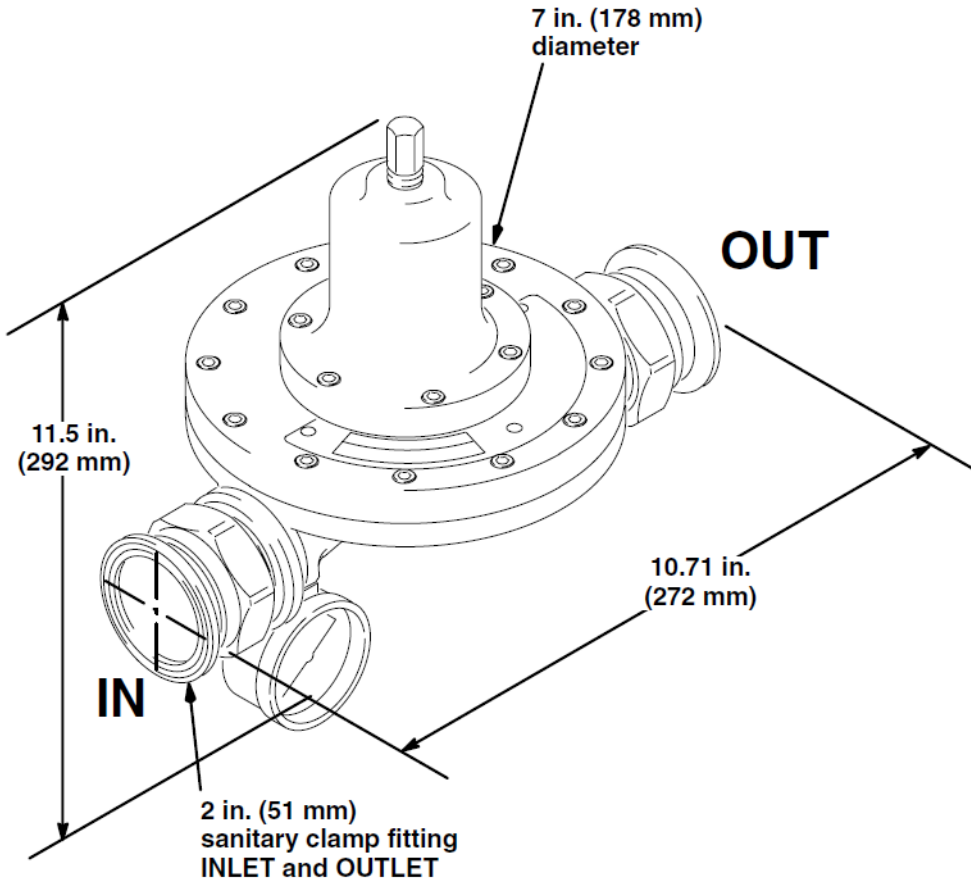

0689A

Technical Specifications

Back Pressure Regulator		
	US	Metric
Maximum Inlet Pressure	300 psi	2.1 MPa, 21 bar
Regulated Pressure Range	15 to 200 psi	0.03 to 1.4 MPa, 0.3 to 14 bar
Inlet/Outlet Sizes		
Inlet and Outlet Size: <i>Model 223824</i>	2 in. sanitary clamp fitting	
Inlet and Outlet Size: <i>Model 224486</i>	1-1/2 in. npt(f) fitting	
Gauge Port Size	1/4 npt(f)	
Materials of Construction		
Wetted materials	301, 304 & 316 Stainless Steel, PTFE	
Flowrate		
Maximum Fluid Flowrate	20 GPM	75 L/min
Weight		
All models	19 lb.	8.55 kg

Graco Standard Warranty

Graco warrants all equipment referenced in this document which is manufactured by Graco and bearing its name to be free from defects in material and workmanship on the date of sale to the original purchaser for use. With the exception of any special, extended, or limited warranty published by Graco, Graco will, for a period of twelve months from the date of sale, repair or replace any part of the equipment determined by Graco to be defective. This warranty applies only when the equipment is installed, operated and maintained in accordance with Graco's written recommendations.

This warranty does not cover, and Graco shall not be liable for general wear and tear, or any malfunction, damage or wear caused by faulty installation, misapplication, abrasion, corrosion, inadequate or improper maintenance, negligence, accident, tampering, or substitution of non-Graco component parts. Nor shall Graco be liable for malfunction, damage or wear caused by the incompatibility of Graco equipment with structures, accessories, equipment or materials not supplied by Graco, or the improper design, manufacture, installation, operation or maintenance of structures, accessories, equipment or materials not supplied by Graco.

This warranty is conditioned upon the prepaid return of the equipment claimed to be defective to an authorized Graco distributor for verification of the claimed defect. If the claimed defect is verified, Graco will repair or replace free of charge any defective parts. The equipment will be returned to the original purchaser transportation prepaid. If inspection of the equipment does not disclose any defect in material or workmanship, repairs will be made at a reasonable charge, which charges may include the costs of parts, labor, and transportation.

THIS WARRANTY IS EXCLUSIVE, AND IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.

Graco's sole obligation and buyer's sole remedy for any breach of warranty shall be as set forth above. The buyer agrees that no other remedy (including, but not limited to, incidental or consequential damages for lost profits, lost sales, injury to person or property, or any other incidental or consequential loss) shall be available. Any action for breach of warranty must be brought within two (2) years of the date of sale.

GRACO MAKES NO WARRANTY, AND DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IN CONNECTION WITH ACCESSORIES, EQUIPMENT, MATERIALS OR COMPONENTS SOLD BUT NOT MANUFACTURED BY GRACO. These items sold, but not manufactured by Graco (such as electric motors, switches, hose, etc.), are subject to the warranty, if any, of their manufacturer. Graco will provide purchaser with reasonable assistance in making any claim for breach of these warranties.

In no event will Graco be liable for indirect, incidental, special or consequential damages resulting from Graco supplying equipment hereunder, or the furnishing, performance, or use of any products or other goods sold hereto, whether due to a breach of contract, breach of warranty, the negligence of Graco, or otherwise.

FOR GRACO CANADA CUSTOMERS

The Parties acknowledge that they have required that the present document, as well as all documents, notices and legal proceedings entered into, given or instituted pursuant hereto or relating directly or indirectly hereto, be drawn up in English. Les parties reconnaissent avoir convenu que la rédaction du présente document sera en Anglais, ainsi que tous documents, avis et procédures judiciaires exécutés, donnés ou intentés, à la suite de ou en rapport, directement ou indirectement, avec les procédures concernées.

Graco Information

For the latest information about Graco products, visit www.graco.com.

For patent information, see www.graco.com/patents.

TO PLACE AN ORDER, contact your Graco distributor or call to identify the nearest distributor.
Phone: 612-623-6921 or Toll Free: 1-800-328-0211 Fax: 612-378-3505

*All written and visual data contained in this document reflects the latest product information available at the time of publication.
Graco reserves the right to make changes at any time without notice.*

Original instructions. This manual contains English. MM 308115

Graco Headquarters: Minneapolis

International Offices: Belgium, China, Japan, Korea

GRACO INC. AND SUBSIDIARIES • P.O. BOX 1441 • MINNEAPOLIS MN 55440-1441 • USA
Copyright 1990, Graco Inc. All Graco manufacturing locations are registered to ISO 9001.

www.graco.com
Revision L, August 2018